



Operating Instructions and Parts Manual

Variable Speed Turret Mill

Model JTM-4VS




JET

427 New Sanford Road
LaVergne, Tennessee 37086
Ph.: 800-274-6848
www.jettools.com

Part No. M-690182
Revision J1 10/2018
Copyright © 2018 JET

Head Assembly

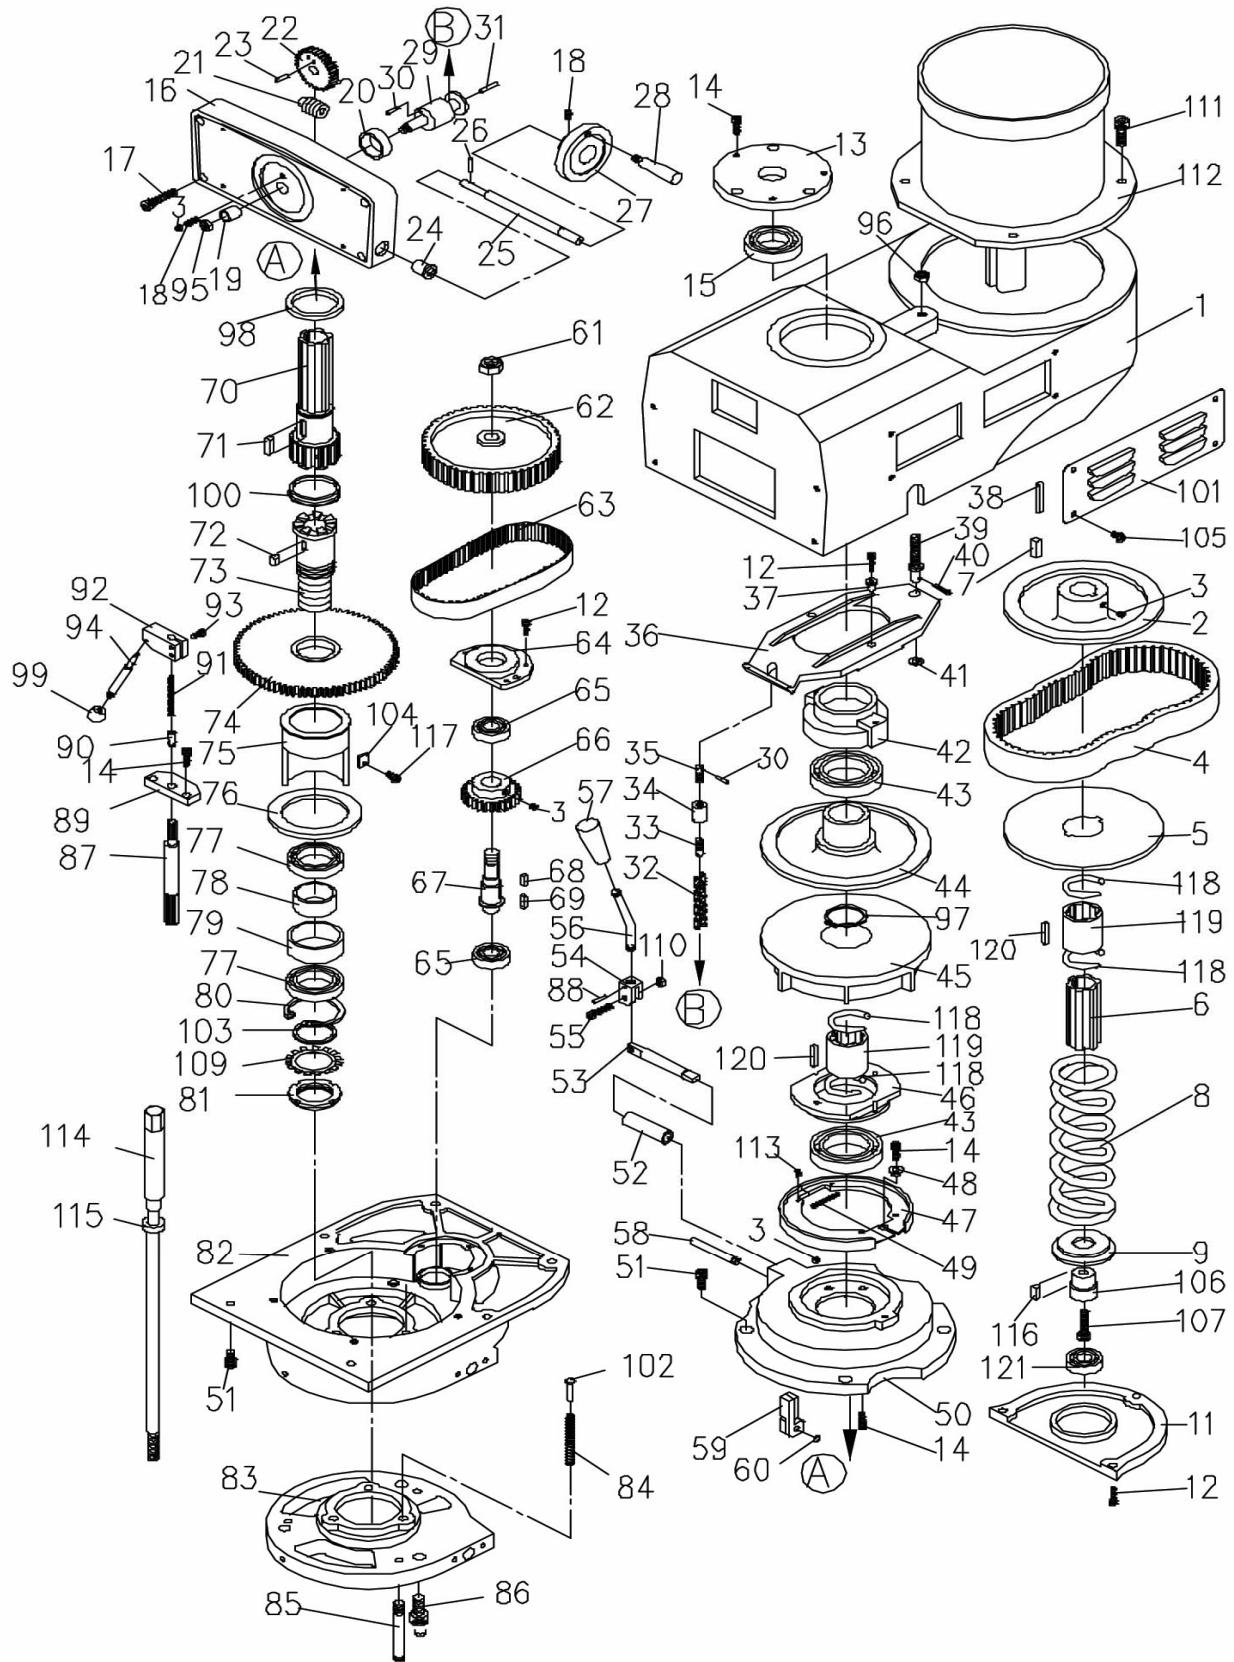


Parts List for Head Assembly

Index No.	Part No.	Description	Size	Qty
	JTM4VS-HAG	Head Assembly with Motor.....		1
	JTM4VS-HAWOM-G	Head Assembly without Motor.....		1
1	VS-001G	Upper Housing.....		1
2	VS-002	Motor Pulley.....		1
	VS-044A	Motor Pulley Bushing (not shown).....		1
3	TS-1503011	Set Screw	M6 x 6.....	4
4	VS-004	Belt.....	.900VC3830.....	1
5	VS-005	Motor Pulley Disk.....		1
6	VS-006	Motor Pulley Shaft.....		1
7	KEY7725	Key.....	.7 x 7 x 25 mm.....	1
8	VS-008	Motor Pulley Spring		1
9	VS-009	Spring Stop Washer		1
11	VS-011AG	Motor Pulley Cover.....		1
12	TS-1502051	Hex Socket Cap Screw.....	.M5 x 20.....	8
13	VS-013	Cover		1
14	TS-1503041	Hex Socket Cap Screw.....	.M6 x 16.....	10
15	BB-6007ZZ	Ball Bearing		1
16	VS-016G	Dial Cover		1
16-1	VS-016-1	Dial With Panel Assembly (not shown)		1
17	TS-1503071	Hex Socket Cap Screw.....	.M6 x 30.....	4
18	TS-1503041	Hex Socket Cap Screw.....	.M6 x 16.....	2
19	VS-019	Bushing.....		1
20	VS-020	Bushing.....		1
21	VS-021	Worm		1
22	VS-022	Worm Gear		1
23	VS-023	Spring Pin5 x 10 mm.....	2
24	VS-024	Bushing.....		2
25	VS-025	Dial Control Shaft		1
26	VS-026	Spring Pin3 x 12 mm.....	1
27	VS-027	Dial Wheel		1
28	VS-028	Wheel Handle		1
29	VS-029	Shaft		1
30	VS-030	Spring Pin4 x 16 mm.....	2
31	VS-031	Spring Pin3 x 25 mm.....	1
32	VS-032	Speed Change Chain		1
33	VS-033	Adjustment Stud		1
34	VS-034	Sleeve Nut		1
35	VS-035	Adjustment Stud		1
36	VS-036	Tilter		1
37	VS-037	Bushing		2
38	KEY6645	Key6 x 6 x 45 mm.....	1
39	VS-039	Regulating Screw		1
40	VS-040	Spring Pin3/32" x 3/4"	1
41	VS-041	Washer		1
42	VS-042	Support		1
43	BB-6010VV	Ball Bearing		2
44	VS-044	Driven Pulley Assembly (s/n:xxx1944 & lower).....		1
	VS-044N	Driven Pulley Assembly (s/n:xxx1945 & higher)		1
45	VS-045	Steady Pulley (s/n:xxx1944 & lower).....		1
	VS-045N	Steady Pulley (s/n:xxx1945 & higher)		1
46	VS-046	Bearing Cover		1
47	VS-047	Brake Lining		1
48	VS-048	Lock Screw		1
49	VS-049	Brake Spring		2
50	VS-050G	Lower Housing Cover		1
51	TS-1504031	Hex Socket Cap Screw.....	.M8 x 20.....	4
52	VS-052	Brake Shaft Sleeve		1

Index No.	Part No.	Description	Size	Qty
53	VS-053	Brake Lock Shaft1
54	VS-054	Brake Lock Block1
55	TS-1503061	Hex Socket Cap Screw.....	M6 x 25.....	.1
56	VS-056	Brake Lock Handle1
57	VS-057	Plastic Ball2
58	VS-058	Brake Finger Pivot Stud.....		.1
59	VS-059	Brake Stud2
60	VS-060	Snap Ring	S-82
61	TS-0561072	Nut5/8"-18 UNF1
62	VS-062	Timing Belt Pulley1
63	VB-225L100	Timing Belt.....	.225L1001
64	VS-064	Bearing Retainer.....		.1
65	BB-6203ZZ	Ball Bearing2
66	VS-066	Bull Gear1
67	VS-067	Counter Shaft1
68	VS-068	Key5 x 5 x 15 mm1
69	VS-069	Key5 x 5 x 18 mm1
70	VS-070	Spindle Pulley Hub1
71	VS-071	Key8 x 7 x 24 mm1
72	VS-072	Key8 x 7 x 12 mm1
73	VS-073	Spindle Gear Hub1
74	VS-074	Spindle Gear Assembly1
75	VS-075	Rack Cup1
76	VS-076	Washer1
77	BB-6908ZZ	Ball Bearing2
78	VS-078	Bearing Washer1
79	VS-079	Bearing Washer1
80	VS-080	Snap Ring1
81	VS-081	Nut1
82	VS-082G	Lower Housing1
83	VS-083G	Fixed Clutch Bracket1
84	VS-084	Spring1
85	VS-085	Stud3
86	TS-1506021	Hex Socket Cap Screw.....	M12 x 25.....	.3
87	VS-087	Gear Shift Pinion1
88	VS-088	Pin1
89	VS-089	Detent Plate1
90	VS-090	Detent Washer1
91	VS-091	Spring1
92	VS-092	Pinion Block1
93	TS-1503011	Hex Socket Cap Screw.....	M5 x 142
94	VS-094	Pinion Crank1
95	VS-095	Cap Nut1
96	TS-0561031	Hex Nut3/8"1
97	VS-097	Snap Ring1
98	VS-098	Wave Washer1
99	VS-099	Plastic Ball1
100	VS-100	Snap Ring1
101	VS-101B	Cover2
102	VS-102	Spring Shaft3
103	VS-103	Washer1
104	VS-104	Copper Washer2
105	VS-105	Screw1/4" x 3/8"8
106	VS-107	Shaft1
107	TS-1504061	Hex Socket Cap Screw.....	M8 x 301
109	VS-109	Lock Washer1
110	TS-1540041	Hex Nut	M61
111	TS-0209051	Hex Socket Cap Screw.....	.3/8" x 1"4
112	VS-000G	Motor3HP 3PH1
	JTM4VS-112G	Motor2HP 1PH1

Index No.	Part No.	Description	Size	Qty
113.....	VS-113.....	Oval Head Screw.....	.1/8" x 1/4"	.4
114.....	JTM1-001VS.....	Draw Bar.....		.1
115.....	JTM4VS-A002B.....	Draw Bar Washer1
116.....	VS-116.....	Key.....		.1
117.....	VS-117.....	Oval Head Screw.....	.3/16" x 1/2"	.1
118.....	VS-007.....	Snap Ring.....		.4
119.....	VS-005A	Plastic Sleeve2
120.....	VS-120.....	Key.....	.6 x 4 x 32 mm.....	.2
121.....	BB-6206ZZ	Ball Bearing	6206ZZ1
.....	VS-000A	Forward-Reverse Switch, 3 Phase (not shown)1
.....	JTM2-598CP	Forward-Reverse Switch, 1 Phase (not shown)1
.....	JTM1-598D.....	Switch Box (not shown)1
.....	JTM1-598B	Switch Knob (not shown)1
.....	LK-041B.....	Switch Bracket (not shown)1

Spindle Assembly

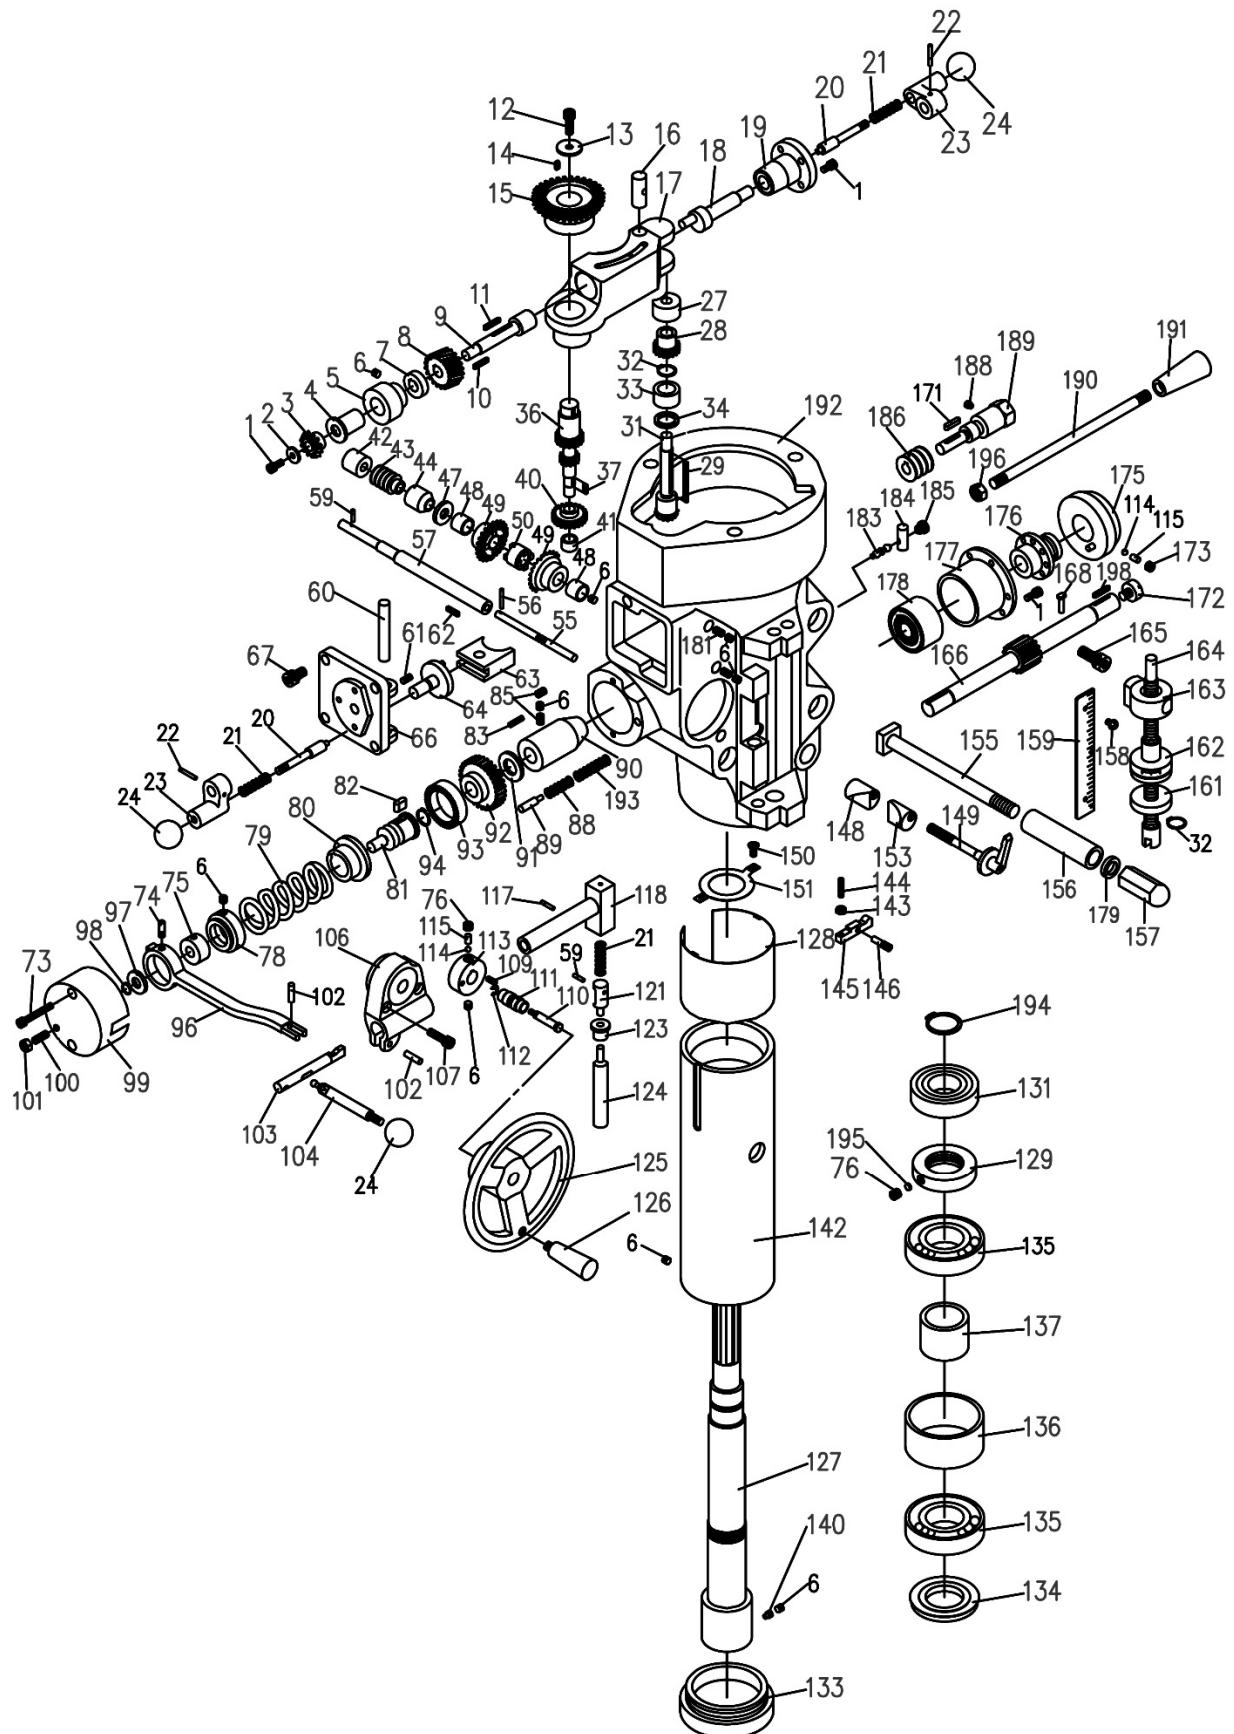


Parts List for Spindle Assembly

Index No.	Part No.	Description	Size	Qty
1	TS-1533042	Screw	M5 x 10	.6
2	HA-002	Bevel Pinion Washer		.1
3	HA-003	Feed Gear		.1
4	LA-161	Shaft Sleeve		.1
5	LA-162	Worm Cradle Bushing		.1
6	TS-1523011	Set Screw	M6 x 6	.9
7	LA-163	Worm Gear Spacer		.1
8	LA-164	Feed Drive Worm Gear		.1
9	LA-165	Worm Gear Shaft		.1
10	HA-010	Worm Shaft Key	.3 x 3 x 8 mm	.1
11	HA-011	Key	.3 x 3 x 20 mm	.1
12	HA-012	Locknut	M6 x 16	.1
13	HA-013	Washer		.1
14	HA-014	Cluster Gear Key	.3 x 3 x 8.5 mm	.1
15	LA-154	Feed Reverse Bevel Gear		.1
16	LA-167	Feed Engage Pin		.1
17	LA-166	Worm Gear Cradle		.1
18	LA-033	Worm Gear Throw-Out		.1
19	LA-002	Shift Sleeve		.1
20	LA-004	Plunger		.2
21	LA-005	Spring		.3
22	HA-022	Spring Pin	.3 x 22 mm	.2
23	LA-003	Shift Crank		.2
24	LA-006	Plastic Ball		.3
27	LA-147	Upper Bushing		.1
28	LA-144	Cluster Gear Assembly		.1
29	HA-029	Cluster Gear Key	.3 x 3 x 45 mm	.1
31	LA-143	Cluster Gear Shaft		.1
32	HA-032	Snap Ring		.2
33	LA-142	Bevel Gear Bushing		.1
34	LA-141	Thrust Spacer		.1
36	LA-156	Feed Drive Gear		.1
37	HA-037	Key	.3 x 3 x 10 mm	.1
40	LA-157	Feed Drive Gear		.1
41	HA-041	Needle Bearing		.1
42	LA-168	Bushing		.1
43	LA-139	Worm		.1
44	LA-138	Feed Worm Shaft Bushing		.1
47	LA-137	Bevel Gear Thrust Spacer		.1
48	LA-134	Bushing		.2
49	LA-135	Feed Reverse Bevel Gear		.2
50	LA-136	Feed Reverse Clutch		.1
55	LA-132	Reverse Clutch Rod		.1
56	HA-056	Spring Pin	.3 x 20 mm	.1
57	LA-133	Feed Worm Shaft		.1
59	HA-059	Spring Pin	.3 x 12 mm	.2
60	LA-150	Feed Shift Rod		.1
61	TS-1522031	Set Screw	M5 x 10	.1
62	HA-062	Key	.3 x 3 x 15 mm	.1
63	LA-149	Feed Gear Shift Fork		.1
64	LA-151	Cluster Gear Shift Crank		.1
66	LA-148	Cluster Gear Cover		.1
67	TS-1504011	Hex Socket Cap Screw	M8 x 10	.4
73	TS-1502081	Hex Socket Cap Screw	M5 x 35	.2
74	LA-081	Clutch Ring Pin		.2
75	LA-080	Clutch Ring		.1
76	TS-1524011	Set Screw	M8 x 8	.1

Index No.	Part No.	Description	Size	Qty
78	LA-082	Overload Clutch Lockout		1
79	LA-083	Safety Clutch Spring		1
80	LA-084	Overload Clutch	.46T	1
	LA-084N	Overload Clutch (serial # 6100913 and up)	.50T	1
81	LA-085	Overload Clutch Sleeve		1
82	LA-090	Key		1
83	TS-1532052	Pan Head Machine Screw	M4 x 16	3
85	TS-1523031	Set Screw	M6 x 10	2
88	LA-169	Spring		1
89	LA-089	Spring Plunger		1
90	LA-123	Pinion Shaft Bushing		1
91	LA-122	Spacer		1
92	LA-087	Overload Clutch Worm Gear		1
93	LA-086	Overload Clutch Ring	.46T	1
	LA-086N	Overload Clutch Ring (serial # 6100913 and up)	.50T	1
94	HA-094	Snap Ring		1
96	LA-079	Trip Lever		1
97	LA-078	Washer		1
98	HA-098	Snap Ring		1
99	LA-076	Clutch Arm Cover		1
100	TS-1523051	Set Screw	M6 x 10	1
101	HA-101	Locknut		1
102	LA-077	Pin		3
103	LA-091	Cam Rod		1
104	LA-100	Trip Handle		1
106	LA-092	Feed Trip Bracket		1
107	TS-1503051	Hex Socket Cap Screw	M6 x 20	2
109	HA-109	Key	.3 x 3 x10 mm	1
110	LA-130	Feed Reverse Knob Stud		1
111	LA-131	Reverse Knob		1
112	HA-112	Snap Ring		1
113	LA-129	Handwheel Clutch		1
114	SB-3/16	Steel Ball	.3/16"	2
115	HA-115	Spring		2
117	HA-117	Spring Pin		1
118	LA-093	Cam Rod Sleeve Assembly		1
121	LA-095	Trip Plunger		1
123	LA-121	Bushing		1
124	LA-097	Feed Trip Plunger		1
125	LA-126	Handwheel (chrome)		1
	LA-126-BR	Handwheel (brushed finish)		1
126	LA-125	Handle (chrome)		1
	LA-125-BR	Handle (brushed finish)		1
127	LA-050A	Spindle		1
128	LA-060	Quill Skirt		1
129	LA-048	Lock Nut		1
131	BB-6206ZZ	Ball Bearing		1
133	LA-051	Nose Piece		1
134	LA-052	Spindle Shield		1
135	BB-7207C	Ball Bearing		2
136	LA-054	Bearing Spacer (large)		1
137	LA-053	Bearing Spacer (small)		1
140	LA-172	Set Screw		1
142	LA-058	Quill		1
143	TS-154021	Hex Nut	M4	1
144	TS-1521071	Set Screw	M4 x 20	1
145	LA-098	Feed Trip Lever		1
146	LA-099	Trip Lever Pin		1
148	LA-111	Quill Lock Sleeve		1

Index No.	Part No.	Description	Size	Qty
149.....	LA-109.....	Lock Handle (chrome).....		.1
	LA-109-BR.....	Lock Handle (brushed finish).....		.1
150.....	HA-150.....	Screw.....	M5 x 10.....	.2
151.....	LA-057.....	Felt Washer1
153.....	LA-110.....	Quill Lock Sleeve.....		.1
155.....	LA-043.....	T-Bolt Assembly4
156.....	LA-046.....	Spacer4
157.....	LA-040.....	Lock Nut4
158.....	HA-158.....	Screw.....	M4 x 5.....	.2
159.....	LA-118.....	Micrometer Scale.....		.1
161.....	LA-115.....	Quill Micro-Stop Nut1
162.....	LA-116.....	Micrometer Nut1
163.....	LA-117.....	Quill Stop Knob.....		.1
164.....	LA-112.....	Quill Micro-Screw1
165.....	LA-165A.....	Screw.....	.3/8"-24UNF x 3/4".....	.1
166.....	LA-101.....	Quill Pinion Shaft.....		.1
168.....	LA-101A.....	Pin.....		.1
171.....	HA-171.....	Key.....	.4x4x18 mm.....	.1
172.....	LA-107.....	Pinion Shaft Hub.....		.1
173.....	TS-0270021.....	Set Screw5/16" x 1/4"1
175.....	LA-106.....	Hub1
176.....	LA-104.....	Hub Sleeve1
177.....	LA-103.....	Spring Cover.....		.1
178.....	LA-102.....	Clock Spring1
	LA-102/3.....	Clock Spring Assembly.....		.1
179.....	TS-0680061.....	Washer1/2"1
181.....	TS-1523011.....	Set Screw	M6 x 6.....	.2
183.....	LA-113.....	Lever1
184.....	LA-114.....	Plunger1
185.....	LA-124.....	Screw1
186.....	LA-018.....	Worm Gear1
188.....	LA-173.....	Set Screw1
189.....	LA-019.....	Worm Shaft1
190.....	LA-105.....	Handle1
191.....	LB-017.....	Plastic Ball1
192.....	LA-016G.....	Quill Housing1
193.....	HA-193.....	Spring10 x 20 mm.....	.1
194.....	RINS30.....	Snap Ring1
195.....	HB1291.....	Lock Washer1
196.....	TS-1524011.....	Set Screw	M8 x 8.....	.1
197.....	TS-0561031.....	Hex Nut3/8"1
198.....	KF2R3320.....	Key3x3x20mm1
	LA-166A.....	Worm Gear Cradle Assembly (index # 1-17,36,37,40)1

Base Assembly

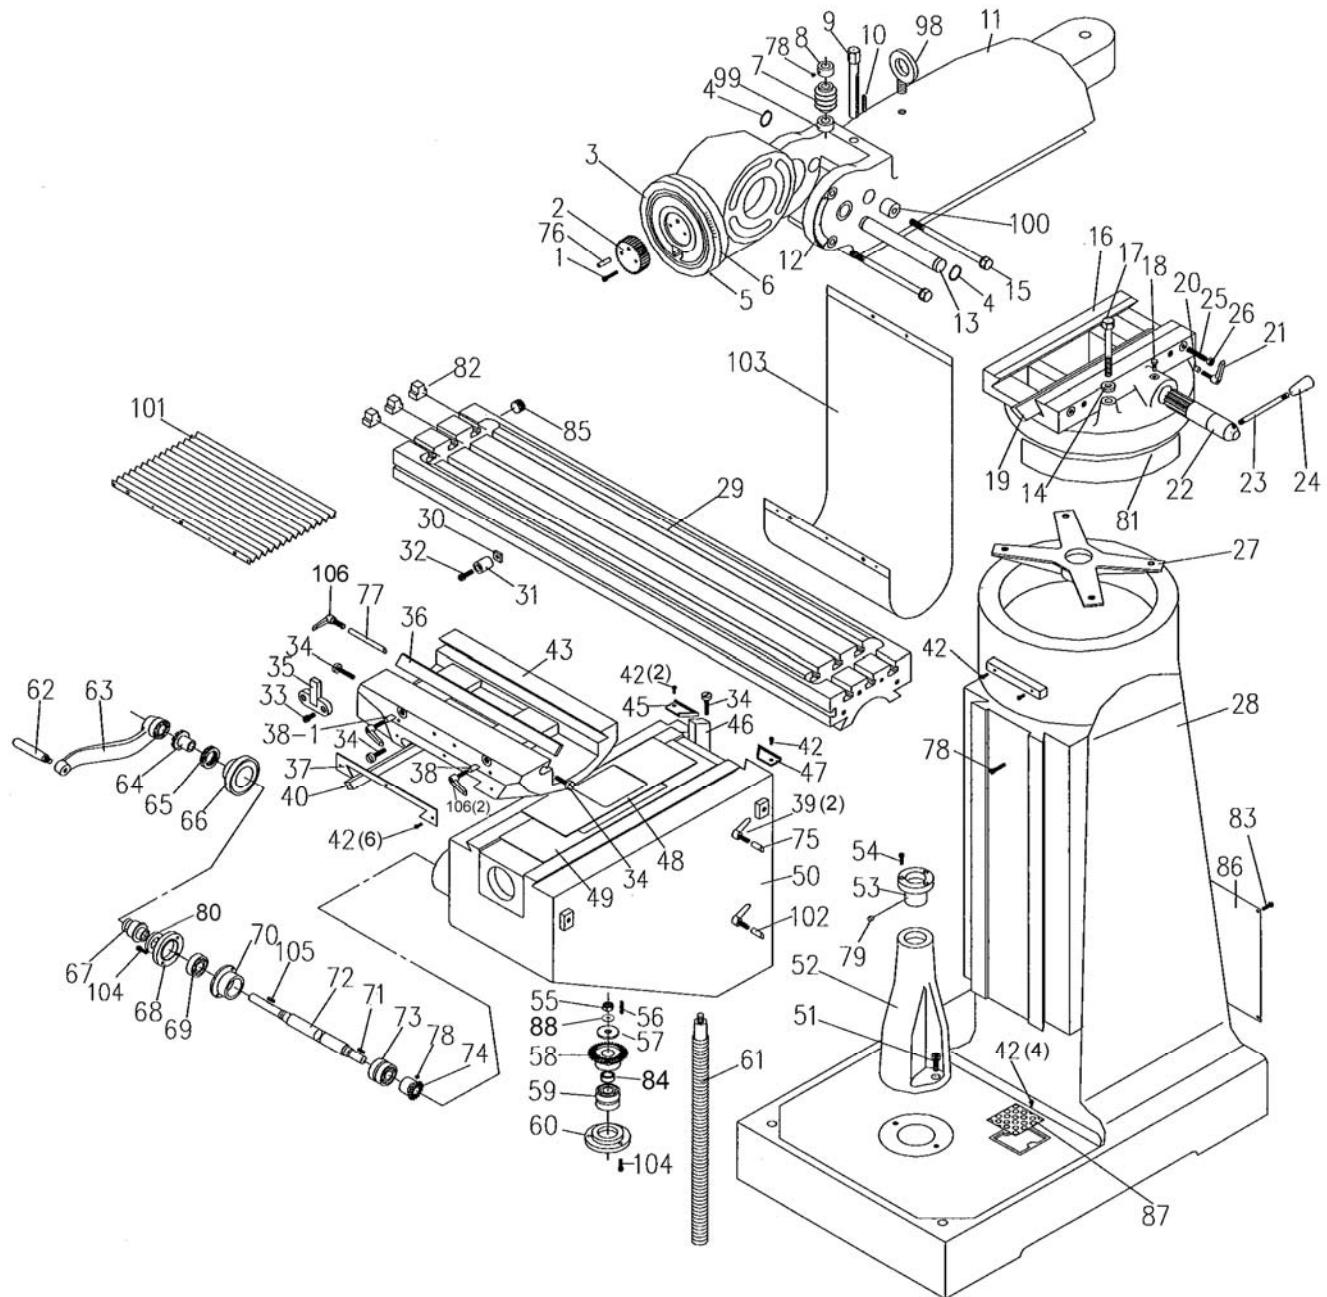


Parts List for Base Assembly

Index No.	Part No.	Description	Size	Qty
1	LB-001	Set Screw	M6 x30.....	.2
2	LB-023	Gear.....		.1
3	LB-020G	Ram Adapter1
4	LB-004	Snap Ring.....	S-28.....	.2
5	LB-005	Rivet.....		.5
6	LB-027	Adapter Scale1
7	LB-035	Worm1
8	LB-036	Worm Thrust Washer1
9	LB-034	Shaft1
10	LB-100	Key5 x 5 x 40 mm.....	.1
11	MB-026G	Ram1
12	LB-032	Angle Plate1
13	LB-028	Adapter Pivot Stud.....		.1
14	LB-031	Washer4
15	LB-030	Adapter Locking Bolt3
16	MB-009G	Turret1
	MB-00B	Turret Scale (not shown)1
17	LB-030	Lock Bolt.....		.4
18	LB-041	Ram Pinion Screw1
19	LB-011	Ram/Turret Gib1
20	LS-005E	Lock Plunger.....		.2
21	LB-014	Ram Lock Bolt Handle2
22	LB-015	Ram Pinion1
23	LB-016	Ram Pinion Handle Rod1
24	LB-017	Black Plastic Ball1
25	TS-0211131	Set Screw3/8" x 2"	.2
26	TS-0561031	Hex Nut.....	.3/8"	.2
27	MB-008	Spider1
28	MB-000AG	Column1
29	MT000B	Table.....		.1
30	LT-027	Stop Nut.....		.2
31	LT-028	Table Stop2
32	TS-1504071	Hex Socket Cap Screw.....	M8 x 35.....	.2
33	TS-1504031	Hex Socket Cap Screw.....	M8 x 16.....	.2
34	LK-002	Gib Adjusting Screw6
35	LS-003	Table Stop Bracket1
36	LS-008	Saddle/Table Gib.....		.1
37	LS-013	Felt Wiper2
38	LS-005R	Table Lock Plunger – R16mm1
38-1	LS-005L	Table Lock Plunger – L13mm1
39	LS-011	Knee Lock Handle2
40	LS-001	Saddle/Knee Gib1
42	LS-042	Screw3/16"	.20
43	MS-000G	Saddle1
45	LS-016A	Felt (left)1
46	LK-001	Knee/Column Gib1
47	LS-016B	Knee/Wiper Felt (right)1
48	LK-007	Upper Chip Guard1
49	LK-006	Lower Chip Guard1
50	MK-000G	Knee1
51	TS-1505031	Hex Socket Cap Screw.....	M10 x 25.....	.2
52	MK-012G	Elevating Screw Housing1
53	MK-014	Elevating Screw Nut1
54	TS-1503041	Hex Socket Cap Screw.....	M6 x 16.....	.8
55	TS-0561052	Hex Nut.....	1/2-20UNF	.1
56	LK-058	Key4 x 4 x 30 mm.....	.1

Index No.	Part No.	Description	Size	Qty
57	LK-022	Washer1
58	MK-021	Bevel Gear.....		.1
59	BB-6306ZZ	Ball Bearing2
60	MK-019	Bearing Retainer Ring1
61	MK-016	Elevating Screw.....		.1
62	LK-037	Handle (chrome)1
	LK-037-BR	Handle (brushed finish)1
63	LK-036	Elevating Crank1
64	LK-035	Clutch Insert1
65	LK-034	Dial Lock Nut1
66	LK-033	Dial.....		.1
67	LK-032	Dial Holder1
68	LK-030	Bearing Retainer Ring1
69	BB-6204ZZ	Ball Bearing1
70	LK-029	Bearing Cap1
71	LK-075	Key.....	.4 x 4 x 18 mm.	.2
72	MK-028	Elevating Shaft1
73	BB-6204ZZ	Ball Bearing2
74	MK-024	Bevel Pinion.....		.1
75	LK-003B	Plunger32mm1
76	LK-081	Spring Pin8 x 30 mm.	.1
77	LS-010A	Saddle Lock Plunger116mm1
78	TS-1515001	Hex Socket Cap Screw.....	.M8 x 12.....	.1
79	JTM4VS-B79	Grease Nipple.....	.1/8"PT.....	.1
80	JTM4VS-B80	Spacer1
81	JTM4VS-B81	Turret Scale1
82	JTM4VS-B82	Rubber T-Nut.....		.6
83	MB-090	Screw.....	.1/4" x 3/8"	.4
84	MK-038	Bushing.....		.1
85	VM-140	Oil Plug3/8" PT.....	.2
86	MB-004	Cover1
87	MB-041	Strainer Screen.....		.2
88	JTM4VS-B88	Lock Washer.....		.1
98	RIBW34	Hoisting Ring1
99	LB-036	Worm Thrust Washer1
100	LB-033	Thrust Washer1
101	LS-018	Pleated Way Cover.....		.1
102	LK-003C	Lock Plunger.....	.35mm1
103	LS-017C	Flat Way Cover1
104	TS-1503051	Hex Socket Cap Screw.....	.M6 x 20.....	.6
105	KEY3320	Key.....	.3 x 3 x 20 mm.	.1
107	LS-006B	Saddle Ratcheting Lever (chrome).....		.3
	LS-006B-BR	Saddle Ratcheting Lever (brushed finish)3
	JTM4VS-TB	Tool Box Kit Complete (not shown)1
	LC051	Plastic Electric Cover (not shown)1
	LC051A	Plastic Electric Cover Assembly (not shown)1


(Includes switch wire, cover, terminal bracket, power wire, retainer)

Lead Screw Assembly

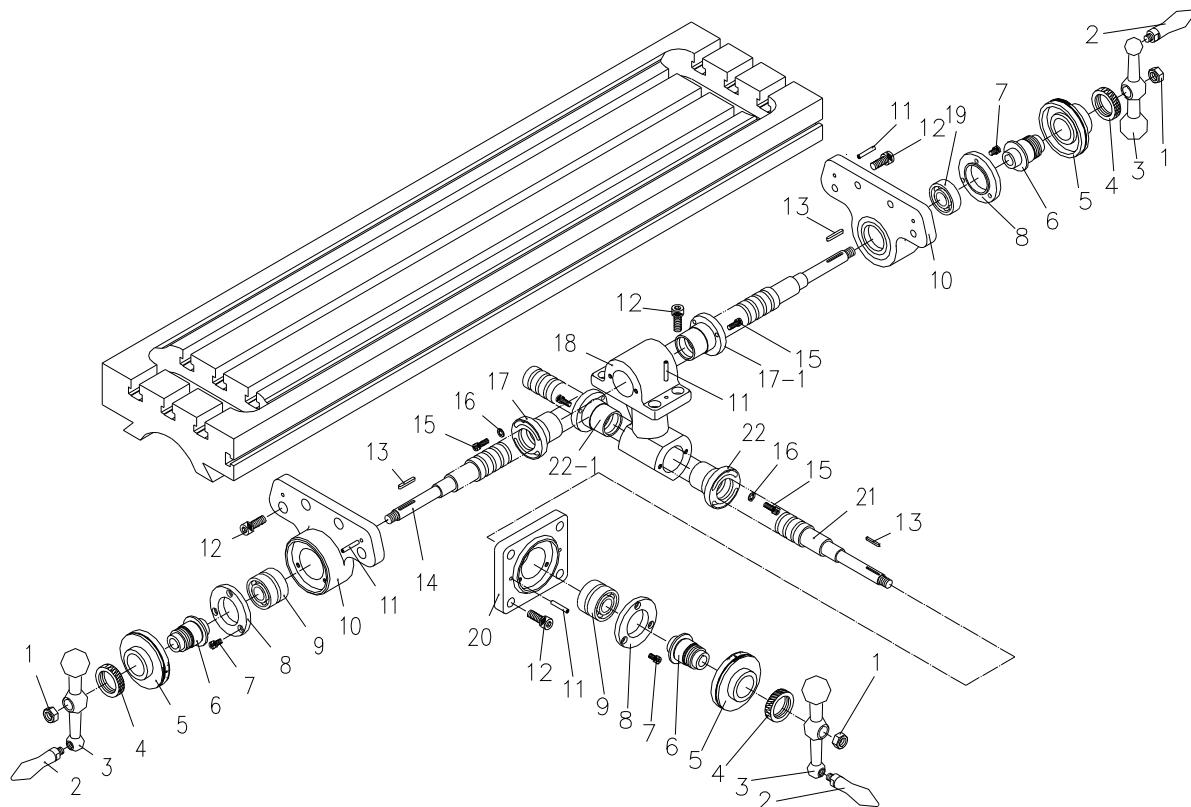

Index No.	Part No.	Description	Size	Qty
1	TS-0571052	Jam Nut	1/2-20UNF	3
2	LT-010C	Handle		3
	LT-010C-CHR	Chrome Surface Handle		3
3	LT-010B	Ball Crank		3
	LT-010BSP-CHR	Clutch Ball Crank (for powerfeed only)	chrome surface	3
	LT-010BSP	Clutch Ball Crank (for powerfeed only)		3
4	LT-009	Dial Lock Nut		3
5	LT-008	Dial		3
6	LT-007	Dial Holder		3
7	TS-150301	Hex Socket Cap Screw	M6 x 12	9
8	LT-005	Bearing Retainer Ring		3
9	BB-6204ZZ	Ball Bearing		3
10	LT-002	Bearing Bracket		2
11	LS-009	Spring Pin	5 x 30 mm	8
12	TS-1505031	Hex Socket Cap Screw	M10 x 25	16
13	LS-014A	Key	3 x 3 x 25 mm	3
14	MT-015D	Leadscrew		1
15	TS-1503041	Hex Socket Cap Screw	M6 x 16	10
16	TS-1550051	Washer	M7	4
17	MT-019B	Feed Screw Nut (set of 2; includes index # 17-1)		1
18	MT-017	Feed Nut Bracket		1
19	BB-6204ZZ	Ball Bearing		1
20	MT-025	Cross Feed Bearing Bracket		1
21	MT-024	Cross Feed Screw		1
22	MT-022	Cross Feed Nut (set of 2; includes index # 17-22)		1

One-Shot Lubrication System

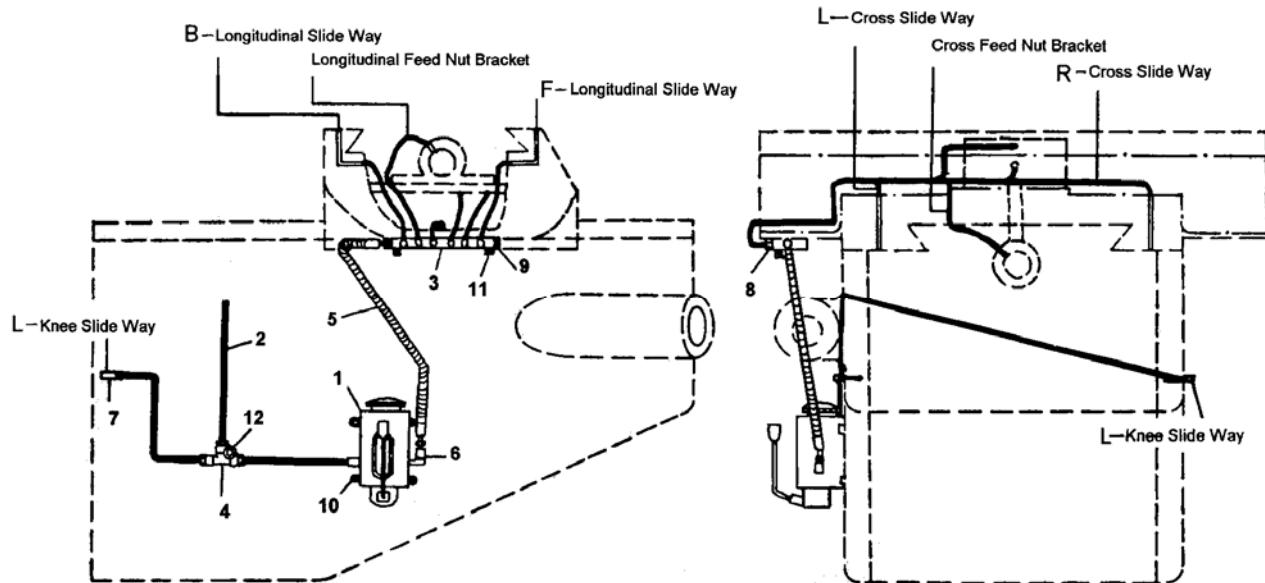

Index No.	Part No.	Description	Size	Qty
	LT-8-A	Hand Oiler Assembly (includes index #1,1A,4,5,9)		.1
1	LT-8	Hand Oiler		.1
1A	LT-8-SG	Hand Oiler Sight Glass (w/gasket)		.1
2	ALMP-04	Aluminum Pipe	.3.5M	.1
	ALMP-04-VS	Oil Line Set w/ Fittings		.1
3	DB-4	Oil Regulating Distributor		.1
4	PKD-4	T-Joint		.1
5	FHC-404	Flexible Steel Tube		.1
6	PH-1-1/PB-4	Check Joint		.2
7	PH-4	Elbow Joint		.2
8	PA-4/PB-4	Straight Joint		.14
9	PG-004	Union		.1
10	JTM4VS-BUTW1458	Screw		.4
11	TS-1503061	Hex Socket Cap Screw	M6 x 25	.2
12	TS-1502061	Hex Socket Cap Screw	M5 x 25	.1



427 New Sanford Road
LaVergne, Tennessee 37086
Phone: 800-274-6848
www.jettools.com