


Breakdown for the SR-1650M Slip Roll

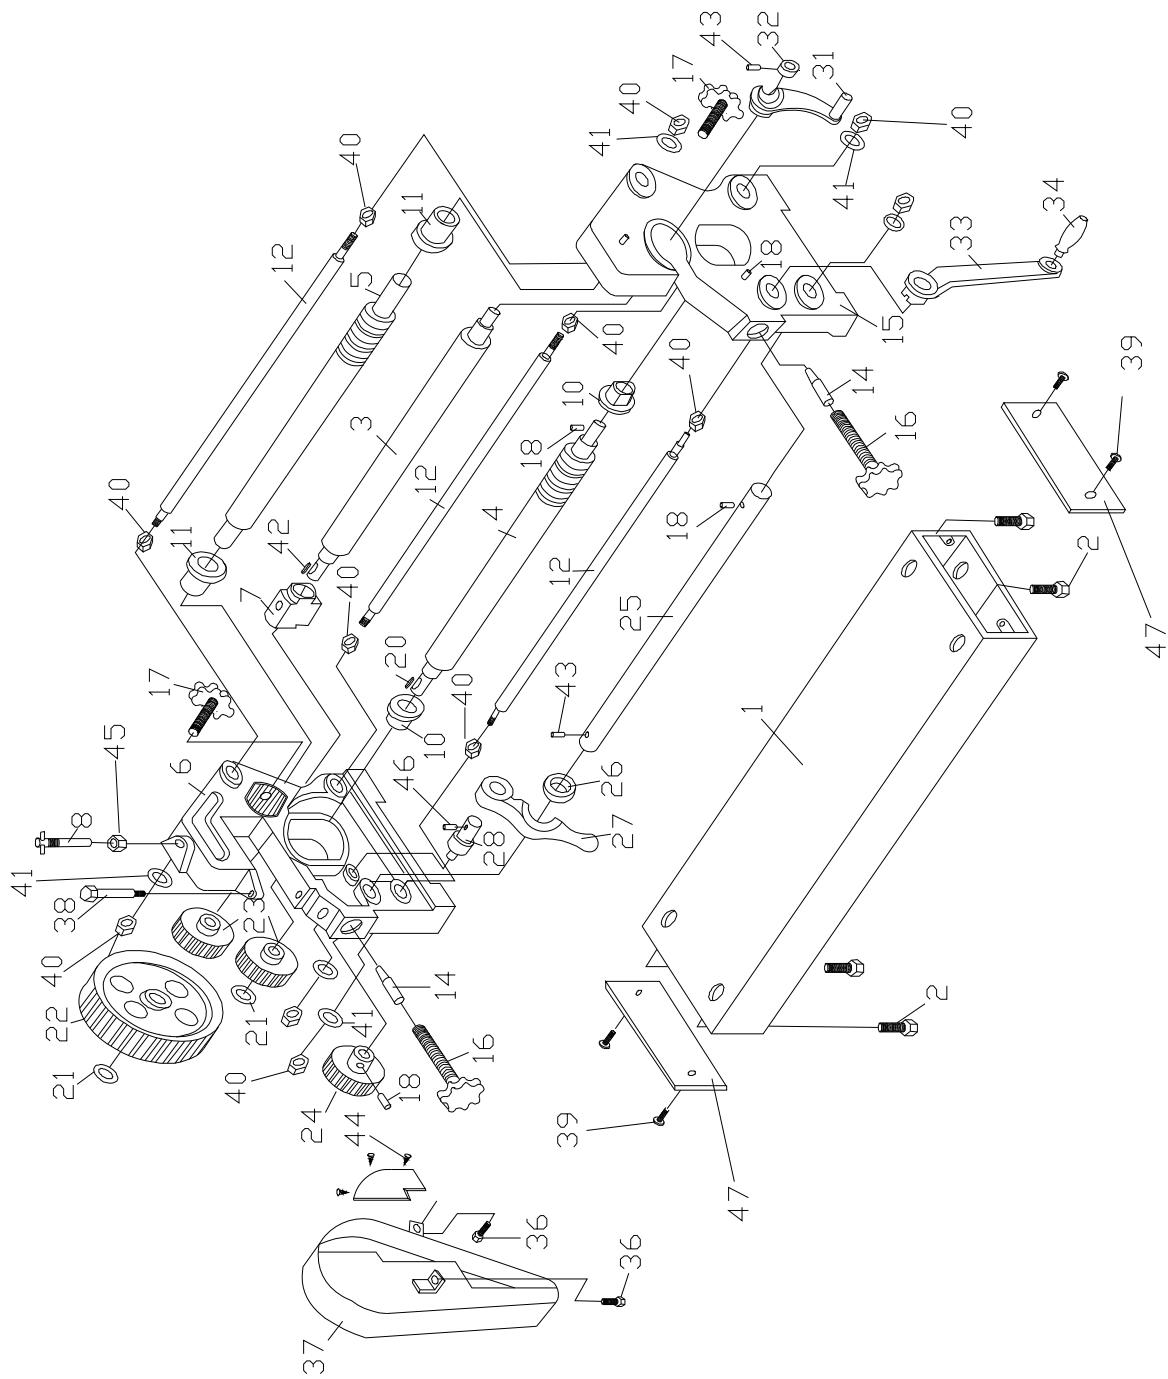

Parts List for the SR-1650M Slip Roll

Index	Part No.	Description	Size	Quantity
1.....	SR1650N-1.....	Base Assembly.....		1
2.....	SR1650N-2.....	Hex Cap Screw	M16x25.....	4
3.....	SR1650N-3.....	Upper Roll		1
4.....	SR1650N-4.....	Lower Roll		1
5.....	SR1650N-5.....	Rear Roll		1
6.....	SR1650N-6.....	Left Support.....		1
7.....	SR1650N-7.....	Left Upper Roll Seat		1
8.....	SR1650N-8.....	Set Rod Assembly		1
10.....	SR1650N-10.....	Bushing		2
11.....	SR1650N-11.....	Bushing		2
12.....	SR1650N-12.....	Set Rod		3
14.....	SR1650N-14.....	Pin		2
15.....	SR1650N-15.....	Right Support		1
16.....	SR1650N-16.....	Knob		2
17.....	SR1650N-17.....	Knob		2
18.....	SR1650N-18.....	Spring Pin.....	5x40.....	5
20.....	SR1650N-20.....	Key	8x8x30.....	2
21.....	SR1650N-21.....	C-Ring	28	2
22.....	SR1650N-22.....	Gear		1
23.....	SR1650N-23.....	Gear		2
24.....	SR1650N-24.....	Gear		1
25.....	SR1650N-25.....	Rod		1
26.....	SR1650N-26.....	Bushing		1
27.....	SR1650N-27.....	Stop		1
28.....	SR1650N-28.....	Shaft Assembly		1
31.....	SR1650N-31.....	Clamp Handle.....		1
32.....	SR1650N-32.....	Bushing		1
33.....	SR1650N-33.....	Arm		1
34.....	SR1650N-34.....	Handle		1
36.....	SR1650N-36.....	Hex Cap Screw	M8x20.....	2
37.....	SR1650N-37.....	Gear Cover Assembly		1
38.....	SR1650N-38.....	Hex Socket Bolt	M12x130.....	1
39.....	SR1650N-39.....	Flat Head Screw	M4x5.....	4
40.....	SR1650N-40.....	Hex Nut	M16	12
41.....	SR1650N-41.....	Washer	M16	6
42.....	SR1650N-42.....	Key	8x8x60.....	1
43.....	SR1650N-43.....	Set Screw	M8x10.....	1
44.....	SR1650N-44.....	Tapping Screw	ST4.3x9.....	8
45.....	SR1650N-45.....	Hex Nut	M20	1
46.....	SR1650N-46.....	Cotter Pin	3.2x30.....	1
47.....	SR1650N-47.....	Plate		2
.....	SR1650M-ID.....	ID Label (not shown).....		1
.....	SR1650N-W.....	Warning Label (not shown)		1
.....	SR1650N-J.....	JET Label (not shown)		1