



Replacement Parts

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	Cannot Furnish	Table	41	422-01-071-0001	Front Gib Pin
2	422-01-055-0001	Front Guide Rail	42	422-01-052-0002	Front Gib
3	901-09-011-2451	Shoulder Scr.	43	920-51-991-6563	Bearing w/Spacer
4	422-01-055-0002	Rear Guide Rail	44	422-01-052-0002	Front Gib
5	Cannot Furnish	Rip Fence Body	45	951-01-041-3989	Height Indicator
6	901-01-060-0605	5/16-18 X 1/2" Hex Hd. Cap Scr.	46	901-04-020-0306	1/4-20 X 3/4" Sq. Hd. Set Scr.
7	904-01-010-1604	11/32 X 11/16 X 1/16" Washer	47	Cannot Furnish	Scale
8	901-02-010-0558	#8-32 X 1/4" Rd. Hd. Scr.	48	901-04-020-0305	1/4-20 X 1" Sq. Hd. Scr.
9	951-01-010-7802	Indicator Point	49	931-03-011-4097	Star Wheel
10	931-02-990-3614	Hand Knob	50	904-01-031-2925	Steel Washer
11	931-02-990-3612	Hand Knob	51	422-01-108-0004	Front Gib Bolt
12	422-02-084-0004	Fence Block	52	Cannot Furnish	Pinion Shaft
13	901-04-120-0157	1/4-24 X 1/2" Set Scr.	53	904-07-010-5575	Fiber Washer
14	422-01-027-0003	Lock Plate	54	422-01-404-0002	Collar, Incl:
15	931-02-051-4763	Hand Knob	55	901-04-190-0225	5/16-18 X 1/4" Set Scr.
16	928-01-021-4132	Spring	56	930-05-991-4787	Ball Crank, Inc;
17	902-01-120-1034	1/4-20 Hex Nut	57	901-04-190-0201	5/16-18 X 5/16" Set Scr.
18	422-01-110-0004	Rear Support Button	58	928-01-021-4125	Spring
19	422-01-327-0007	Clamp	59	Cannot Furnish	Clamp Shaft & Worm
20	Cannot Furnish	Guard Plate	60	930-05-991-1643	Crank Handle, Incl:
21	901-02-010-0514	1/4-20 X 3/8" Rd.Hd. Scr.	61	901-04-190-0225	5/16-18 X 1/4" Set Scr.
22	901-09-070-6141	Hex Hd.Cap Scr.	62	Cannot Furnish	Front Trunnion, Incl:
23	904-03-020-1750	5/16" Washer	63	901-07-291-3236	Trunnion Stud Front
24	901-06-450-2252	#2 X 3/16" Drive Scr.	64	901-09-070-6145	Machine Scr.
25	951-02-011-3966	Height Scale	65	904-01-031-2926	Steel Washer
26	Cannot Furnish	Main Body	66	Cannot Furnish	Elevating Scr.
26A	Cannot Furnish	Bearing Housing, Const. Of:	67	Cannot Furnish	Spacer
27	902-01-201-2571	Arbor Nut	68	422-01-351-0002	Spiral Gear, Incl:
28	422-04-103-5009	Arbor Washer	69	901-04-190-0225	5/16-18 X 1/4" Set Scr.
29	Cannot Furnish	Flange, Incl:	70	904-07-010-5568	Felt Washer
30	Cannot Furnish	Washer	71	422-01-395-0004	Rear Trunnion, Incl:
31	904-01-021-3566	Steel Washer	72	901-09-070-6145	Adj. Scr.
32	901-02-551-2858	Cap Scr.	73	901-07-261-3235	Trunnion Stud Rear
33	920-08-020-5337	Bearing Comp.	74	Cannot Furnish	Rear Trunnion Clamp
34	Cannot Furnish	Housing	75	422-01-098-0001	Wedge
35	928-06-020-7382	Bearing Retainer Spring	76	Cannot Furnish	Bracket
36	434-01-320-0002	Seal, Incl:	77	Cannot Furnish	5/16-24 X 2" Hex Hd. Mach.Scr.
37	904-01-021-3566	Steel Washer	78	901-04-081-3629	Adj. Scr.
38	Cannot Furnish	Felt Washer	79	902-01-010-1206	5/16-24 Hex Nut
39	Cannot Furnish	Arbor Pulley, Incl:	80	34-530	8" Blade
40	901-04-190-0201	5/16-18 X 5/16" Set Scr.	81	Cannot Furnish	Wrench