



PARTS LIST- BRM2440

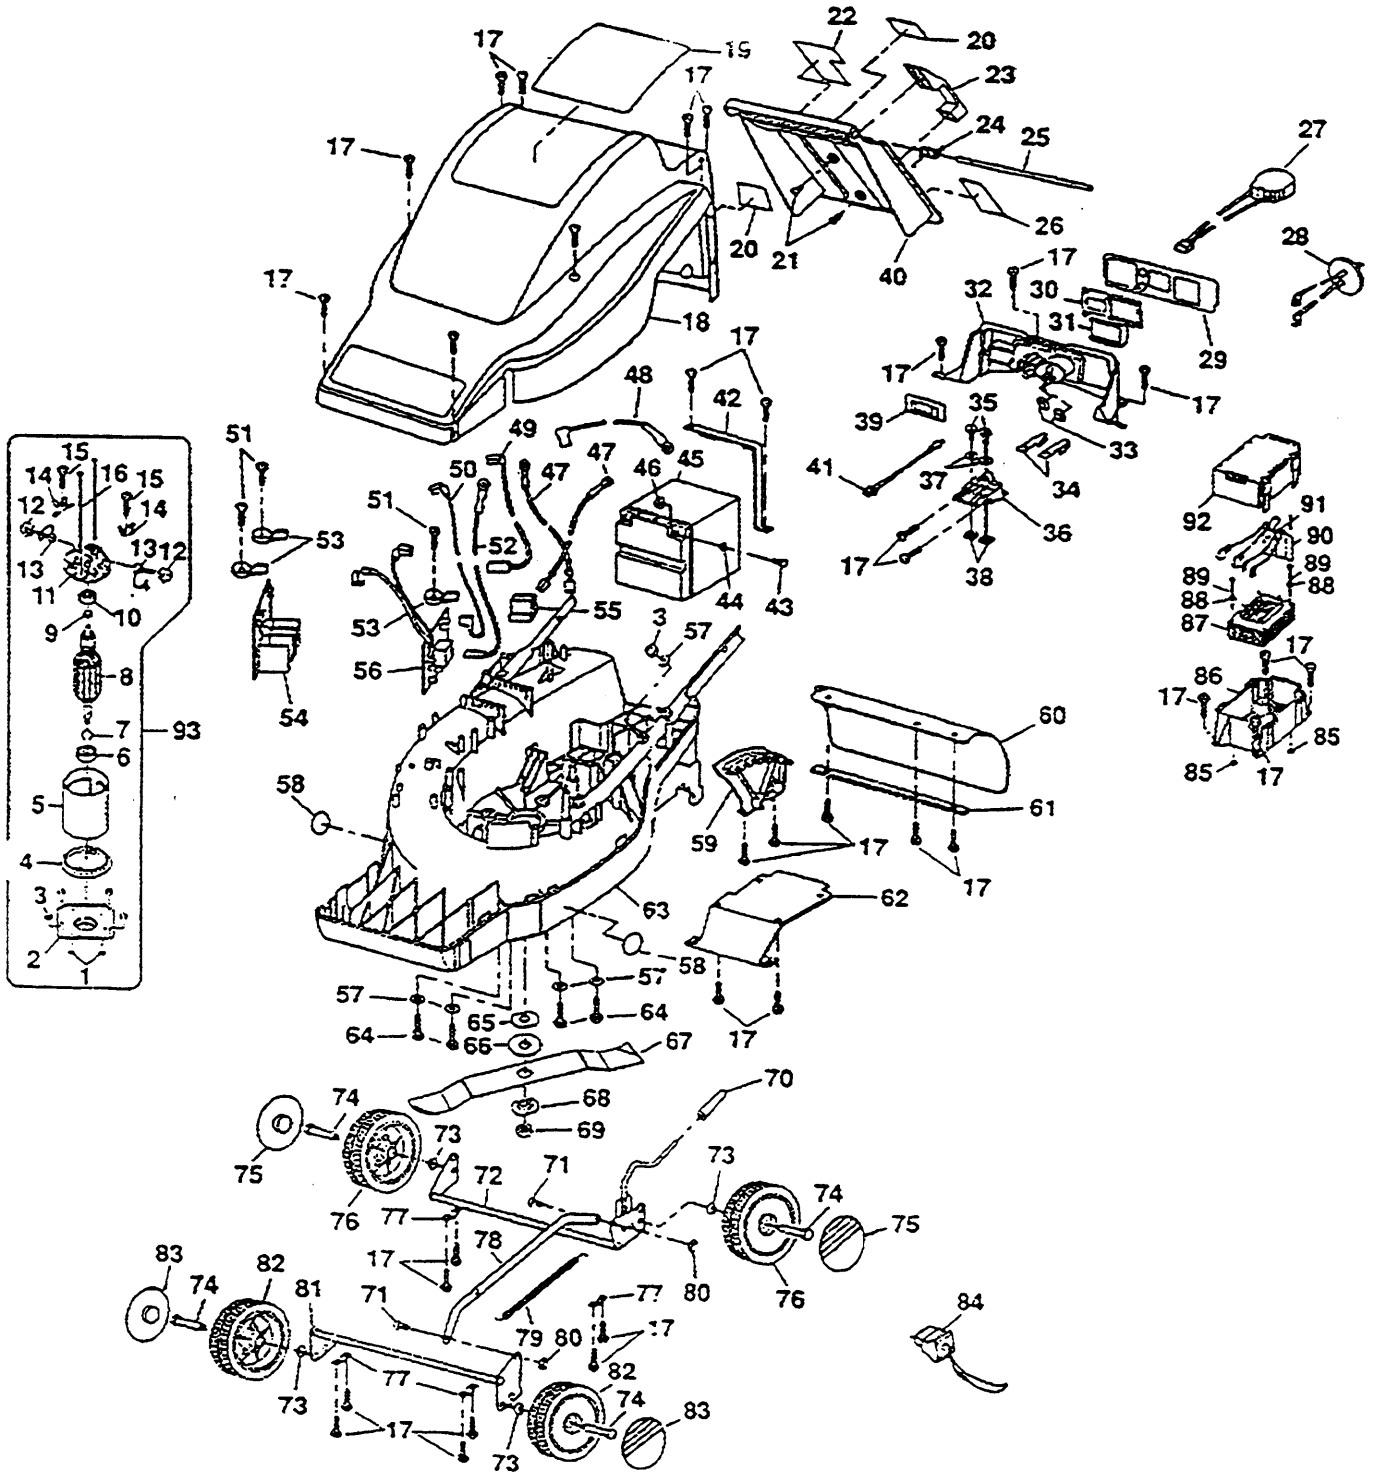

## PARTS LIST- BRM2440

<u>Item</u>	<u>Part No.</u>	<u>Description</u>	<u>Item</u>	<u>Part No.</u>	<u>Description</u>
1	180570	Hex Lock Nut (#10-32)	48	181218	Lead
2	180710	Bottom End Cap	49	181219	Lead
3	180582	Hex Nut (#1/4-20)	50	181172	Lead
4	180572	Insulator	51	181173	Screw (#6-19 X 3/4" pan head)
5	180573	Field	52	181174	Lead
6	181196	Ball Bearing (NTN #6203LLU/1E)	53	181175	Retainer
7	180654	Retaining Ring	54	180657	Charger Module
8	180955	Armature (includes items 6, 7, and 9)	55	181176	Terminal Housing
9	180963	Bushing	56	181177	Power Module
10	180957	Sleeve Bearing	57	180642	Washer
11	181197	Top End Cap (Inc. Key No. 10)	58	181178	Danger Label
12	180656	Brush Tube	59	181179	Height Adjustment Bracket
13	180599	Brush Assembly	60	181180	Rear Deflector
14	180600	Brush Terminal	61	181181	Deflector Retainer
15	180646	Screw (#8-16 X 5/8" pan head)	62	181182	Discharge Deflector
16	180650	Screw (#10-32 X 5-19/64" pan head)	63	181183	Mower Deck
17	181198	Screw (#8-18 X 3/4" pan head)	64	180641	Bolt (#1/4-20 X 5/8" hex head)
18	181199	Motor Cover	65	180946	Shaft Washer
19	181200	Cover Label	66	180947	Spacer
20	180626	Danger Label	67	181184R	16 Inch Blade
21	181202	Screw (#10-16 X 29/64" pan head)	68	180948	Blade Washer
22	181203	Door Information Label	69	180949	Blade Nut (#1/2-20)
23	181204	Rear Door Handle	70	181185	End Cap
24	181205	Spring	71	181186	Pin
25	181206	Rod	72	181187	Rear Axle Assembly
26	181207	Door Warning Label	73	180575	Spring Washer
27	180629	Battery Gauge (Inc. Key No. 39)	74	181188	Shoulder Bolt (#3/8-16 X 1-7/16")
28	180624	Disc Assembly W/Terminals	75	181189	7" Hub Cap
29	181210	Control Panel Label	76	181190	7" Wheel (Inc. Key No. 75)
30	180627	Door Holder	77	180596	Axle Strap
31	180628	Recharging Port Door	78	181191	Height Adjustment Arm
32	181212	Control Panel	79	180587	Spring
33	180630	Push Nut	80	180579	Retaining Ring
34	180667	Fuse Terminal	81	181192	Front Axle Assembly
35	180632	Screw (#10-32 X 1/4" pan head)	82	181193	6" Wheel (Inc. Key No. 83)
36	180668	Receptacle Holder	83	181194	6" Hub Cap
37	180633	Washer	84	180666R	Ignition Key/Circuit Breaker
38	180635	Square Nut (#10-32)	85	180580	Hex Nut (#6-32)
39	180631	Battery Gauge Holder	86	180618	Transformer Base
40	181213	Rear Door	87	180652	Transformer (120 volt)
41	181214	Led	88	180700	Washer
42	181215	Battery Strap W/Pad	89	180581	Screw (#6-32 X 1-1/2" pan head)
43	180664	Hex Bolt (M5 X 10)	90	180660	Rectifier/Fuse Board
44	180663	Washer	91	180649	Fuse
45	181216	Battery Replacement Kit	92	180619	Transformer Cover
46	180665	Hex Nut (M5)	93	180945	Motor Assembly
47	181217	Lead			(Inc. Key No. 39, 40, 41, 42, 43, 44, 45, 46, and 69)

# PARTS LIST- BRM2440 UPPER HANDLE ASSEMBLY

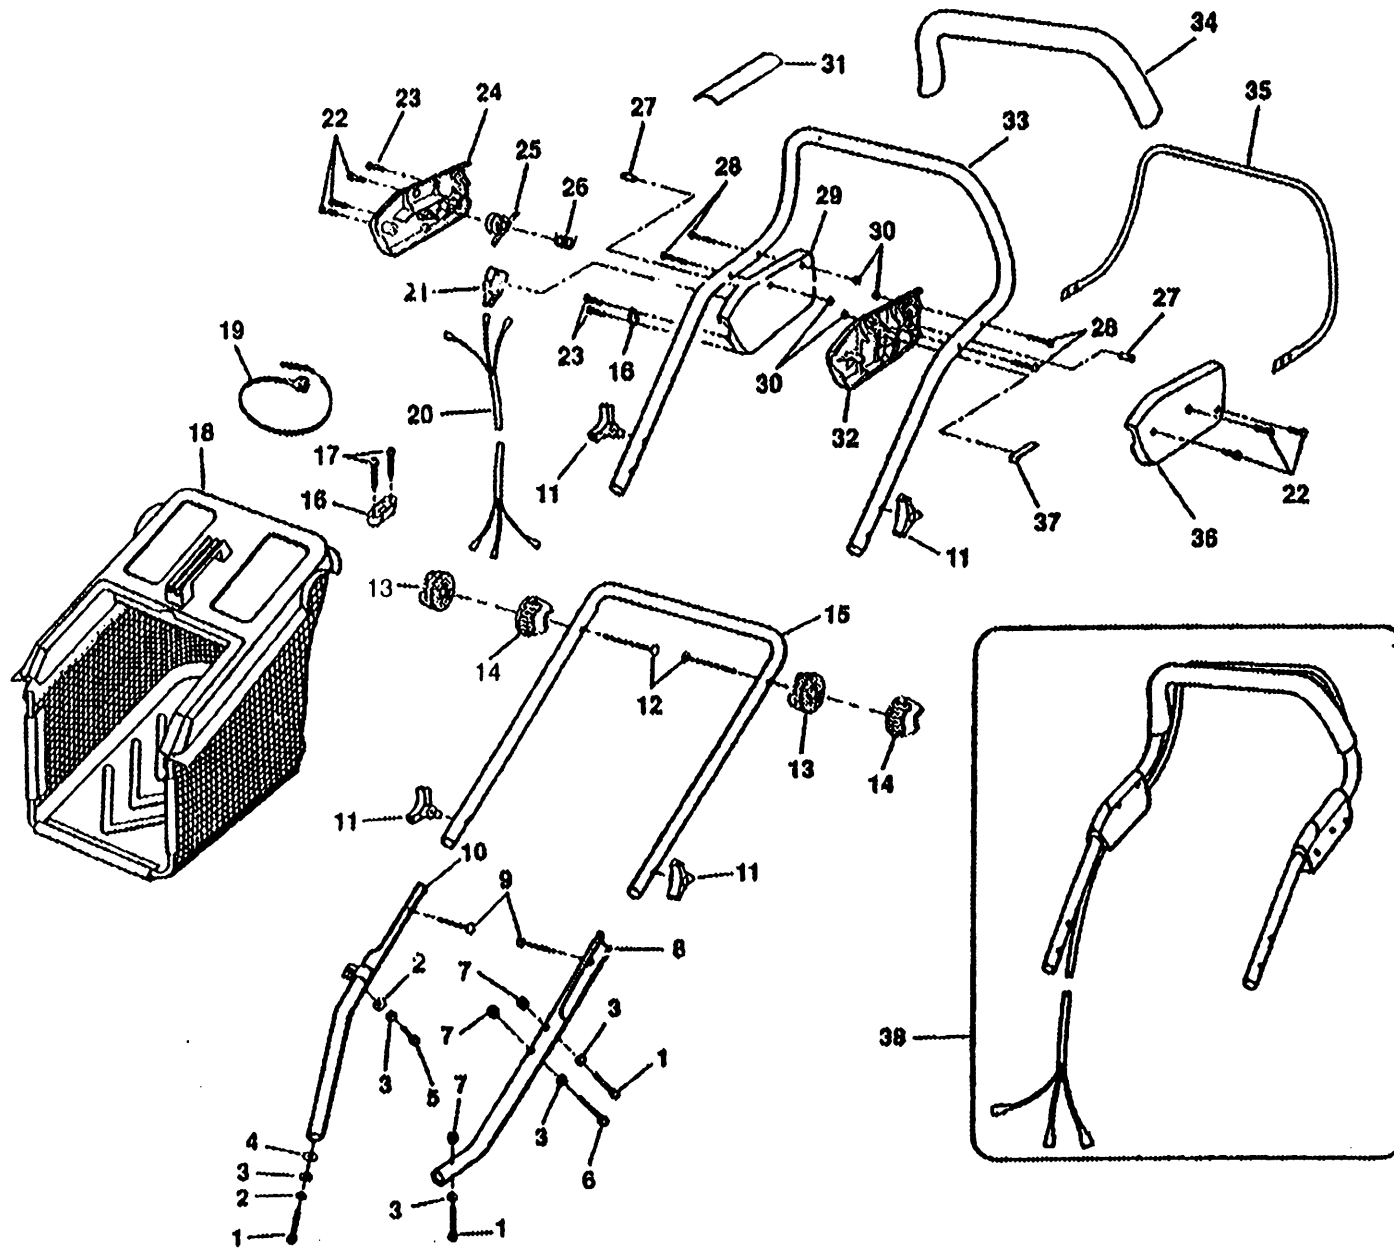

## PARTS LIST- BRM2440 UPPER HANDLE ASSEMBLY

---

<u>Item</u>	<u>Part No.</u>	<u>Description</u>
1	180577	Bolt (#1/4-20 X 1-5/8" hex head)
2	181220	Washer
3	180642	Washer
4	181221	Washer
5	180641	Bolt (#1/4-20 X 5/8" hex head)
6	180576	Bolt (#1/4-20 X 2" hex head)
7	180582	Hex Nut (#1/4-20)
8	181222	Left Handle Mounting Tube
9	181223	Carriage Bolt (#5/16-18 X 2")
10	181224	Right Handle Mounting Tube
11	180638	Knob
12	181225	Carriage Bolt (#5/16-18 X 2-3/4")
13	181226	Handle Regulator (7/8")
14	181227	Handle Regulator (3/4")
15	181228	Lower Handle
16	180795	Cord Clamp
17	181173	Screw (#6-19 X 3/4" pan head)
18	181154R	Grass Bag Assembly
19	181229	Ty Wrap
20	181230	Wiring Harness
21	180797	Switch
22	180781	Screw (#6-19 X 5/8" pan head)
23	180645	Screw (#6-19 X 3/4" pan head)
24	180782	Right Housing Cover
25	180783	Actuator Button
26	180784	Spring
27	180785	Pin
28	180786	Screw (#8-32 X 1" pan head)
29	180787	Right Housing Support
30	180788	Hex Nut (#8-32)
31	181234	Switch Label
32	180794	Left Housing Support
33	181235	Upper Handle
34	180790	Foam Grip
35	180791	Actuator Bail
36	180792	Left Housing Cover
37	180793	Spring
38	181238	Upper Handle Assembly