


RYOBI FINISHING SANDER – MODEL NUMBER CFS1501

The model number will be found on a plate attached to the motor housing. Always mention the model number in all correspondence regarding your **FINISHING SANDER** or when ordering repair parts.

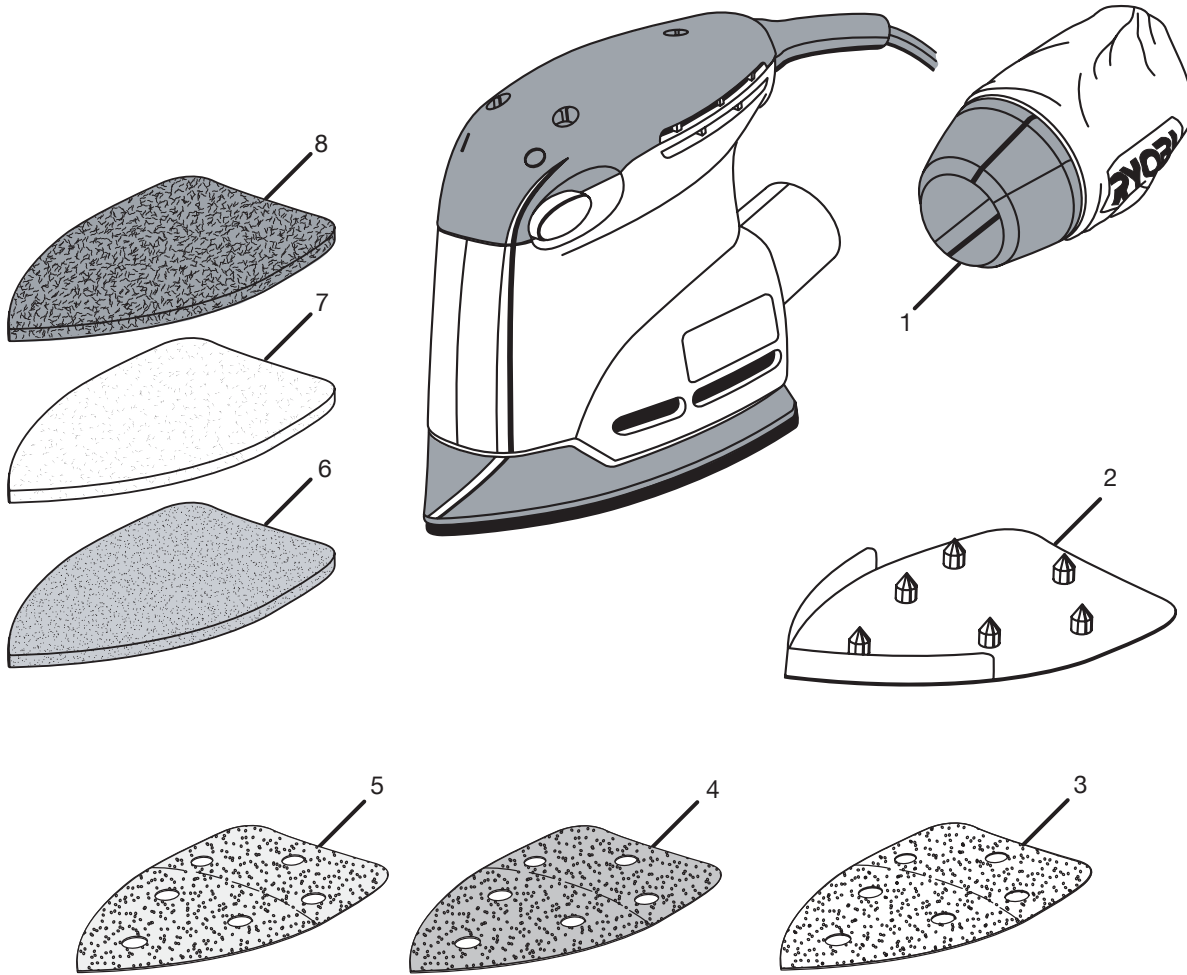

PARTS LIST

| KEY NO. | PART NUMBER | DESCRIPTION | QTY. |
|---------|-------------|----------------------------|------|
| 1 | CFS1501-31 | DUST BAG | 1 |
| 2 | CFS1501-32 | PUNCHER..... | 1 |
| 3 | CFS1501-33 | SANDPAPER, (60 GRIT)..... | 2 |
| 4 | CFS1501-34 | SANDPAPER, (120 GRIT)..... | 3 |
| 5 | CFS1501-35 | SANDPAPER, (240 GRIT)..... | 2 |
| 6 | CFS1501-36 | SCRUB, HEAVY | 1 |
| 7 | CFS1501-37 | SCRUB, LIGHT..... | 1 |
| 8 | CFS1501-38 | SCRUB, POLISHING..... | 1 |
| | 983000-367 | OPERATOR'S MANUAL | |
| | 983000-367R | REPAIR SHEET | |
| | 01-15-04 | | |