



Parts List for DC012-CL Type 1

Item Number	Part Number	Description	Qty Required
1	000000-00	No Longer Available	1
1	5140113-42	PCB ASSEMBLY	1
3	000000-00	No Longer Available	1
3	5140113-34	PCB ASSEMBLY	1
4	5140072-03	PCB ASSEMBLY	1
4	5140113-35	PCB ASSEMBLY	1
5	5140113-36	PCB ASSEMBLY	1
6	5140072-39	SPEAKER GRILLE	1
7	5140072-77	FRONT CABINET ASSEM.	1
8	000000-00	No Longer Available	1
9	5140072-09	FRONT COVER	1
10	5140072-10	PUSH BUTTON ASSY.	1
11	5140072-11	SPEAKER	2
12	5140072-41	RUBBER COVER	1
13	5140072-42	TOP HANDLE	1
14	000000-00	No Longer Available	1
15	5140072-44	ROLL CAGE-LEFT	1
16	5140072-45	CORD WRAP	2
17	5140072-17	SHOCK MOUNT	6
18	5140113-37	POWER PCB ASSY	1
20	5140072-47	ROLL CAGE-RIGHT	1
22	5140072-22	TRANSFORMER	1
23	5140072-48	PLATE	1
24	5140072-49	MOUNTING BRACKET	1
25	5140072-50	SENSOR BRACKET KIT	1
26	5140072-26	PCB ASSEMBLY	1
26	5140113-38	PCB ASSEMBLY	1

Parts List for DC012-CL Type 1

Item Number	Part Number	Description	Qty Required
27	5140113-39	PCB ASSEMBLY	1
28	5140072-28	MOUNTING BRACKET	1
29	5140072-29	CHARGER ASSY.	1
30	5140072-30	TUNING KNOB	1
31	5140072-51	BATTERY DOOR	1
32	5140072-32	VOLUME KNOB	1
33	5140019-23	LATCH ASSY.	1
34	5140072-34	BATTERY DOOR	1
35	5140019-28	ANTENNA	1
36	5140113-40	TUNING PWB ASS'Y	1
37	5140113-41	VOLUME CONTROL	1
38	5140072-38	AC OUTLET ASSEMBLY	1
39	5140072-52	POWER CORD	1
40	5140072-53	SCREW, M4X16	10
41	5140072-54	RETAINER	1
42	5140019-57	CORD RETAINER	1
846	5140112-26	BATTERY	1