



Parts List for DCS388T1 Type 1

Item Number	Part Number	Description	Qty Required
1	N433355	HOUSING ASSEMBLY	1
2	N466021	LATCH	1
3	N438438	HANDLE INSERT	1
4	N438439	HANDLE INSERT	1
5	N463460	MODULE & STATOR ASSY	1
6	N425240	LOCK OFF BUTTON	1
7	N461735	SPRING	1
8	N091479	MOUNT- SPRING	1
9	330019-03	SCREW,PLASTITE	7
10	N469235	ROTOR ASSY.	1
11	330045-45	SCREW	7
12	N469234	LED ASSY	1
13	N463923	GEARCASE ASSY	1
14	N451939	GASKET	1
15	N410605	HUB	1
16	N431139	WASHER	1
17	N410607	PHILLIPS HEAD SCREW	1
18	N463922	GEAR	1
19	N410604	CLUTCH PLATE	1
20	000000-00	No Longer Available	1
20	N410595	WASHER,CLUTCH	1
21	N463918	CRANK ASSY	1
22	N451098	BOTTOM GUIDE	1
23	N451099	TOP GUIDE	1
24	N410597	ROLLER	2
25	N422091	ROLL PIN	1
26	N465031	FLAT HEAD SCREW	4

Parts List for DCS388T1 Type 1

Item Number	Part Number	Description	Qty Required
27	N463921	SHAFT & CLAMP ASSY	1
28	N469236	BUSHING KIT	1
29	N463925	GEAR CASE COVER ASSY	1
30	N450135	LEVER ASSEMBLY	1
31	N455745	LEVER SPRING	1
32	330019-21	SCREW	4
33	N422455	BOOT	1
34	N436884	SHOE ASSEMBLY	1
35	142940-00	SCREW	4
37	N410601	RUBBER SEAL	1
38	605040-25	BEARING	1
39	N424451	BEARING COVER	1
40	N482531	FLAT HEAD SCREW	1
40	N422361	FLAT HEAD SCREW	2
41	N502344	GEARCASE	1
42	N421926	PIVOT PIN	2
43	330041-04	ROLL PIN	4
44	N100358	O-RING	1
45	N437380	GEARCASE COVER	1
46	330004-20	NEEDLE BEARING	1
50	N458643	RATING LABEL	1
51	N458863	LABEL	2
52	N461009	LABEL	1
53	N461011	LABEL	1
54	N468143	LABEL	1
55	N458867	WARN LABEL	1
800	30301914-01	GREASE	1

Parts List for DCS388T1 Type 1

Item Number	Part Number	Description	Qty Required
862	N443371	TOOL BAG	1
866	DCB606	FLEXVOLT BATTERY	1
867	N475920	BATTERY CAP	1
871	DCB118	CHARGER	1