





Parts List for E810-4V Type 1

Item Number	Part Number	Description	Qty Required
1	5140110-50	VALVE KIT	1
2	5130284-00	HEAD	1
3	5140016-92	HOUSING	1
4	5130078-00	GASKET	1
5	5140016-72	VALVE PLATE	2
6	5130082-00	GASKET	1
7	5140016-73	VALVE BLADE	2
8	5140016-74	VALVE PLATE GASKET	1
9	5140016-95	CYLINDER	1
10	5130107-00	FAN	1
11	5140016-75	SEAL	1
12	5130084-00	PISTON RING SET	1
13	5130085-00	PISTON	1
14	5130086-00	PIN	1
15	5130087-00	RETAINING RING	2
16	5130088-00	CONNECTING ROD	1
17	5140016-76	CONDENSER	1
18	5140016-77	COVER	1
19	5134612-00	DIPSTICK	1
20	5140026-42	O-RING	1
21	5140016-78	DIPSTICK	1
22	5134707-00	END COVER	1
23	5140110-51	COVER	1
24	5140016-81	O-RING	1
25	5134652-00	BEARING	1
26	5140016-83	COVER,SEAL	1
27	5140040-44	CASE ASSY	1

Parts List for E810-4V Type 1

Item Number	Part Number	Description	Qty Required
30	5140028-31	OVERLOAD PROTECTOR	1
31	5140016-86	CRANKSHAFT	1
32	5140016-87	BEARING	1
33	5140016-88	SEAL	1
34	5140110-53	OIL GLASS	1
51	5140028-08	KNOB	1
52	5140110-54	PRESSURE GAUGE	2
53	5140110-55	PRESSURE REDUCER	1
54	5140028-11	NIPPLE	1
55	629406-00	PRESSURE SWITCH	1
56	629407-00	UNLOADER TUBE	1
57	5140038-49	DRAIN VALVE	2
58	5140028-14	SAFETY VALVE	1
59	5140028-15	POWER CABLE	1
60	5140110-56	FITTING	1
61	5140028-17	COMPRESSION RING	2
62	5140028-18	LOCKNUT	2
63	629401-00	AFTERCOOLER	1
64	5140028-19	COMPASS	2
65	629409-00	COMPRESSION NUT	1
66	5140028-20	NIPPLE	1
67	629408-00	COMPRESSION RING	1
68	5140028-21	NIPPLE	1
69	5130033-00	COLD START VALVE	1
74	5140030-78	CHECK VALVE ASSY	1
75	5134604-00	VALVE	1
76	5140110-57	FOOT PAD	4

Parts List for E810-4V Type 1

Item Number	Part Number	Description	Qty Required
77	5140019-80	FILTER	1
78	5140110-58	BASE PLATE	1
79	5140028-30	GROMMET	1
80	5137078-00	PUMP/MOTOR ASSY.	1