
Tanaka.

Parts Catalog

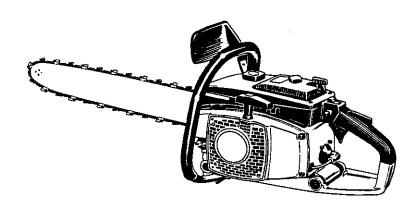

ECS-655


Chain Saw

Model: ECS-650/655

Part # 11776 01-15-99

ECS-655 OPTIONS AND ACCESSORIES


BARS & CHAINS

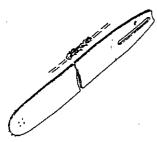

16 In. Chain 72SG060X 20 In. Chain 72SG070X 24 In. Chain 72SG081X


16 ln. Bar 160PXDD176 20 In. Bar 200PXDD176 24 In. Bar 240RNDD176

 16 ln. Bar/Chain Kit 844005 20 ln. Bar/Chain Kit 844006 24 In. Bar/Chain Kit 844007




DEPTH GUAGE CDG-600


PERFECT MIX® 2-Cycle Engine Oil

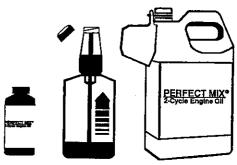

 700109 2.8 oz. Bottle, 1 Gallon Size (24*) 700108 16 oz. Self-measuring Bottle (24*) 700110 1 Gallon Jug Commercial Size (6*) * Case Quantity



FILE ASS'Y 5/32 CSF-732

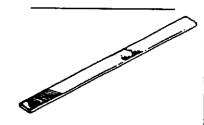

FLAT FILE 8" CSF-800

SPECIAL TOOLS

MANUALS & CATALOGS

006-29326-000 Flywheel Remover 009-29111-080 Piston Pin Remover 890-32600-200 Clutch Remover

34765

22206

11792

001-29000-000

Owner's Manual

Safety Manual

Parts Catalog

Tachometer 070-2000W-500 Pressure Tester 070-2000W-501 Carb. Tool Kit



 






FIG. 1 ENGINE

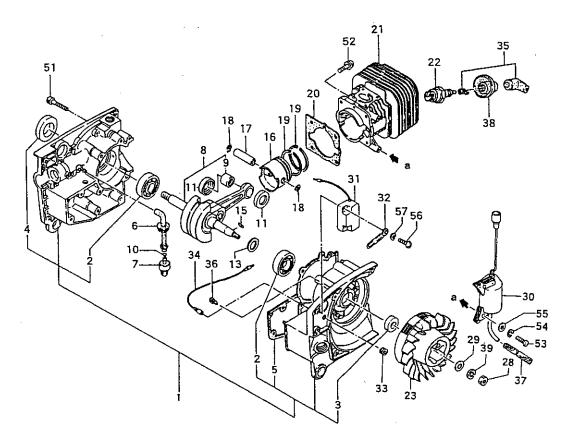

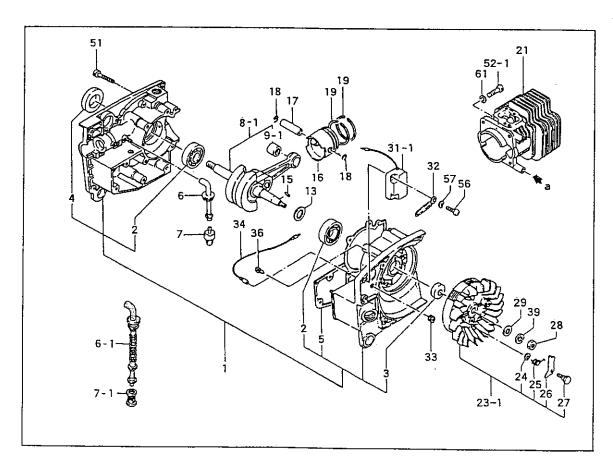

	OHE I	ECS-655 P	Ar	1/3) L	JOTING	
REF		PART DESCRIPTION	Q	С	s	SERIAL NO	REMARKS
1	072-11650-901	CRANKCASE,ASS'Y	1		D	~E055570	Includes bearings, seals & gasket
1	072-11650-911	CRANKCASE,ASS'Y	1		D	E055571~	Includes bearings, seals & gasket
2	1	BEARING,BALL,#6202a12	2		С		
3	999-66122-240	SEAL,OIL,12227	1	i	A		İ
4	999-66253-512	SEAL,OIL,#25356	1		C		
5	090-11650-200	GASKET, CRANKCASE	1	İ	c		
6-1	505-32600-201	PIPE,OIL,B	1		D	~C189252	
6	505-32600-211	PIPE,OIL,B	1		С	C189253~	
7-1	487-32600-200	OIL,FILTER	1		D	~C189252	
7	486-32530-800	BODY,OIL FILTER	1		D	C189253~	
8-1	046-11650-822	CRANKSHAFT	1		D	~J082070	
8	046-11650-822	CRANKSHAFT	1		D	~K102600	
		1					
8		CRANKSHAFT	1		D	K102601~	
1	999-62121-631	BEARING,NEEDLE	1		С	~K102600	
9		BEARING,NEEDLE,KTV12162	1		C	K102601~	
10	680-04019-210	1	1	Ì	В	C189253~	
11		COLLAR, PISTON PIN	2		C	K102601~	
13	071-11600-230	SHIM,16X21X.20	V	ı	D	1	Shims are "as needed" to obtain
	1		H				correct c/s side clearance.
		SHIM,16X21X.30	V		D		
	068-10100-200	KEY,WOODRUFF,3X13X4.5	1		C		
16		PISTON	1		C		·
17	f	PIN,PISTON,12X38.3	1		C		
18	039-12000-201	CIRCLIP, PISTON PIN	2	-	C		
19	041-11650-220	RING,PISTON	2	Ì	В		,
20	017-11650-200	GASKET,CYLINDER	,		ا		
	002-11650-210	CYLINDER	1		B C		
		PLUG,SPARK	1				
		ROTOR,MAGNETO ASS'Y	¦	- 1	- 1	~N007370	}
		ROTOR,MAGNETO ASST		- 1	- 1	~N007370 N007371~	
		WASHER, RECOIL STARTER	2		- 1	~E156100	
	. 20 00001 200	TO COLL I, LEGGIE GIANTEN	-		٦,	~£130100	
24	786-11620-200	WASHER, STARTER	2		cli	E156101~	
		SPRING,STARTER PAWL	2		- 1	~N007370	
		PAWL,STARTER	2		- 1	~N007370	
i	793-10200-202	-	2			~N007370	
		NUT,FLYWHEEL	1	1	D		
		WASHER,FLYWHEEL	1				
	_	. · · · 			-		
30	167-21509-802	COIL,IGNITION	1		c		
		IGNITOR,TTI-ID	1		- 1	~E055570	
31	159-21411-870	IGNITOR,TTI-6D	1		- t	E055571~	
						-	


^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIGURE 1 cont.

		200 00017			_		
REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO	REMARKS
32	198-05015-800	CLAMP,CORD	1		С		
33	203-04015-202	GROMMET,PRIMARY CORD	1		C		
34	173-11600-800	CORD,PRIMARY	1		С		
35	157-01570-900	CAP,SPARK PLUG,ASS'Y	1		С		
36	198-11600-200	CLAMP,CORD	1		D		
37	755-32600-200	TUBE,CORD INSULATOR	1		D		
38	255-11650-200	COVER,SPARK PLUG	1		D		
39	992-10070-012	WASHER,S,7	1		D	:	
51	990-51050-303	BOLT,HEX,5X30	8		D		
52-1	990-51050-203	BOLT,HEX.HOLE,5X20	4		С	~M068795	
52	994-61050-205	BOLT,HEX,5X20	4		C	M068796~	
53	990-11040-181	SCREW,4X18	2		D	~G182170	
53	990-11040-221	SCREW,4X22	2		В	G182171~	
54	992-10040-012	WASHER,S,4	2		В		
55	992-00040-011	WASHER,4	2		В		
56	990-11040-161	SCREW,4X16	2		Α		
	ł	WASHER,S,4	2		В		
61	992-10050-012	WASHER,S,5	۷		Α	i	

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.2 CLUTCH, BRAKE & MUFFLER

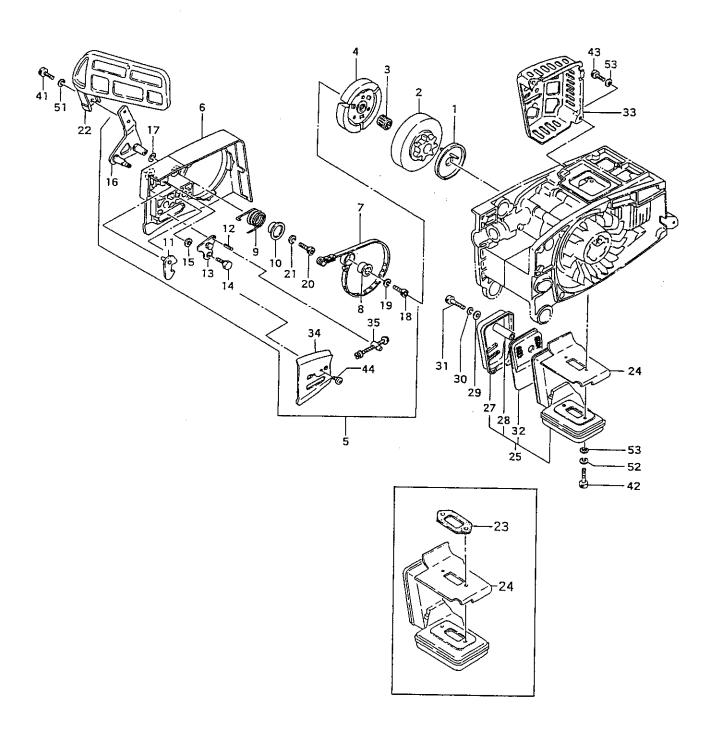

		EC3-033 P					
REF	. PART NO.	PART DESCRIPTION]c	C	s	SERIAL NO	REMARKS
1	321-32600-803	WASHER, SPROCKET	1		D		
2	310-11600-801	HOUSING,CLUTCH	1		В		
3	999-62121-505	BEARING, NEEDLE	1		c	1	
4	287-11600-801	CLUTCH	1		D		
5	040-32600-911	CASE,SIDE,ASS'Y	1		D		
6	040-32600-210	CASE,SIDE	1		C		
				1			
7	378-32600-802	BAND,BRAKE	1		C		
8	381-32600-200	BAND,BRAKE,METAL	1		D		
9		SPRING,BRAKE	1		D		
10	368-32600-200	WASHER,BRAKE SHAFT	1		D		
11	360-32600-800	PLATE,BRAKE RESET	1		D		
12	993-24005-120	PIN,SPRING	1		D		
				ļ		•	İ
1	373-32600-801		1		D		
1	382-32600-200	r ·	1		D		
1	4	WASHER,SPECIAL,B	1		D		
1	361-32600-801	· · · · · · · · · · · · · · · · · · ·	1		D		
1		SHIM,8.2X12.5X.50	1		D		
18	990-51050-123	BOLT,HEX,5X12	1		С		
40	000 40050 040						
	992-10050-012		1		Α		
		BOLT,HEX.HOLE,5X10	1		С		
	992-10050-012		1		Α		
1	1	HANDLE,BRAKE GASKET,MUFFLER	1			0400050	
1	744-11600-21	SHIELD, HEAT	2		•	~C189252	
		OF HILLD, HEAT			디		
25	705-11653-910	MUFFLER,ASS'Y	1		D		
		BODY,MUFFLER B	1				
[COLLAR, MUFFLER CLAMP 30		ļ			
		WASHER, BRAKE SHAFT	1				
	992-10050-012	-			A		
		BOLT,HEX,5X45			c		
32	732-11603-201	PLATE, PARTITION	1				
		PROTECTOR, MUFFLER			c		
		PLATE,GUIDE B	1		D		
		BOLT, CHAIN TENSION, ASS'Y	1		cl		
41		BOLT, HEX. HOLE, 5X10	2	$\cdot $	cl		
		BOLT,HEX,5X45	2			~D275496	
42	990-51050-353	BOLT,HEX.HOLE,5X35	2		cl	D275497~	
		BOLT,HEX.HOLE,5X10	1	- 1	c		
			-				


^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIGURE 2 cont.

REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO.	REMARKS	
44	990-11030-061	SCREW,3X6	2		D		"."	
51	992-10050-012	WASHER,S,5	2		A			
52	992-10050-062	WASHER,S,5	2		D			
53	992-00050-061	WASHER,SMALL,5	3			!		

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part


FIG.3 CLEANER & CARBURETOR

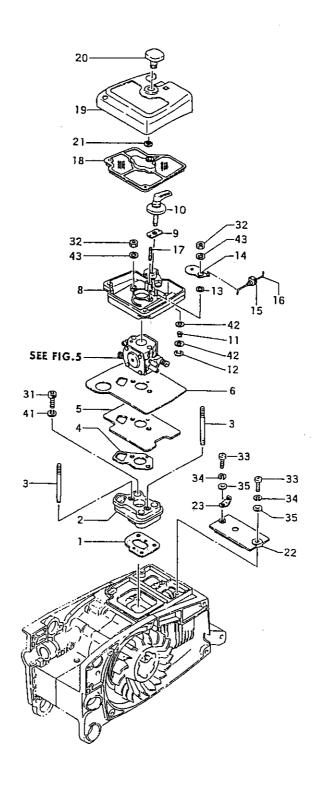

	Unico	E03-033 F7					
REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
1	403-11650-201	GASKET,INLET MANIFOLD	1		С		
2	404-11650-810	INSULATOR, CARBURETOR	1		С	~M068925	
2	404-11660-80	INSULATOR, CARBURETOR	1		D	M068926~	
3	100-11622-200	STUD,5X60	2		C		
4	402-11653-200	GASKET,CARBURETOR	1		D		
5	133-11650-200	SHIELD,HEAT	1		C		
6	402-11658-200	1 · · · · · · · · · · · · · · · · · · ·	1		C		
8	423-11600-204	BODY,AIR CLEANER	1		D		
9	710-32600-201	PLATE,SET,CHOKE	1		D		
ì		BUTTON, CHOKE	1		D		
1	308-36100-201	SPRING,ADJUSTER A	1		C		
12	993-55040-001	RING,STOP	1		D		
] ,				
1		SHIM,5.2X8X.80			C		
Į.		VALVE, CHOKE DOD	;		ם		
		HOLDER, CHOKE ROD			ם		
)		ROD,CHOKE					
1	100-11601-201	BOLT,STUD,4X21	1		В	5	
18	420-11600-810	ELEMENT, CLEANER	'				
19	 051-32610-220	COVER,CLEANER	1		c		
1		KNOB, CLEANER	1		lc.		
		RING,STOP,S-9 EX	1		c		
	i	PLATE, SHUTTER	1		D		
23	205-11600-201	TAB,TERMINAL	1		D		
31	990-51050-223	BOLT,HEX,5X22	3		c	~M068925	1
31		BOLT,HEX,5X25	3		1	M068926~	
		NUT,LOCK 5	2		C		
		SCREW,4X12	2		В		
34	992-10040-012	WASHER,S,4	2		В		
35	992-00040-011	WASHER,4	2		В		
41	992-10050-062	WASHER,S,5	3		D		
	000 00000 044	INVACUED ONALL O	_				
42	992-00060-011	WASHER,SMALL,6	2		C		
43	992-01050-011	WASHER,5	2		A		
1	I		F	1	1	1	

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.4 RECOIL STARTER

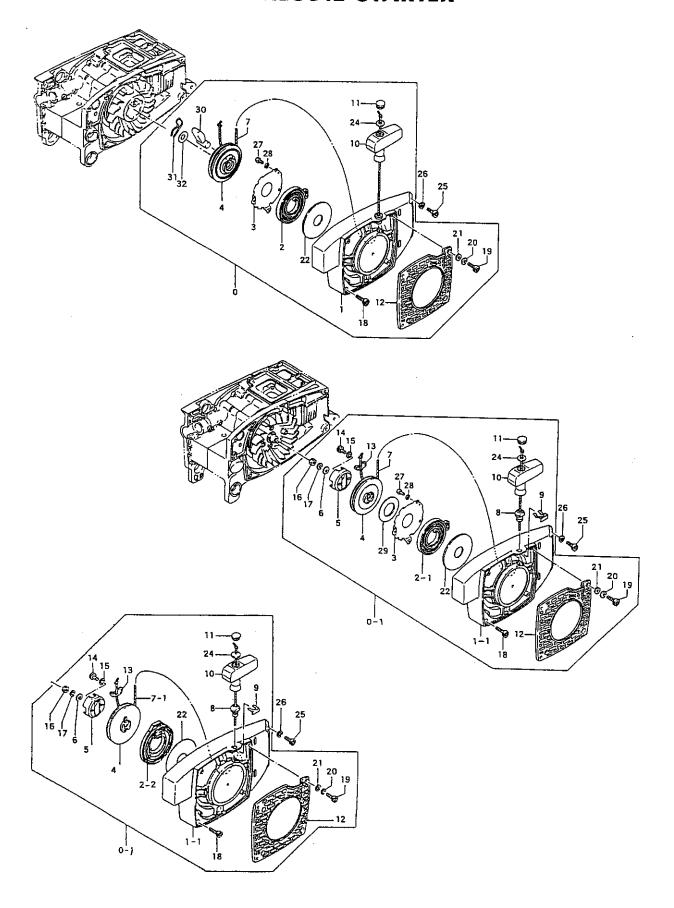


	.,	EU3-033 F					
REF.		PART DESCRIPTION	Q	С		SERIAL NO	REMARKS
0-1	756-11622-900	STARTER, RECOIL ASS'Y	1		1	~N007370	
0	756-11622-91	STARTER,RECOIL ASS'Y	1		ı	N007371~	
1-1	112-11600-805	CASE,FAN	1		D	~N007370	
1-1	112-11622-80	CASE,FAN	1		C	N007371~	
2-2	778-11600-911	CASE,RECOIL SPRING,ASS'Y	1		C	~G182170	
2-1	779-11620-20	SPRING,RECOIL	1		В	M068796~	
3		PANEL,STARTER	1		D	F135301~	
4		PULLEY,STARTER	1		C	~N007370	
5	4	PULLEY,SHAFT/OUTER	1		C		
6		WASHER,SPECIAL	1		С		
7	783-11622-20	R-B 7831162120 ROPE	1		F		
8	780-11600-201	GUIDE,ROPE	1		C		
9	1	CLIP,ROPE GUIDE	1			~M130823	
9	781-11621-20	CLIP,ROPE GUIDE	1			~N007370	
	1	HANDLE, STARTER	1		D		
	833-10207-200	CAP,STARTER HANDLE	1		D		
1	805-32650-201	PLATE, DAMPER	1		D		
13	782-11600-21	RECEIVER,ROPE	1		D	1	
14	990-51040-103	BOLT,HEX.HOLE,4X10			٨		
	992-10040-012		2 2		A A		
	991-01050-013		1		Ĉ		
	992-10050-012	1			A		
	990-51050-223	1	$ _{2}$		C		
		BOLT,HEX.HOLE,4X12	4		С		
				1			
20	992-10040-012	WASHER,S,4	4		Α		
21	992-00040-011	WASHER,4	4		В		
22	827-11660-200	PLATE, RECOIL SPRING	1		c		
24	795-11600-200	STOPPER,ROPE	1	ı			
25	990-51050-153	BOLT,HEX.HOLE,5X15	2		c		
26	992-00050-011	WASHER,SMALL,5	2	1	В		
1 1	990-11030-061	SCREW,3X6	3		C		
ł I	992-10030-012	WASHER,S.,3	3				
		WASHER,PULLEY	1		D		
	112-11622-80	CASE,FAN	1		C	N007371~	New style recoil starter system (Ref 0)
i i		SPRING,RECOIL	1		В	11	Can be fitted to older units if the
3	778-11622-200	PANEL,STARTER	1			н	Mag. rotor 155-21738-80 is fitted
							(see fig. 1)
i I		PULLEY,STARTER	1	- 1	이	11	
	783-11621-200		1		D	11	İ
10	785-11600-202	HANDLE, STARTER	1		D	и	
<u></u> _							

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
11	833-10207-200	CAP,STARTER HANDLE	1		С		
12	805-32650-201	PLATE, DAMPER	1		С		
18	990-51050-223	BOLT,HEX,5X22	2		С		
19	990-51040-123	BOLT,HEX.HOLE,4X12	4		С		
20	992-10040-012	WASHER,S,4	4		Α		
21	992-00040-011	WASHER,4	4		В		
22	827-11660-200	PLATE,RECOIL SPRING	1		С		
24	795-11600-200	STOPPER,ROPE	1		D		
25	990-51050-153	BOLT,HEX.HOLE,5X15	2		C		
26	992-00050-011	WASHER,SMALL,5	2		В		
27	990-11030-061	SCREW,3X6	3		C		
28	992-10030-012	WASHER,S.,3	3		С		
30	788-11620-20	PAWL,STARTER	1		С		
31	836-11620-20	SPRING,FRICTION	[1]		C		
32	034-31200-250	SHIM,8.2X12.5X.50	1		D		
				l	l		

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part


FIG.5 CARBURETOR

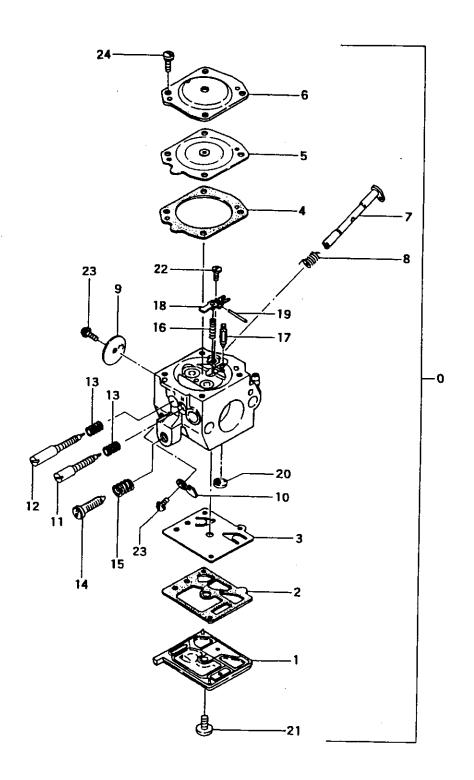

, , , ,	WIL J	EUS-055	PAF	1/3) L	.15 I IIVG	
REF		PART DESCRIPTION	Q	С	s	SERIAL NO	REMARKS
0	455-25012-902	CARBURETOR,ASS'Y	1		С	~M068925	
0	455-25036-90	CARBURETOR, ASS'Y	1		D	M068926~	
1	575-25012-200	BODY,PUMP	1		D		
2	~~~	*GASKET,PUMP	1		С		
3	~~~	*DIAPHRAGM,PUMP	1		С		
4	~~~	*GASKET,DIAPHRAGM	1		С		* Contained in Carb. Repair Kit
							650-25012-910
5	~~~	*DIAPHRAGM,METERING	1		С		Not availiable individually
6	476-25012-201	COVER, DIAPHRAGM	1		D		j
7	464-25012-800	SHAFT,THROTTLE	1		D		
8	486-25012-200	SPRING,THROTTLE	1		D		
9	488-25001-200	VALVE,THROTTLE	1		С		
10	559-25012-200	PLATE,STOP	1		D		
11	460-25012-201	SCREW,HIGH ADJUST	1		D	~D055565	
11	460-25012-210	SCREW,HIGH ADJUST	1	l	D	~M068925	
11	460-25036-20	SCREW,HIGH ADJUST	1]	D	M068926~	
12	461-25012-201	SCREW,LOW ADJUST	1		D	~D055565	
	461-25012-210	SCREW,LOW ADJUST	1	-	D	~M068925	
12	461-25036-20	SCREW,LOW ADJUST	1		D	M068926~	
13		SPRING,ADJUST,LOW	2		D		
		SCREW,IDLE ADJUST	1		D		·
	1	SPRING,IDLE ADJUST	11		D		
	477-25012-200	SPRING, VALVE	1	Ì	P		
17	~~~	*VALVE,NEEDLE	1		C		
18	~~~	*LEVER,CONTROL	1		D		Ì
40		 					
19	~~~	*PIN,FLOAT	1	Į.	D		
20 21		*SCREEN,INLET		- 1			,
		SET,SCREW		- 1	밋	ļ	
	1	SCREW,SET,HINGE PIN			D	İ	
	467-25003-200	SCREW,SHUTTER	2		익	ļ	
24	548-25012-200	SCREW,SET	4		미		
			1 1			1	

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.6 REAR HANDLE

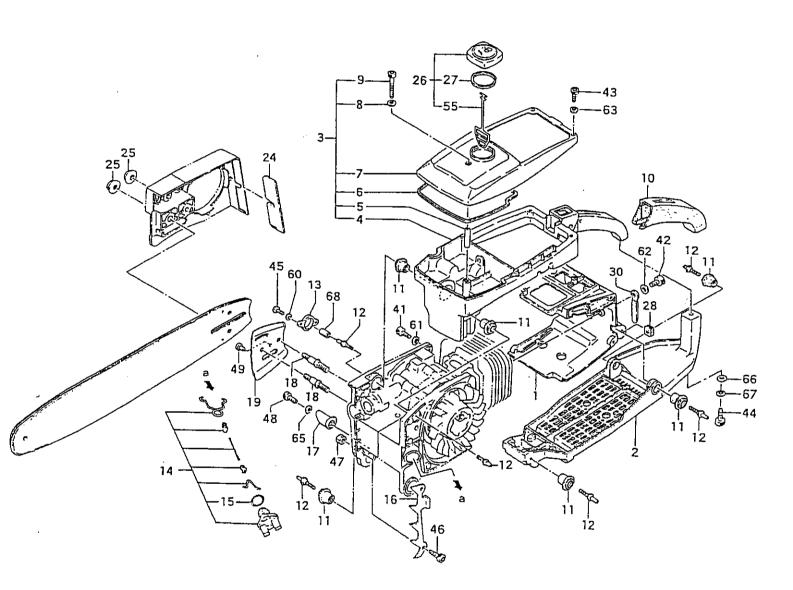

		EU3-033 I					
REF.		PART DESCRIPTION	Q	С	S	SERIAL NO	REMARKS
1	1	COVER,CYLINDER	1		D	~C189252	
1		COVER,CYLINDER	1		D	C189253~	
2	002-32600-21	BASE,ENGINE	1	İ	c		
3	010-32600-910	HANDLE,REAR,A	1		D		
4	010-32600-211	HANDLE,REAR,A	1		C		
5	096-11600-200	COLLAR	1	1	D		
6	605-32600-201	1	1		C		
7	600-32600-203	1	1		D		
8		GASKET,GROMMET	1		D		
9		BOLT,HEX,5X45	1		C		
	227-32600-212	GRIP, REAR HANDLE	1		D		
11	219-32600-821	DAMPER,FRONT	6				
		İ					
1		BOLT, DAMPER A	6		D		
I	224-32600-200	CAP,DAMPER	11		D		
ì	642-32650-901	CAP,OIL ASS'Y	11	ł	C		
i	999-67020-000	O-RING,P20	[1]		C		
l	CBS650-	SPIKE,BUCKING	1		D		
17	125-32600-201	CATCHER,CHAIN	1		D		
	101-32600-20	BOLT,STUD,BAR/CHAIN	2				
1	1	PLATE, GUIDE A	11		미		
l .		PLATE, CHAIN PROTECTOR					
	ļ	NUT,CLAMP,BAR	2				
26 27		CAP, FUEL TANK ASS'Y				i	
21	642-11600-200	GASKET,TANK CAP	1	-		1	
28	203-0604A-202	GROMMET			\Box		
	198-05015-800						
	·	BOLT,HEX.HOLE,5X15			- 1		
1		BOLT, HEX.HOLE, 5X15	2 2				
		BOLT,HEX.HOLE,4X10	1 1		쉬		
		BOLT, HEX.HOLE, 5X20	2		A C		
	1000-200	DOLI, HEALI IOLE, SAZO			ᅦ		
45	990-11040-081	SCREW,4X8	2		c		
		BOLT,HEX,5X12	2		c		
		NUT,LOCK 5	2	- 1		j	
- 1		BOLT,HEX,5X18					
- 1		SCREW,4X8			cl		
	1	CHAIN,TANK CAP					
		or a majirmax omi			١		j
60	992-00040-011	WASHER,4	2		в		
1	f	WASHER,SMALL,5	2				
- 1		WASHER,SMALL,5	2		c		j
		tar tar garri maga	-				
				Щ.			


^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Siow move E=N.L.A. F=Superceded or replaced by a new part

FIGURE 6 cont.

REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO.	REMARKS	
63	992-00040-011	WASHER,4	2		В			
65	992-00050-011	WASHER,SMALL,5	1		C			
66	992-00050-011	WASHER,SMALL,5	1		lс			
67	992-10050-012	WASHER,S,5	1		A			
68	700-15008-014	PIPE,FUEL,5X8X14	1		С	;		
				ĺ	l			

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.7 OIL PUMP & HANDLE

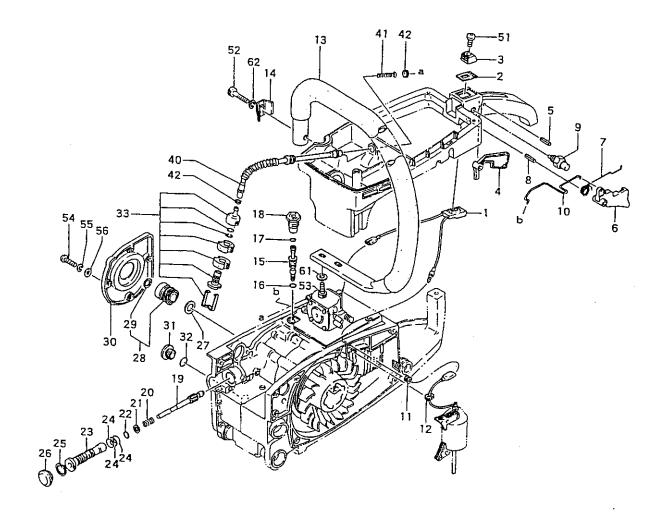

REF	PART NO.	PART DESCRIPTION		,		SERIAL NO	REMARKS
1	170-11600-802		17	<u> </u>	Ĉ		TEMATIKO
2	925-32600-200	DECAL,STOP BUTTON	1	1	D		
3	258-11650-20	BUTTON,STOP	;		С		
4	257-32600-201	l ·	1		D		
5	993-24004-180	7			D		
6	060-32600-211	LEVER,THROTTLE	¦				
	000-02000-211	LEVEN, IHAOTTLE	'		D		
7	061-32600-201	SPRING, THROTTLE LEVER	1		D		
8		PIN,SPRING,5X25			D		
9	064-33225-800			1	С		·
10	490-32650-201	ROD, THROTTLE	',				
11		GROMMET, PRIMARY CORD			В	'	
12	203-04019-202	•	1		C		
12	203-06000-200	GROMMET, PRIMARY CORD	1		C	~C189252	
12	203-11660-200	GROMMET, PRIMARY CORD	1			C189253~	
1	209-32650-800	HANDLE, FRONT			D	C169255~	
	211-32600-200	1					
		ADJUSTER,OIL PUMP			D		
	i	1			D		
17		· · · · · · · · · · · · · · · ·		Ì	D		
''	999-67005-012	O-RING,S-5			D		
18	503-32600-200	CAP,OIL PUMP ADJUSTER	1		D		
	085-32600-210		1	ŀ	D	ļ	İ
		SPRING,GEAR,PUMP		l	D	ĺ	
		WASHER, SPECIAL, A		ı	ם		·
[999-67006-012			- 1	c		
	071-32600-800	CYLINDER,OIL PUMP			D		· [
		372.1.02.1,012.1 0.011			٦		
24	999-67009-012	O-RING,S-9	3		c		
25	993-51016-002	RING,STOP,16	1		Ы	1	
26	052-32500-200	GROMMET,RUBBER A	1	- 1	D		·
	430-32600-200	WASHER,THRUST	1	- 1	D]	
28	084-32600-903	GEAR,SCREW,ASS'Y	1	ł	D	Ì	
		SEAL,OIL,#12163		- 1	D		
					٦		
30	097-32600-210	COVER,OIL PUMP	1		D		
i		CAP,OIL LEVEL		- 1	D	į	
	525-32530-200	•		- 1	D	1	j
	999-67012-500	-		- 1	D		j
	999-67020-000		1		C		
	675-01630-900	·	<u>'</u> ,'	- 1			
55	0,001000-300	FILTERY OLL	1		Α		
40	678-11650-201	PIPE,RUBBER	1		в		Į
	,	COIL,PROTECTION			D		
	680-04019-210	·	2	- 1	В		
		,-	-		٦		

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Siow move E=N.L.A. F=Superceded or replaced by a new part

FIGURE 7 cont.

REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO	REMARKS
51	990-11030-101	SCREW,3X10	1		В		
52	990-51080-353	BOLT,HEX.HOLE,8X35	1		D		
53	990-51050-183	BOLT,HEX,5X18	2	ĺ	D	~C189252	
53	990-51050-153	BOLT,HEX.HOLE,5X15	2		С	C189253~	
54	990-11040-101	SCREW,4X10	4		Α		
55	992-10040-012	WASHER,S,4	4		В		
ļ i							
56	992-00040-011	WASHER,4	4		В		
61	992-01050-011	WASHER,5	2		Α		
62	992-10080-012	WASHER,S,8	1		В		

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.8 TOOLS

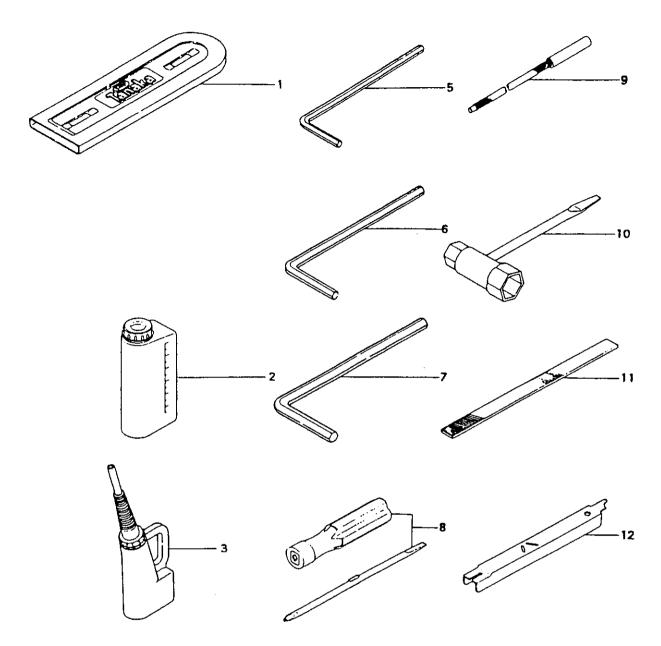


FIGURE 8

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
1	BCC-200	COVER,BAR/CHAIN,20"	1		D		
2	872-20000-201	CANISTER,FUEL PREMIX	1		D		
3	872-29040-900	BOTTLE,FUEL MIXING	1		Ε		
5	812-20000-200	WRENCH,HEX.3	1		D		
6	813-20000-200	WRENCH,HEX,4	1		D		
7	815-20000-200	SPANNER,6,HEX/BAR	1		D		
						:	
8	901-32600-900	DRIVER,ASS'Y	1		D		
9	CSF-316	FILE,ROUND,3/16"	1		D		
10	883-32600-200	SPANNER,COMBO	1	1	D		
11	CSF-800	FILE,FLAT,8"	1		D		
12	CDG-600	GUAGE,DEPTH	1		D		

FIG.9 MARKS

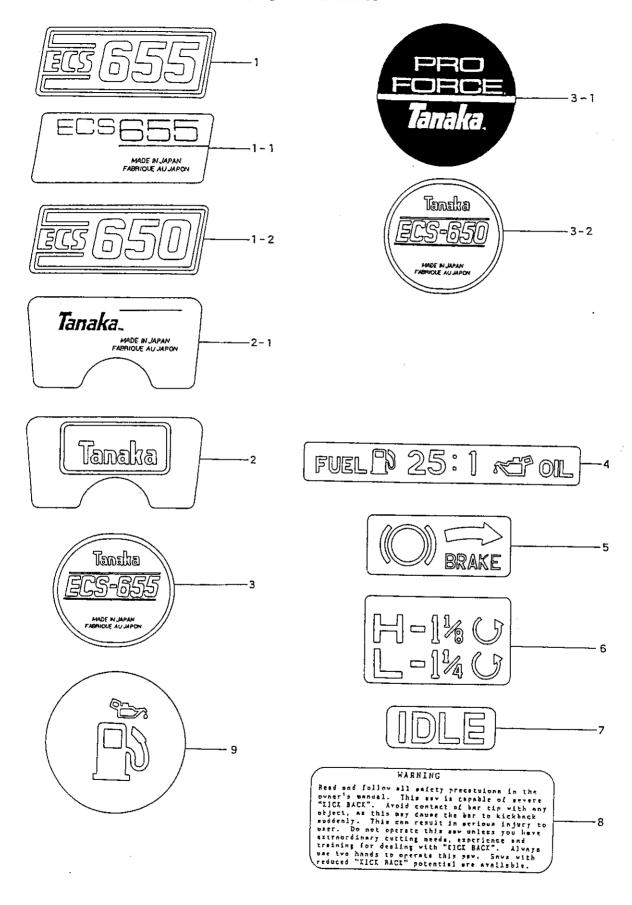


FIGURE 9

REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO	REMARKS				
1-2	906-32650-200	DECAL	1		D	~K102600					
1-1	906-32653-201	DECAL	1		D	~P050120					
1	906-32656-20	DECAL	1		D	P050121~					
2	929-11650-201	DECAL	1		D	~K102600					
2-1	929-11653-200	DECAL	1		D	~P050120					
3-2	915-32650-202	DECAL,STARTER	1		D	~K102600					
3-1	950-32603-200	DECAL,PRO-FORCE A	1		D	~P050120	į				
3	91532656201	DECAL,STARTER	1		D	P050121~					
4	935-32600-200	DECAL	1		D,						
5	93732600200	DECAL	1		D						
6	91032650230	DECAL, CAUTION, CARBURETOR	1		D						
7	I	DECAL,IDLE	1		D						
			İ	ļ							
8	907-32653-200	DECAL, CAUTION	1		Ы						
9	920-32650-201	DECAL, FUEL	1		Ε						
				Í							

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part