



Ref.No.	Part No.	Part Name & Description	Per Unit
1	357	SPRING PIN	1
2	S3428	BASE	1
3	487	ADJUSTING BOLT	2
4	197	SPRING	1
5	S6388	SPRING WASHER	2
6	S6398	PLAIN WASHER	1
7	K6648	TOOTHED LOCK WASHER	2
8	S6258	FLANGE SOCKET	1
9	K1178	OUTER WASHER	1
10	K6208	ALUMINUM TIGHT SCREW	3
11	S3108	SAFETY COVER A	1
12	L1168	INNER WASHER	1
13	427	STOP RING	1
14	Y1198	LOWER GUARD	1
15	L0928	SPRING	1
16	K0398	LOWER GUARD STOPPER	1
17	S3118	SAFETY COVER B	1
18	L6537	SQUARE SCREW	1
19	S6688	STOPPER WASHER	1
20	L0078	PIPE	1
21	K6698	PILING CATAHATS WASHER	1
22	S6348	DEPTH ADJUSTING NUT	1
23	Y0897	DEPTH ADJUSTMENT LEVER	1
24	S0168	E RING	1
25	208	FREARSON SCREW	20
26	K9078	TAPPING SCREW	1
27	977	O RING	1
28	K3078	HOUSING AB SET	1
29	K3088	HOUSING C	1
30	Y0368	SPINDLE LOCK BUTTON	1
31	L0168	LOCK BUTTON SPRING	1
32	Y1587	OFF LOCK LEVER	1
33	L0917	OFF LOCK SPRING	1
34	L0508	PIN	1
35	L1458	GEAR BOX ASSEMBLY	1
36	L1768	GEAR BOX	1
37	847	THRUST PLATE	2
38	L1438	MID GEAR	1
39	L1468	MOTOR ROTOR ASSEMBLY	1
40	L0448	CURRENT PLATE	1
41	S9038	P TIGHT SCREW	2
42	L1188	STATOR	1
43	L2308	BRUSH ASSEMBLY	1
44	Y2008	SWITCH	1
45	S0068	BATTERY CONTACTS	1
46	207	DUST PREVENTIVE PLATE	1
47	K7868	HEX WRENCH	1
48	S6298	SET SCREW	1
-	K7018	TOOL CASE	1
-	K8008	INDIVIDUAL BOX	1
-	K8108	OPERATING INSTRUCTIONS	1