



**BOSCH**

# Circular saw

GKM 18V-50 | 3 601 FB8 080

---

## Table of Content

Spare parts list.....	2
Illustration - Type.....	4

## Spare parts list

Item	Part Number	Description
2	2 610 034 094	Screw
10	2 610 034 144	Screw
11	2 610 033 566	Bearing Housing
12	2 610 034 143	Gasket
13	2 610 034 157	Compression Spring
14	2 610 034 095	Knob
26	2 610 034 145	Screw
27	2 610 033 564	Bumper
28	2 610 034 140	Screw
29	2 610 031 712	Extension Spring
30	2 610 033 580	Bushing
31	2 610 033 559	Flap Guard
32	2 610 034 151	Plain Washer
33	2 610 034 153	Retaining ring
34	2 610 033 579	Seal
35	2 610 033 571	Intermediate Flange
37	2 610 033 572	Washer
38	2 610 033 581	Locking Bolt
44	2 610 034 142	Lens
45	2 610 034 161	Hexagon Socket Wrench
48	2 610 035 267	Ferrite
49	2 610 013 564	Compression Spring
50	2 610 034 103	Torsion Spring
51	2 610 033 560	Trigger
52	2 610 034 156	Compression Spring
53	2 610 033 561	Locking Lever
54	2 610 033 576	Baffle
55	2 610 033 577	Baffle
56	2 610 034 158	Screw
58	1 619 PB7 080	Nameplate
59	1 619 PB6 970	Manufacturer's nameplate
60	2 610 034 146	Screw
61	2 610 034 148	Locking Bolt
62	2 610 034 147	Hex Nut
64	2 610 034 141	Locking Bolt

## Spare parts list

Item	Part Number	Description
65	2 610 034 150	Washer
66	2 610 033 578	Fastening Rod
67	2 610 033 563	Adjusting Lever
68	2 610 034 159	Screw
70	1 619 PB6 963	Upper guard
71	1 619 PB6 964	Upper guard
72	1 619 PB6 952	Window
73	1 619 PB6 966	Cover
74	1 619 PB6 951	Lid Lock
75	1 619 PB6 974	Screw
77	1 619 PB4 911	Electronics Module
79	1 619 PB6 973	Washer
80	2 610 036 144	Product label
81	1 619 PB7 064	Shrinkable Tube
91	2 607 337 069	Battery Pack      BBS MR, 18V, 5,0 Ah 48 S
201	2 610 034 087	DC motor
202	2 610 034 090	Gear
203	2 610 034 096	Assembly Hook
204	1 619 PB6 972	Housing Assembly
650	1 619 PA9 720	Parallel-Guide
651	1 619 PA9 719	Wing Screw
653	2 607 226 267	Fast Charger      CN GAL 18V-40

