



BOSCH

Multipurpose tool

GOP30-28 | 3 601 B37 010

Table of Content

Spare parts list.....	2
Illustration - Type.....	3

Spare parts list

Item	Part Number	Description	Illustration
4	2 609 125 028	Electronics Module	1
5	2 604 460 186	Power supply cord USA/CDN 2,68m 2 x 082mm SJ 18/2	1
6	2 600 703 013	Grommet Ø7,6-Ø8,2x95 MM	1
7	2 601 035 001	Cable Clip	1
8	2 609 131 901	Type Label	1
9	2 609 136 617	Manufacturer's nameplate GOP30-28	1
10	2 609 100 929	Ball Joint	1
12	1 607 233 453	Electronics Module	1
15	1 619 P09 249	Brush Holder	1
16	2 609 100 914	Switch Slide	1
17	2 609 100 915	Switch Button	1
18	2 609 100 911	Brush-Cover	1
19	2 609 100 912	Brush-Cover	1
20	2 609 100 909	Housing Cover	1
21	2 609 101 664	Gear Cover	1
24	2 609 101 674	Air-Deflector Ring	1
25	2 609 199 957	Gear Box	1
31	2 609 170 312	Rubber Gasket	1
36	2 600 210 056	O-Ring 31,0x2,0 MM	1
37	2 609 112 154	Screw	1
38	2 603 490 016	Torx Oval-Head Screw 3x8	1
39	2 603 490 020	Torx Oval-Head Screw 4x8	1
40	2 603 490 022	Screw 4x16	1
41	2 603 490 024	Torx Oval-Head Screw 4x25	1
46	1 619 P02 809	Spiral Spring	1
47	3 602 311 050	Key Holder	1
59	2 609 101 682	Safety Cover	1
653	2 609 110 831	Key	1
801	2 609 199 346	Housing Assembly	1
803	2 604 011 960	Armature 110-127V	1
810	1 619 P02 870	Carbon-Brush Set	1

