



## Model GRM03 Parts List

A = Standard Equipment

O = Circuit Diagram

Item#	Part#	Description	Q'ty Unit
001	SE00000521	SCREW PTB 3X8(ZK) 29S16308001	6 PC.
002	SE00001033	PCB A+M ASS'Y	1
003	SE00000521	SCREW PTB 3X8(ZK) 29S16308001	8 PC.
004	SE00001036	PCB C ASS'Y	1
005	SE00000521	SCREW PTB 3X8(ZK) 29S16308001	8 PC.
006	SE09064161	SCREW M4X16	4 PC.
007	SE00001038	FRONT CABINET ASS'Y	1
	D10	INC. 8-12	
008	SE00000968	POWER KEY	1 PC.
009	SE00000969	PRESET KEY	1 PC.
010	SE00000970	INFO KEY	1 PC.
011	SE00001039	JACK RUBBER COVER	1
012	SE00000973	EQ KEY	1 PC.
013	SE00000754	EN/SW WASHER	1 PC.
014	SE00000755	EN/SW NUT	1 PC.
015	SE21B1110A	ROTARY KNOB RING	1 PC.
016	SE00000698	ROTARY KNOB	1 PC.
017	SE00000975	FRONT CABINET PACKING	1 PC.
018	SE00000977	FRONT BUMPER	1 PC.
019	SE00000160	SCREW PTHE6X47(CR)	4 PC.
020	SE00000980	FRONT BAR	2 PC.
021	SE00000981	BATTERY BUMPER L	1 PC.
022	SE00000982	BATTERY BUMPER R	1 PC.
023	SE00000709	SCREW PTHE 6X33(CR)	2 PC.
024	SE00000983	REAR BUMPER	1 PC.
025	SE00000984	LOCKER COVER	1 PC.
026	SE00000985	PIN D2X89	1 PC.
027	SE00000536	LOCKER HINGE 3300B30000010	1 PC.
028	SE00000987	BATTERY COVER ASS'Y	1 PC.
	D10	INC. 25-27,29,30	
029	SE00000539	PIN D2X77 2100B300200	1 PC.
030	SE00000872	XGT PLATE	1 PC.
031	SE00000990	BATTERY COVER FIXER PIN	1 PC.
032	SE00000521	SCREW PTB 3X8(ZK) 29S16308001	4 PC.
033	SE00000991	BATTERY COVER PACKING	1 PC.
034	SE0307PC5Z	BACK UP BATTERY COVER	1 PC.
035	SE021E9030	+/- BATTERY CONTACT ASS'Y	1 PC.
036	SE00000467	BATTERY CONTACT (-)2100PL00200	1 PC.
037	SE00000466	BATTERY CONTACT(+) 2100RA00700	1 PC.
038	SE00000176	SCREW PTHE6X20(CR)	1 PC.
039	SE00000715	SCREW PTHE 6X17(CR)	1 PC.
040	SE00000993	HANDLE L	1 PC.
041	SE00000994	HANDLE BAR	1 PC.
042	SE00000184	SPRING	2 PC.
043	SE09994007	STEEL BALL	2 PC.
044	SE00000996	HANDLE R ASS'Y	1 PC.
045	SE00000176	SCREW PTHE6X20(CR)	1 PC.
046	SE09994007	STEEL BALL	2 PC.
047	SE00000184	SPRING	2 PC.

048	SE00000716	SCREW PTHE 7X16(CR)	1 PC.
049	SE00000717	SCREW PTHE 10.8X4.5(CR)	1 PC.
050	SE00000997	SPEAKER GRILL L ASS'Y	1 PC.
051	SE00000521	SCREW PTB 3X8(ZK) 29S16308001	2 PC.
052	SE00000521	SCREW PTB 3X8(ZK) 29S16308001	4 PC.
053	SE00000728	SPEAKER ASS'Y 2.5"	1 PC.
054	SE00000729	SPEAKER 2.5" PACKING	1 PC.
055	SE00000521	SCREW PTB 3X8(ZK) 29S16308001	6 PC.
056	SE00000998	SPEAKER HOLDER L	1 PC.
057	SE00000999	PCB J ASS'Y	1 PC.
058	SE00000521	SCREW PTB 3X8(ZK) 29S16308001	4 PC.
059	SE00001000	SPEAKER HOLDER PACKING	1 PC.
060	SE00000718	HANDLE SUS-PLATE L	1 PC.
061	SE00001001	REAR CABINET ASS'Y	1 PC.
	D10	INC. 35-37,79	
062	SE00000445	SCREW PTB 3X45(NI)	2 PC.
063	SE00000722	HANDLE SUS-PLATE R	1 PC.
064	SE00001004	DC JACK PACKING	1 PC.
065	SE00001000	SPEAKER HOLDER PACKING	1 PC.
066	SE00000521	SCREW PTB 3X8(ZK) 29S16308001	2 PC.
067	SE00001005	PCB F ASS'Y	1 PC.
068	SE00001006	SPEAKER HOLDER R	1 PC.
069	SE00000521	SCREW PTB 3X8(ZK) 29S16308001	7 PC.
070	SE00000729	SPEAKER 2.5" PACKING	1 PC.
071	SE00000728	SPEAKER ASS'Y 2.5"	1 PC.
072	SE00000521	SCREW PTB 3X8(ZK) 29S16308001	4 PC.
073	SE00001007	SPEAKER GRILL R ASS'Y	1 PC.
074	SE00000726	DC JACK COVER	1 PC.
075	SE00000404	SCREW PTHE 3X14(CR)	1 PC.
076	SE00000521	SCREW PTB 3X8(ZK) 29S16308001	2 PC.
077	SE00001008	PCB D ASS'Y	1 PC.
078	SE00000521	SCREW PTB 3X8(ZK) 29S16308001	4 PC.
079	SE00001009	CNT/W-A 220(2+2P)R/B	1 PC.
080	SE00000521	SCREW PTB 3X8(ZK) 29S16308001	2 PC.
081	SE00000735	REAR PLATE	1 PC.
082	SE09064161	SCREW M4X16	2 PC.
083	SE00000734	SPEAKER PLATE	1 PC.
084	SE00000736	SCREW JMF 3X10 ZK	2 PC.
085	SE00000738	SPEAKER 4" PACKING	1 PC.
086	SE00001010	SPEAKER ASS'Y 4"	1 PC.
087	SE09064161	SCREW M4X16	4 PC.
088	SE00001011	SPEAKER GRILL B	1 PC.
089	SE00000741	SCREW PTT 3X8(ZK)	4 PC.
090	SE00000894	XGT TERMINAL(36V) ASS'Y	1 PC.
091	SE00000193	SCREW 3X10	5 PC.
092	SE00001013	LXT TERMINAL ASS'Y	1 PC.
093	SE00000521	SCREW PTB 3X8(ZK) 29S16308001	2 PC.
094	SE00001014	CXT TERMINAL ASS'Y	1 PC.
095	SE00000521	SCREW PTB 3X8(ZK) 29S16308001	2 PC.
096	SE00000195	W/TIES 100MM	2 PC.
097	SE00001015	REAR CABINET PACKING	1 PC.
A01	SE00000681	AC ADAPTER (UL)	1 PC.