



BOSCH

Percussion Drill

GSB 400 RE | 0 601 14B 743

Table of Content

Spare parts list.....	2
Illustration - Type.....	4

Percussion Drill | GSB 400 RE | 0 601 14B 743

Spare parts list

Item	Part Number	Description
1	2 609 100 142	Housing
2	2 604 220 423	Field 220-240V
3	2 604 011 048	Armature 220-240V
3/60	1 619 P11 262	Fan
4	1 607 200 169	On-Off Switch
5	1 614 460 072	Power supply cord
6	2 600 707 059	Grommet Ø6,9 MM
7	2 601 035 001	Cable Clip
9	2 609 130 738	Manufacturer's nameplate
12	2 607 329 114	Suppression Filter
13	2 600 905 046	groove ball bearing 8x19x6
14	2 600 917 003	Needle-Roller Bearing Ø8x8 MM
16	2 609 992 606	Brush Plate
18	2 603 410 001	Socket head cap screw M3x6,5-4.8
19	2 910 611 019	Tapping Screw DIN 7981-ST3,9x16-C-H
20	2 609 130 648	Reference Plate
26	2 601 022 000	Damping Plate
29	1 900 210 000	O-Ring 5,0x1,5 MM
30	2 601 990 000	Indexing Disk
31	2 600 100 034	Supporting Disc
32	2 600 025 005	Pressure Plate
33	1 903 230 011	Ball DIN 5401-6 G28
35	2 910 951 132	Oval-Head Screw DIN 7985-M4x25-8.8
38	2 600 301 013	Sintered-Metal Bushing
41	2 601 290 014	Disc Spring
45	2 604 448 103	Earth Conductor
46	2 604 448 060	Cable L=173 MM WHITE
47	2 604 448 045	Cable L=98 MM BLACK
48	2 604 448 203	Connecting Cable
50	2 604 448 253	Connecting Cable
51	2 604 448 252	Connecting Cable
64	2 910 611 007	Tapping Screw DIN 7981-B2,9x16-C-H
739	1 608 571 047	Key Chuck Ø 1-10 MM, 3/8"
739/700	2 607 950 007	Chuck Wrench SG2
780	2 602 025 032	Auxiliary Handle Ø43 MM BLACK

Spare parts list

Item	Part Number	Description
781	2 607 010 026	Depth-Gauge
808	1 601 11A 3H3	Nameplate
816/04	2 604 321 911	Carbon-Brush Set
816/06	2 601 322 013	Ratchet Cap
825	2 607 200 231	Change-Over Switch
828	2 910 611 020	Tapping Screw DIN 7981-ST3,9x19-C-H
834	2 605 807 917	Bushing
836	2 606 135 909	Drilling Spindle Z=45
843	2 910 611 006	Tapping Screw DIN 7981-ST2,9x13-C-H

Illustration - Type - E

0 601 14B 704

Stand 01-08-21
Issue 01-08-30

Fig./Abb. 1

