



BOSCH

Demolition Hammer

GSH 11 VC | 3 611 C36 080

Table of Content

Spare parts list.....	2
Illustration - Type.....	5

Spare parts list

Item	Part Number	Description
1	1 615 108 157	Motor Housing
2	1 604 220 52F	Field 230V
3	1 614 011 120	Armature 230V
4	1 607 200 244	Switch
5	1 614 460 088	Power supply cord CN 4,15m 2 x 1,0mm H07 RN-F
6	1 610 703 053	Grommet Ø9,7-Ø12x89 MM
7	1 601 302 018	Fastening Clamp
9	1 601 11C 0U4	Manufacturer's nameplate
14	1 600 905 028	groove ball bearing
15	1 616 610 106	Fan
16	1 610 499 076	Guide Sleeve
17	1 613 103 012	Locking Bolt
18	1 610 224 011	Spring retaining ring
19	1 616 490 071	Carrier
21	1 610 508 025	Protective Cap
22	1 610 499 078	Protection Sleeve
23	1 610 520 005	Stop Sleeve
24	1 614 601 020	Retaining ring
25	1 612 300 025	Stopping Device
26	1 610 290 105	Indexing Disk
27	1 610 101 024	Stop Disc
28	1 614 621 014	Conical helical spring
29	1 614 621 015	Compression Spring
30	1 611 015 063	Sealing Frame
31	1 610 290 106	Damping Ring
32	1 610 210 214	Sealing Frame
33	1 610 591 047	Air-Deflector Ring
34	1 610 591 048	Air Path
35	1 615 806 243	Hammer Pipe
36	1 610 190 066	Perforated Ring
37	1 610 420 006	Control Bushing
38	1 615 190 173	Covering hood
39	1 610 283 052	Rotary shaft lip seal
43	1 615 500 426	Brush-Cover

Spare parts list

Item	Part Number	Description	
44	1 610 322 017	Guide Sleeve	
46	1 615 500 427	Holding-Down-Appliance	
49	1 604 477 020	Plug Holder	
50	1 610 206 028	Stop Ring	
51	1 615 500 424	Housing Cover	
52	1 615 500 425	Housing Cover	
54	1 610 190 069	Control Disc	
55	1 610 500 024	Retaining snap ring	
71	1 613 101 014	Straight Pin	
73	1 610 320 015	Eccentric Bolt	
75	1 615 132 132	Handle	
75/82	1 610 415 003	Bellows	
75/83	1 614 621 009	Compression Spring	
80	1 617 233 052	Speed governor	
81	1 611 038 018	Inserted Part	
104	1 610 210 219	Damper	
121	1 610 200 032	Retaining snap ring	
123	1 610 900 033	groove ball bearing	20x47x14
124	1 610 900 034	groove ball bearing	20x42x12
126	2 603 490 023	Torx Oval-Head Screw	4x20
127	1 613 490 022	Torx Oval-Head Screw	6x30
128	1 613 414 026	Torx socket button screw	
129	1 613 490 024	Torx Oval-Head Screw	M5x20
132	1 613 490 025	Torx Oval-Head Screw	6x20
133	1 613 490 026	Torx Oval-Head Screw	5x25
134	1 613 490 027	Torx Oval-Head Screw	3,5x16
139	1 610 209 017	Felt Washer	
143	1 614 601 071	Retaining ring	
144	1 610 101 023	Supporting Disc	
163	1 610 224 012	Spring retaining ring	
164	1 610 224 013	Spring retaining ring	
166	1 610 209 011	Solenoid Ring	
167	2 915 050 107	Hex Nut	DIN 439-BM8-04
172	1 610 210 216	O-Ring	
173	1 610 100 021	Disc	

Spare parts list

Item	Part Number	Description
184	1 610 210 218	Damping Ring
808	1 601 11A 3H5	Nameplate
810	1 617 000 750	Carbon Brush
813	1 617 000 744	groove ball bearing
820	1 617 000 745	Toolholder
840	1 617 000 746	Impact Mechanism Housing
841	1 617 000 747	Striker Pin
845	1 617 000 748	Gear Cover
847	1 617 000 749	Brush Holder
856	1 617 000 751	Hammer Piston
857	1 617 000 752	Striker
870	1 617 000 753	Connecting Rod
872	1 600 A00 5A4	Eccentric Cog Wheel
878	1 610 210 215	O-Ring
886	1 617 000 755	O-Ring
887	1 617 000 756	O-Ring
888	1 617 000 757	Parts Set
897	1 617 000 758	Wear and Tear Part Set
85	1 602 025 081	Auxiliary Handle
86	2 911 021 267	Hex Screw
87	1 600 A01 BH0	Clamping Band
88	1 619 P16 922	Star Knob
89	1 600 A00 8BL	Clamping Piece
650	1 615 438 492	Carrying Case
883	1 613 490 019	Hex Screw
884	1 602 025 08T	Auxiliary Handle
885	1 602 025 08J	Auxiliary Handle

Illustration - Type - E

3 611 C36 040
Issue |
Stand | 19-11-19 **Fig./Abb. 1**


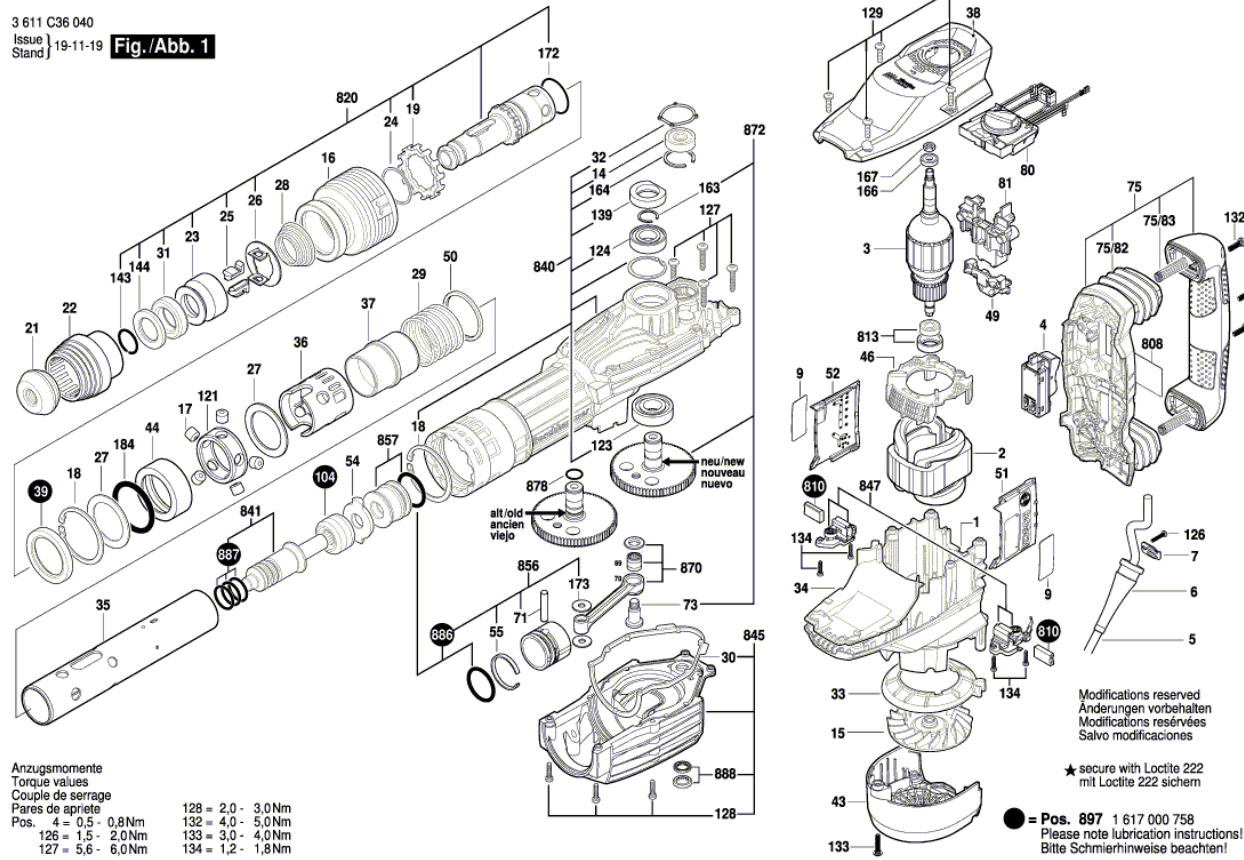 




Illustration - Type - E

3 611 C36 040
Issue |
Stand | 17-03-29 **Fig./Abb. 2**

 alt/ancien
old/viejo

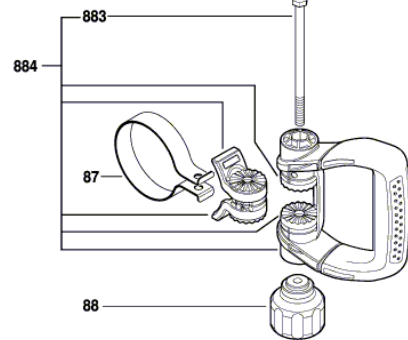

neu/nouveau
new/nuevo

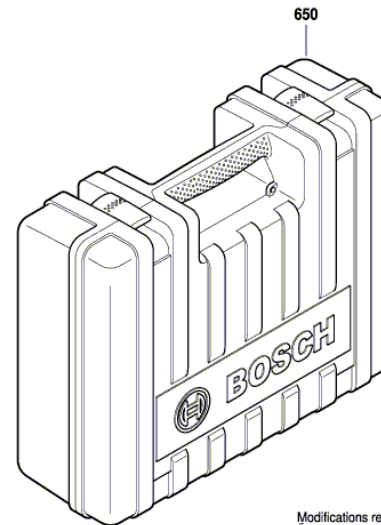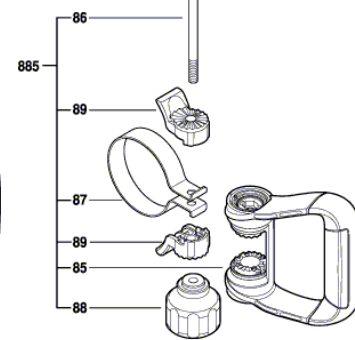  

Modifications reserved
Änderungen vorbehalten
Modifications réservées
Salvo modificaciones