



BOSCH

Demolition Hammer

GSH 27 | 3 611 C0A 082

Table of Content

Spare parts list.....	2
Illustration - Type.....	5

Spare parts list

Item	Part Number	Description
2	1 604 220 52R	Field 220-240V
4	1 605 820 23G	Bearing cover
5	1 610 900 015	groove ball bearing 12x37x12
6	1 615 500 214	Screw Plug
7	1 615 108 104	Insulating Housing
8	1 616 610 089	Fan
9	1 613 313 000	Hex Nut DIN 985-M12X1
11	1 610 108 013	Felt Washer
12	1 610 102 616	Supporting Disc 1,0 MM THICK
15	1 610 910 091	Needle-Roller Bearing D35xD47x17
17	1 610 210 210	O-Ring
19	1 600 A01 4TX	Eccentric Shaft
21	1 616 318 009	Cylindrical Gear Z=45
22	1 616 328 036	Cylindrical Gear Z=19/52
23	1 610 913 005	Needle-Roller Assembly
24	1 600 A01 4T0	Gear Cover
26	1 610 910 092	Needle-Roller Bearing D25xD37x17
27	1 610 210 213	O-Ring
29	1 610 910 097	Needle-Roller Bearing
35	1 610 210 211	O-Ring
37	1 600 A01 4T8	Guide Tube
38	1 600 A01 4U0	Supporting Disc
39	1 610 290 103	Damping Ring
40	1 600 A01 4U1	Intermediate Flange
41	1 610 210 008	O-Ring 17,3x17,7 MM
42	1 600 A01 4TU	Striker Pin
44	1 618 045 026	Retaining Bracket
45	1 613 103 004	Locking Bolt
46	2 917 760 187	Slotted Spring Pin 8x55 DIN 1481
47	1 600 A02 254	Sealing Frame
48	1 605 500 2HJ	Cover
50	3 600 421 500	Protection Sleeve
51	1 610 703 057	Cord guard
52	1 600 A01 4T5	Fan Cover
53	1 615 500 414	Covering hood

Demolition Hammer | GSH 27 | 3 611 COA 082

Spare parts list

Item	Part Number	Description	
55	1 614 460 075	Power supply cord H07 RN-F	CN 4,15m 2 x 1,0mm
56	1 610 703 055	Cord guard	
57	1 615 500 418	Switch Cover	
58	1 617 200 124	Switch	
59	1 600 A01 4U2	Intermediate Plate	
61	1 615 700 059	Dust Protection	
62	1 612 026 153	Switch-Pawl	
63	1 615 132 124	Handle	
64	1 616 334 000	Rubber Torsion-Bar	
65	1 613 060 005	Toothed Shaft	
66	1 610 290 101	Backup ring	
67	2 916 660 023	Spring retaining ring	DIN 472 52x2MM
68	1 613 465 001	Rubber Buffer	
69	3 611 COA 002	Demolition Hammer	
70	1 615 132 125	Handle	
73	1 603 435 036	Tapping Screw	4,8x78 MM, TORX T-20
74	2 916 160 010	Disc Spring	
75	1 614 614 009	Compression Spring	
76	1 611 302 015	Fastening Clamp	
85	1 614 336 045	Brush Holder	
85/96	1 614 448 037	Connecting Cable	
86	1 610 300 033	Bearing bolt	
87	1 610 900 027	groove ball bearing	25x52x15
88	1 610 283 016	Rotary shaft lip seal	
89	1 610 009 008	Spacer	
90	1 611 015 061	Rectangular Ring	
91	1 610 210 212	O-Ring	
94	1 611 015 021	Sealing Plate	
95	1 614 413 010	Wiring Harness	
97	2 915 011 007	Hex Nut	DIN 934-M6-8-A
99	3 613 313 500	Hex Nut	DIN 985-10-M10x1
104	2 910 141 201	Hex Socket Head Cap Screw M6x20-8.8	DIN 912-
105	2 914 551 188	Microencapsulated Screw M6X30-8.8	DIN 912-

Spare parts list

Item	Part Number	Description
106	2 914 551 189	Microencapsulated Screw DIN 912-M6X55-8.8
107	2 910 141 242	Hex Socket Head Cap Screw DIN 912-M8x20-8.8
108	2 603 490 023	Torx Oval-Head Screw 4x20
109	2 910 141 248	Hex Socket Head Cap Screw DIN 912-M8x35-8.8
110	2 910 141 356	Hex Socket Head Cap Screw DIN-M12x70-8.8
111	1 613 414 024	Hex Screw
112	1 613 490 021	Torx Oval-Head Screw
118	1 614 503 011	Suppression Filter
135	1 611 110 H20	Reference Plate
139	1 610 508 050	Plug
801	1 607 000 E6P	Motor Housing
803	1 614 011 139	Armature 220-240V
817	1 611 091 006	connecting terminal 2-POLE
825	1 617 000 727	Piston Assembly Group
834	1 617 000 728	Striker
837	1 600 A01 BG9	Guide Tube
843	1 607 000 C8U	Toolholder
854	1 617 000 730	Switch Housing
859	2 910 011 088	Socket head cap screw DIN 84-AM3,5x12-5.8
871	1 601 11A 3H5	Nameplate
872	1 617 000 731	Hammer Pipe
879	1 614 652 001	Spiral Spring
881	1 613 490 005	Torx Oval-Head Screw M4x10
882	1 610 151 007	Spring Lock Washer
883	1 617 000 425	Carbon-Brush Set
890	1 617 000 733	Un. Flange-Mtd. Motor
897	1 617 000 732	Wear and Tear Part Set
898	1 615 430 015	Grease Tube 225 ML

Illustration - Type - E

