



Operating Instructions and Parts Manual

12-inch XACTA[®] Cabinet Saw


Model JTAS-12-DX



JET
427 New Sanford Road
LaVergne, Tennessee 37086
Ph.: 800-274-6848
www.jettools.com

Part No. M-708546
Revision A1 02/2014
Copyright © 2014 JET

12.1.1 Table and Cabinet Assembly (JTAS-12-DX) – Exploded View

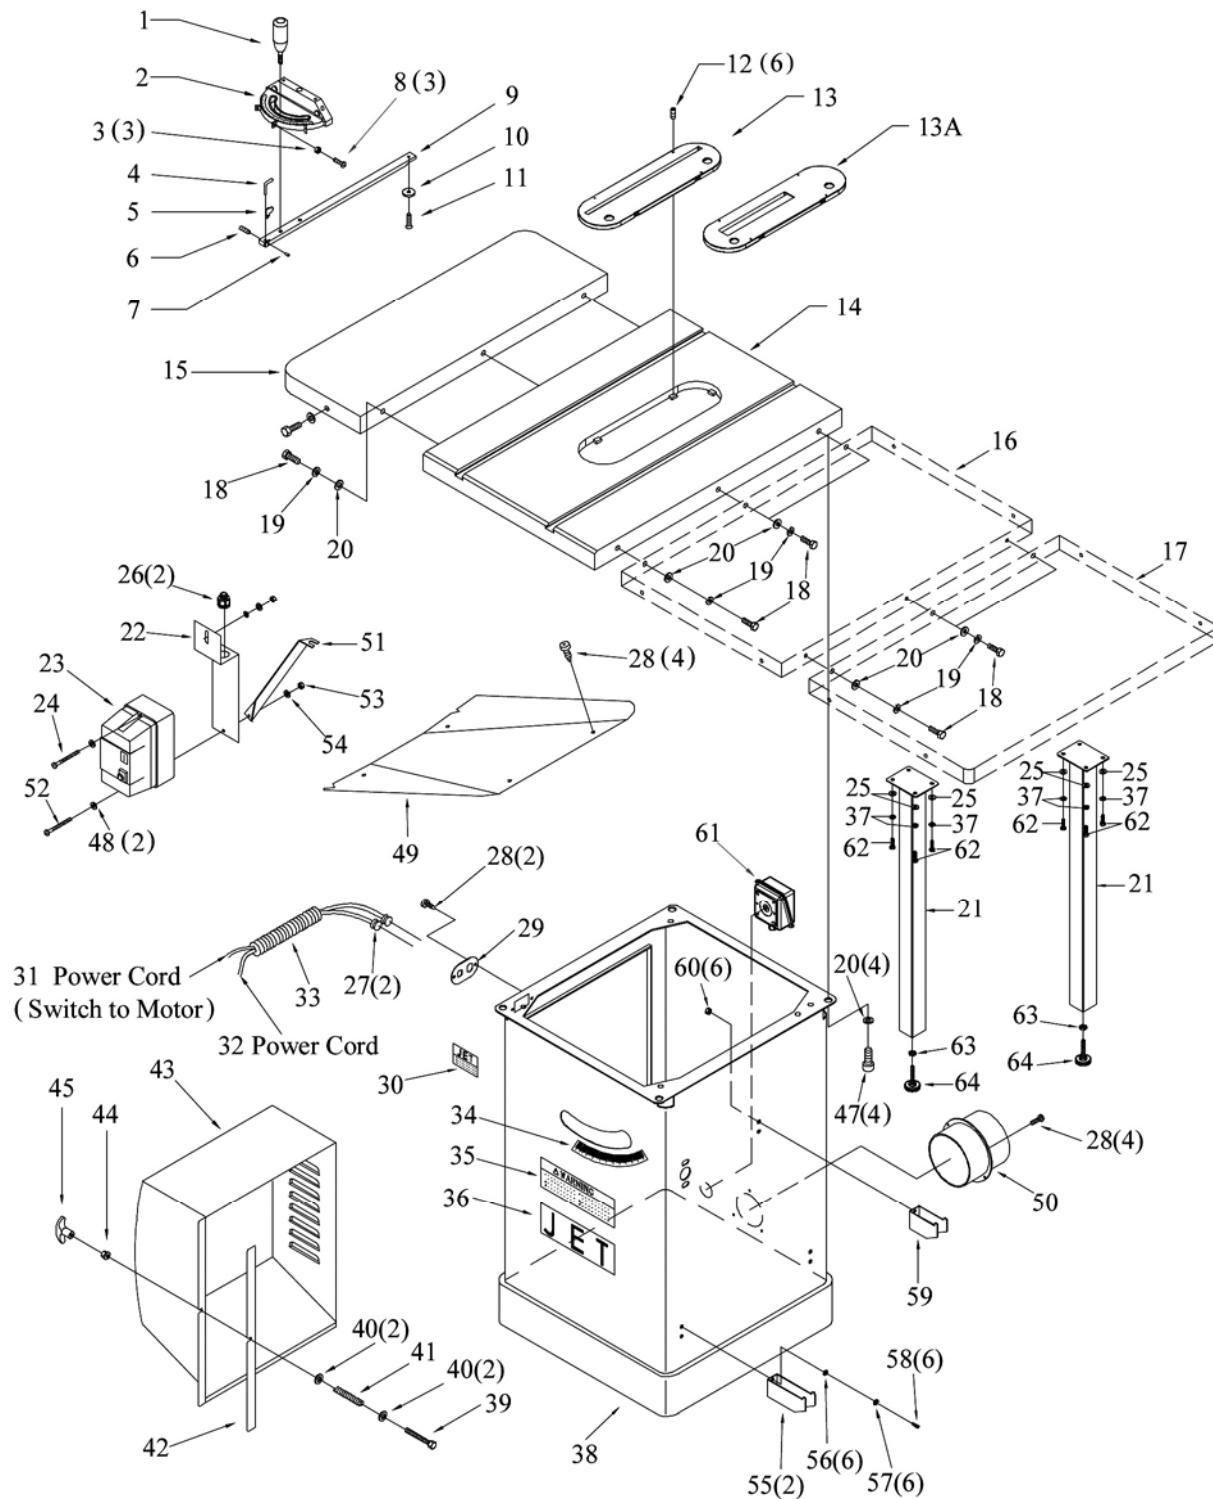


12.1.2 Table and Cabinet Assembly (JTAS-12-DX) – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|--------------|-----------------------------------|------------------|-----|
| 1 | JTAS10-1 | Lock Knob | | 1 |
| 2 | JTAS10-2 | Miter Gauge Body | | 1 |
| 3 | TS-1540031 | Hex Nut | M5 | 3 |
| 4 | JTAS10-4 | Pointer | | 1 |
| 5 | JTAS10-5 | Stop Link | | 1 |
| 6 | TS-1521011 | Socket Set Screw | M4x4 | 1 |
| 7 | JTAS10-7 | Special Pin | M3x6 | 1 |
| 8 | TS-2205201 | Hex Cap Screw | M5x20 | 3 |
| 9 | JTAS10-9 | Guide Bar | | 1 |
| 10 | JTAS10-10 | Guide Washer | | 1 |
| 11 | JTAS10-11 | Flat Head Screw | M6x8 | 1 |
| | JTAS10-MG | Miter Gauge Assembly (#1 thru 11) | | 1 |
| 12 | TS-0267041 | Socket Set Screw | 1/4"-20x3/8" | 6 |
| 13 | JTAS12DX-13 | Table Insert | | 1 |
| 13A | JTAS12DX-13A | Dado Insert | | 1 |
| 14 | JTAS12DX-14 | Table | | 1 |
| 15 | JTAS12DX-15 | Left Table Extension | 31-1/2"W x 10"R | 1 |
| 16 | JTAS12DX-16 | Inner Table Extension | 31-1/2"W x 23"R | 1 |
| 17 | JTAS12DX-17 | Outer Table Extension | 31-1/2"W x 23"R | 1 |
| 18 | TS-0061051 | Hex Cap Screw | 7/16"-14x1-1/2" | 9 |
| 19 | TS-0720101 | Lock Washer | 7/16" | 9 |
| 20 | TS-0680051 | Flat Washer | 7/16" | 13 |
| 21 | JTAS12DX-21 | Leg | | 2 |
| 22 | JTAS10-22W | Switch Plate | | 1 |
| 23 | JTAS12-23 | Magnetic Switch | .5HP, 1 Ph, 230V | 1 |
| 24 | TS-081C052 | Pan Head Screw | #10-24x3/4 | 1 |
| 25 | TS-0680031 | Flat Washer | 5/16" | 8 |
| 26 | JTAS10-26 | Strain Relief Bushing | | 2 |
| 27 | JTAS10-27 | Strain Relief Bushing | | 2 |
| 28 | JTAS10-28 | Tap Screw | M5x10 | 10 |
| 29 | JTAS10-29 | Cord Plate | | 1 |
| 30 | JTAS12DX-30 | Identification Plate | | 1 |
| 31 | JTAS12DX-31 | Power Cord (switch to motor) | 12AWG x 3C | 1 |
| 32 | JTAS12DX-32 | Power Cord | 12AWG x 3C | 1 |
| 33 | JTAS10-33 | Power Cord Sleeve | | 1 |
| 34 | JTAS10L-34 | Tilt Scale | | 1 |
| 35 | JTAS10-35 | Warning Label | | 1 |
| 36 | JTAS10-36 | JET Label | | 1 |
| 37 | TS-0720081 | Lock Washer | 5/16" | 8 |
| 38 | JTAS12DX-38 | Cabinet | | 1 |
| 39 | TS-1482101 | Hex Cap Screw | M6x50 | 1 |
| 40 | TS-0680021 | Flat Washer | 1/4" | 2 |
| 41 | JTAS10-41 | Spring | | 1 |
| 42 | JTAS10-42 | Foam Strip | | 1 |
| 43 | JTAS12DX-43 | Motor Cover | | 1 |
| 44 | TS-1541021 | Nylon Insert Lock Nut | M6 | 1 |
| 45 | JTAS10-45 | Handle | | 1 |
| 47 | TS-0210011 | Socket Head Cap Screw | 7/16"-14x3/4" | 4 |
| 48 | TS-0680011 | Flat Washer | 3/16" | 2 |
| 49 | JTAS12DX-49 | Lower Panel | | 1 |
| 50 | JTAS10L-50N | Dust Hose Adapter | | 1 |
| 51 | JTAS12DX-51 | Switch Brace Kit | | 1 |
| 52 | TS-081C062 | Screw | #10-24x1 | 1 |
| 53 | TS-0560071 | Hex Nut | #10-24 | 1 |
| 54 | TS-0733031 | Star Washer | #10 | 1 |
| 55 | JTAS10L-55 | Hook (large) | | 2 |
| 56 | TS-0680021 | Flat Washer | 1/4" | 6 |
| 57 | TS-0720071 | Lock Washer | 1/4" | 6 |
| 58 | TS-0207031 | Socket Head Cap Screw | 1/4"-20x5/8" | 6 |
| 59 | JTAS10L-59 | Hook (small) | | 1 |

| Index No. | Part No. | Description | Size | Qty |
|------------------|-------------------|-------------------------|-------------------|--------------|
| 60 | TS-0561011 | Hex Nut..... | 1/4"-20" | 6 |
| 61 | JTAS10L-61 | Electrical Box..... | | 1 |
| 62 | TS-0081031 | Hex Cap Screw..... | 5/16" x3/4" | 8 |
| 63 | TS-1540071 | Hex Nut..... | M10..... | 2 |
| 64 | JTAS12DX-64 | Leveling Foot | M10 x75 | 2 |
| | STRIPE-1-3/4..... | Stripe (not shown)..... | 1-3/4" wide | per 9.12 ft. |

12.2.1 Trunnion and Motor Assembly (JTAS-12-DX) – Exploded View

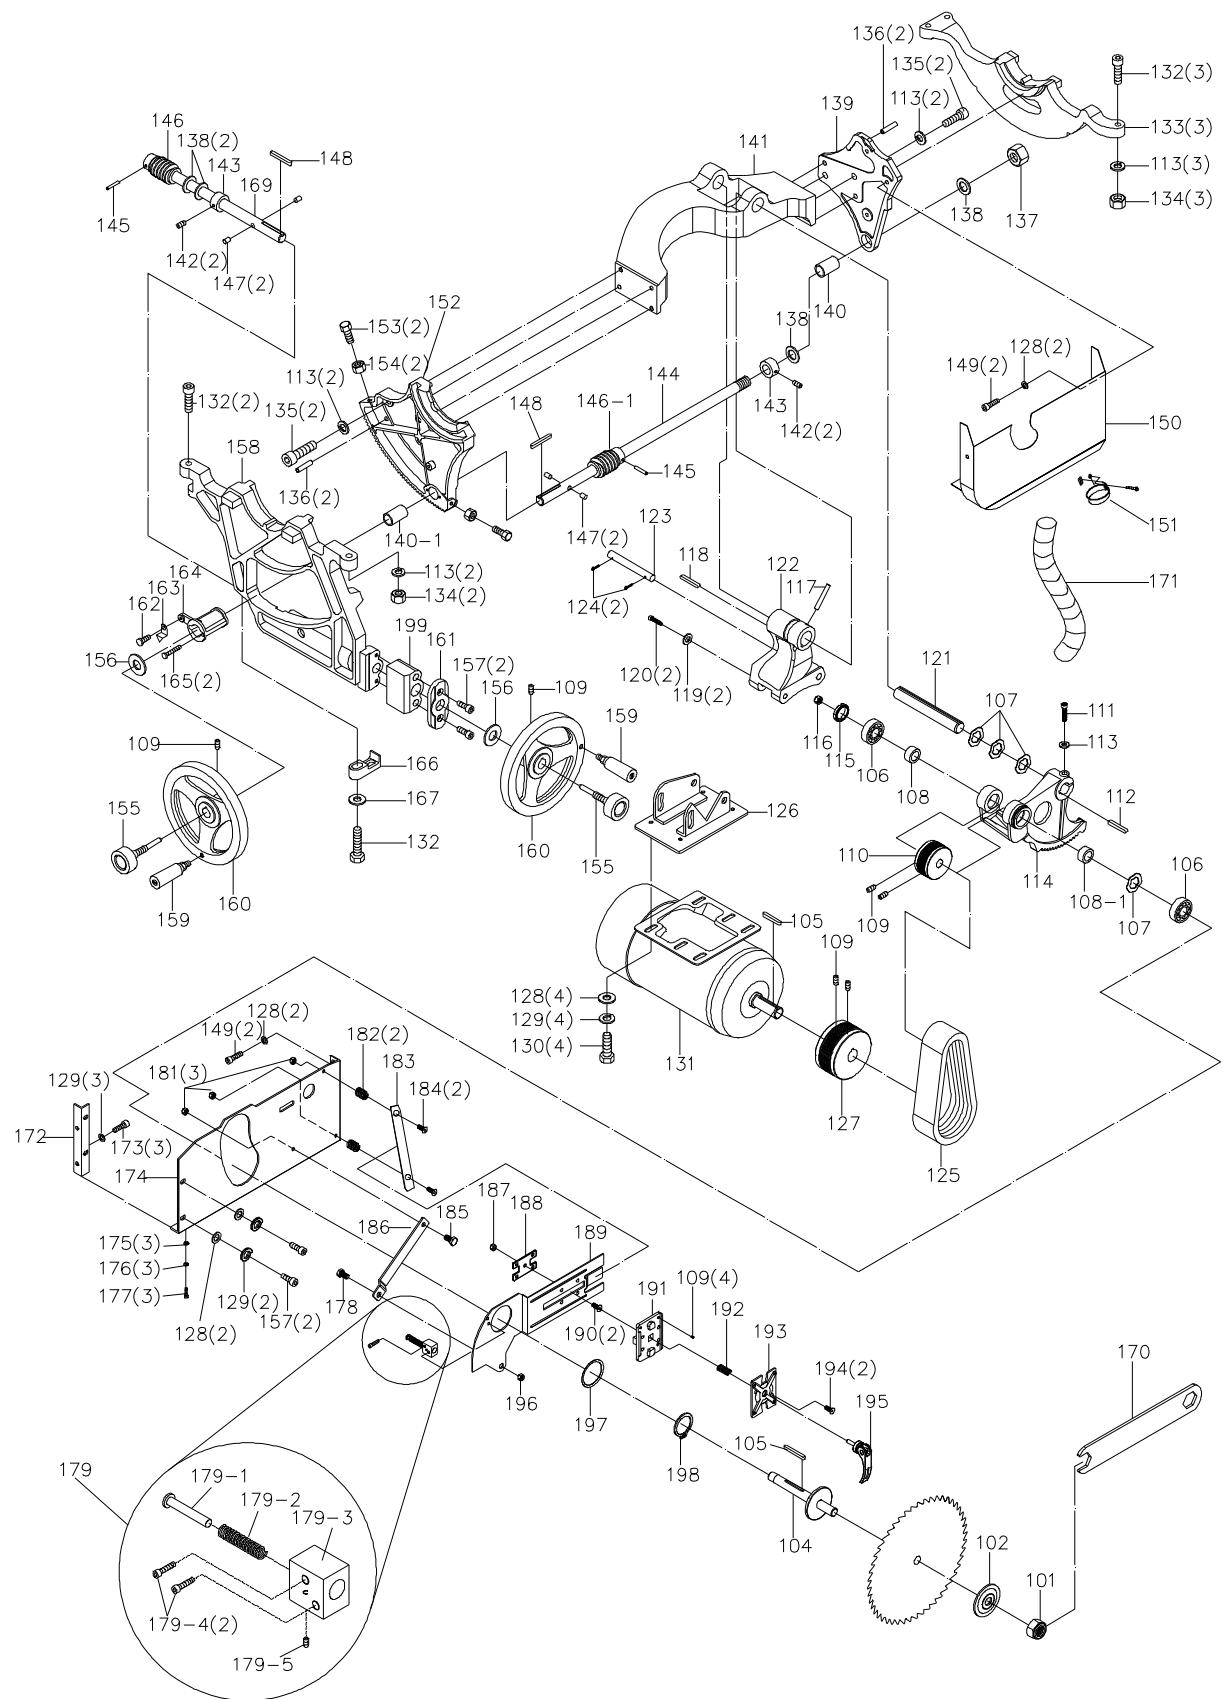


12.2.2 Trunnion and Motor Assembly (JTAS-12-DX) – Parts List

| Index No | Part No | Description | Size | Qty |
|----------|----------------|---|-------------------|-----|
| 101 | JTAS12L-101 | Arbor Nut | | 1 |
| 102 | JTAS12DX-102 | Arbor Flange | | 1 |
| 104 | JTAS12DX-104 | Arbor with Flange | | 1 |
| 105 | JTAS12DX-105 | Key | 1/4"x1/4"x1-3/4" | 2 |
| 106 | BB-6005ZZ | Ball Bearing | 6005ZZ | 2 |
| 107 | JTAS12DX-107 | Wave Washer | | 4 |
| 108 | JTAS12DX-108 | Rear Bearing Load Spacer | | 1 |
| 108-1 | JTAS12DX-108-1 | Front Bearing Load Spacer | | 1 |
| 109 | TS-0267041 | Socket Set Screw | 1/4"-20x3/8" | 10 |
| 110 | JTAS-12DX-110 | Arbor Pulley | | 1 |
| 111 | TS-0209081 | Socket Head Cap Screw | 3/8"-16x1-3/4" | 1 |
| 112 | JTAS10DX-112 | Key | 1/4" x1/4"x45mm | 1 |
| 113 | TS-0720091 | Lock Washer | 3/8" | 10 |
| 114 | JTAS12DX-114 | Arbor Bracket | | 1 |
| 115 | JTAS12-115 | Spanner Nut | | 1 |
| 116 | TS-0561081 | Nylon Hex Nut | 3/4"-10 | 1 |
| 117 | JTAS10-117 | Spring Pin | M6x50 | 1 |
| 118 | JTAS10-118 | Key | 1/4"x1/4"x2-5/16" | 1 |
| 119 | TS-0680051 | Flat Washer | 7/16" | 2 |
| 120 | TS-0091031 | Hex Cap Screw | 7/16"-14x1" | 2 |
| 121 | JTAS10DX-121 | Shaft | | 1 |
| 122 | JTAS10-122 | Motor Bracket | | 1 |
| 123 | JTAS10-123 | Pin | | 1 |
| 124 | JTAS10L-124 | Spring Clip | | 2 |
| 125 | JTAS12DX-125 | Poly V-Belt | PJ250 | 1 |
| 126 | JTAS10DX-126 | Motor Mounting Bracket | | 1 |
| 127 | JTAS10-127N | Motor Pulley | | 1 |
| 128 | TS-0680031 | Flat Washer | 5/16" | 10 |
| 129 | TS-0720081 | Lock Washer | 5/16" | 9 |
| 130 | TS-0081031 | Hex Cap Screw | 5/16"-18x3/4" | 4 |
| 131 | JTAS12DX-131 | Motor | 5HP 1PH 230V only | 1 |
| | JTAS10-131-017 | Centrifugal Switch Assembly (not shown) | | 1 |
| | JTAS10-131D | Fan Cover (not shown) | | 1 |
| | JTAS10-131F | Motor Fan (not shown) | | 1 |
| | JTAS10-1315B | Start Capacitor (not shown) | 600MFD/250VAC | 1 |
| | JTAS10-1315A | Run Capacitor (not shown) | 80uF/350VAC | 1 |
| 132 | TS-0209071 | Socket Head Cap Screw | 3/8"-16x1-1/2" | 6 |
| 133 | JTAS10DX-133 | Rear Trunnion Bracket | | 1 |
| 134 | TS-0561031 | Hex Nut | 3/8"-16 | 5 |
| 135 | TS-0209051 | Socket Head Cap Screw | 3/8"-16x1" | 4 |
| 136 | JTAS10-136 | Spring Pin | M8x25 | 4 |
| 137 | TS-0561081 | Hex Nut | 3/4"-10 | 1 |
| 138 | JTAS10-138 | Fiber Washer | | 4 |
| 139 | JTAS10DX-139 | Rear Trunnion | | 1 |
| 140 | JTAS10-140 | Rear Bushing | | 2 |
| 140-1 | JTAS10DX-140 | Front Bushing | | 1 |
| 141 | JTAS12DX-141 | Yoke | | 1 |
| 142 | TS-0270011 | Socket Set Screw | 5/16"-18x1/4" | 4 |
| 143 | JTAS10-143 | Collar | | 2 |
| 144 | JTAS12DX-144 | Shaft | | 1 |
| 145 | JTAS10-145 | Spring Pin | M5x30 | 2 |
| 146 | JTAS10-146 | Worm (Left thread) | | 1 |
| 146-1 | JTAS10DX-146 | Worm (Right thread) | | 1 |
| 147 | JTAS10-147 | Lock Pin | | 4 |
| 148 | JTAS10-148 | Key | M5x35 | 2 |
| 149 | TS-0208021 | Socket Head Cap Screw | 5/16"-18x1/2" | 4 |
| 150 | JTAS12DX-150 | Dust Deflector | | 1 |
| 151 | JTAS10L-151N | Hose Clamp | | 2 |
| 152 | JTAS10DX-152 | Front Trunnion | | 1 |
| | JTAS12DX-TA | Trunnion Assembly (#113, 135, 136, 139 thru 141, 152) | | 1 |

| Index No. | Part No. | Description | Size | Qty |
|------------------|---------------------|---|------------------|------------|
| 153 | TS-0051021 | Hex Cap Screw..... | 5/16"-18x5/8" | 2 |
| 154 | TS-0561021 | Hex Nut..... | 5/16"-18..... | 2 |
| 155 | JTAS10-155A..... | Lock Knob..... | | 2 |
| 156 | JTAS10-156 | Fiber Washer | | 2 |
| 157 | TS-0208061 | Socket Head Cap Screw..... | 5/16"-18x1" | 2 |
| 158 | JTAS10DX-158 | Front Trunnion Bracket..... | | 1 |
| 159 | JTAS10-159 | Handwheel Handle | | 2 |
| 160 | JTAS10-160 | Handwheel..... | | 2 |
| 161 | JTAS10-161 | Shield Plate..... | | 1 |
| 162 | TS-0813022 | Round Head Screw..... | 1/4"-20x3/8" | 1 |
| 163 | JTAS10-163 | Pointer | | 1 |
| 164 | JTAS10-164 | Pointer Bracket | | 1 |
| 165 | TS-081C102 | Pan Head Screw..... | #10-24x2" | 2 |
| 166 | JTAS10DX-166 | Guide Block | | 1 |
| 167 | TS-0680041 | Flat Washer | 3/8" | 1 |
| 169 | JTAS12DX-169 | Tilt Shaft..... | | 1 |
| 170 | JTAS12-170..... | Wrench | | 1 |
| 171 | JTAS10L-171 | Hose | 700mm | 1 |
| 172 | JTAS10L-172 | Plate..... | | 1 |
| 173 | TS-0208041 | Socket Head Cap Screw..... | 5/16"-18x3/4" | 3 |
| 174 | JTAS12DX-174 | Chip Plate | | 1 |
| 175 | TS-0680011 | Flat Washer | 3/16..... | 3 |
| 176 | TS-0720051 | Lock Washer..... | #10..... | 3 |
| 177 | JTAS10L-177 | Hex Cap Bolt..... | #10-24x3/8 | 3 |
| 178 | JTAS10L-178 | Special Screw | | 1 |
| 179 | JTAS10L-179A..... | Arbor Lock Insert Assembly (#179-1 thru 179-5)..... | | 1 |
| 179-1 | JTAS10L-179-1 | Arbor Lock Insert | Ø8 | 1 |
| 179-2 | JTAS10L-179-2 | Spring | | 1 |
| 179-3 | JTAS10L-179-3 | Insert Block | | 1 |
| 179-4 | TS-1502051 | Socket Head Cap Screw..... | M5 x 20 | 2 |
| 179-5 | TS-1521041 | Socket Set Screw | M4 x 10 | 1 |
| 181 | TS-0640071 | Nylon Insert Lock Nut | 1/4-20 | 3 |
| 182 | JTAS10L-182N..... | Spacer | | 2 |
| 183 | JTAS12DX-183 | Guide Plate | | 1 |
| 184 | TS-0245051 | Flat Head Socket Screw | 1/4-20x1 | 2 |
| 185 | JTAS10L-185 | Special Screw | | 1 |
| 186 | JTAS12DX-186 | Extension Support Plate | | 1 |
| 187 | TS-1541021 | Nylon Insert Lock Nut | M6 | 1 |
| 188 | JTAS10L-188 | Plate..... | | 1 |
| 189 | JTAS12DX-189 | Riving Knife Extension Plate..... | | 1 |
| 190 | TS-1513021 | Flat Head Socket Screw | M5x12 | 2 |
| 191 | JTAS10L-191 | Clamping Block | | 1 |
| 192 | JTAS10L-192 | Spring | | 1 |
| 193 | JTAS10L-193 | Clamping Block | | 1 |
| 194 | TS-1514031 | Flat Head Socket Screw | M6X20 | 2 |
| 195 | JTAS10L-195 | Locking Handle | | 1 |
| 196 | TS-1541031 | Nylon Insert Lock Nut | M8 | 1 |
| 197 | JTAS12DX-197 | Spring Shim Ring | | 1 |
| 198 | JTAS12DX-198 | C-Ring..... | S58 | 1 |
| 199 | JTAS12DX-199 | Guide Block | | 1 |

12.3.1 Blade Guard Assembly (JTAS-12-DX) – Exploded View

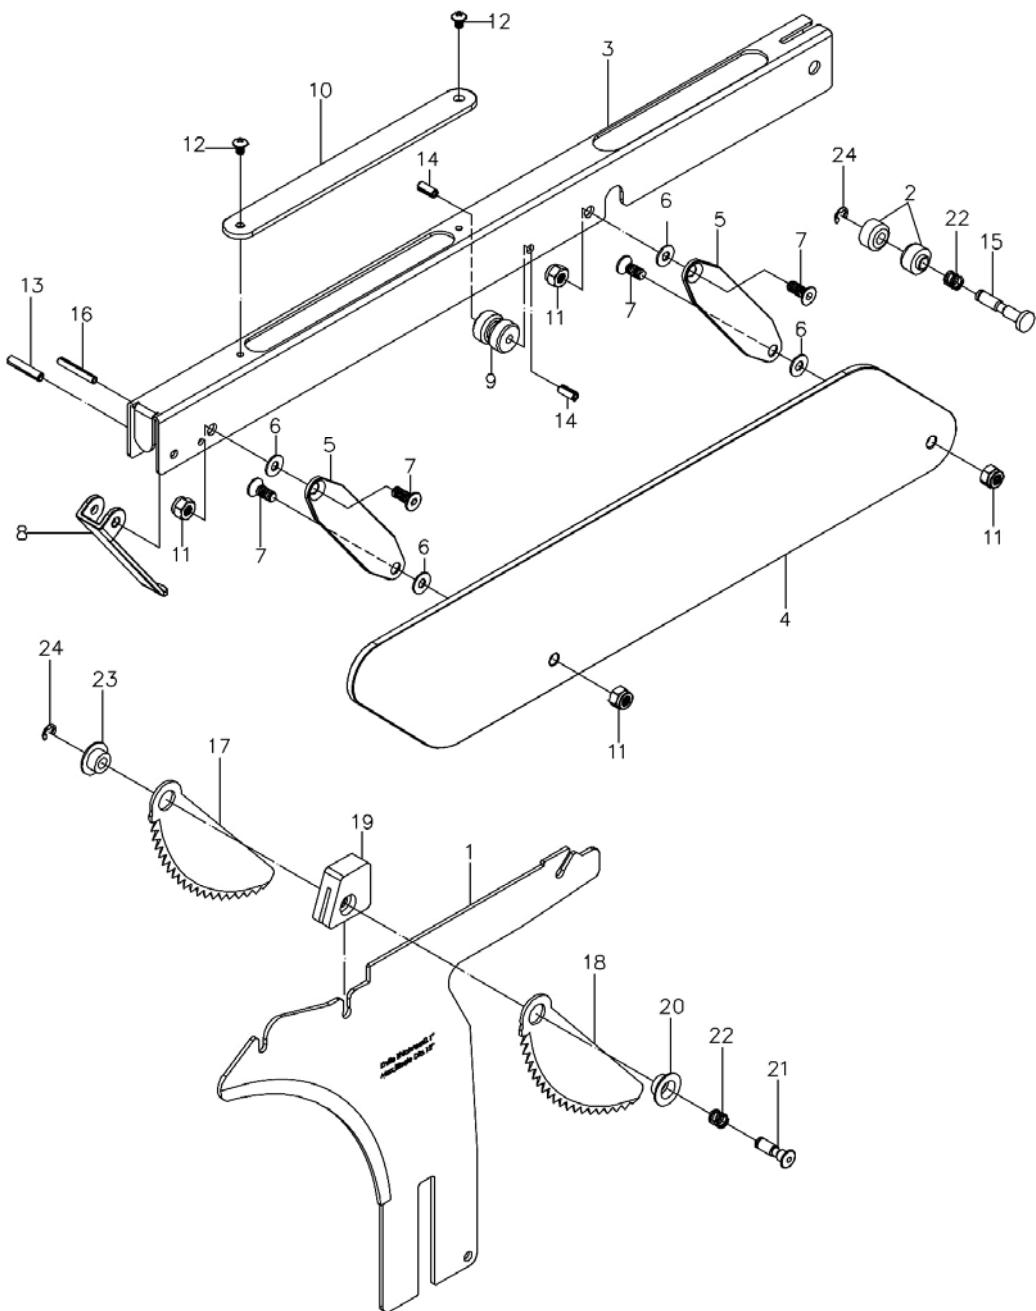

12.3.2 Blade Guard Assembly (JTAS-12-DX) – Parts List

| Index No | Part No | Description | Size | Qty |
|-----------------|----------------|---|-----------------|------------|
| 1 | JTAS12DX-301 | Riving Knife | | 1 |
| | JTAS12DX-BGA | Blade Guard Assembly (#2 thru 16, 22, 24) | | 1 |
| 2 | JTAS12DX-302 | Bushing..... | | 2 |
| 3 | JTAS12DX-303 | Blade Guard Body | | 1 |
| 4 | JTAS12DX-304 | Blade Guard Side Shield | | 2 |
| 5 | JTAS12DX-305 | Linking Plate | | 4 |
| 6 | TS-1550041 | Flat Washer | M6..... | 8 |
| 7 | TS-1514021 | Flat Head Socket Screw | M6x16 | 8 |
| 8 | JTAS12DX-308 | Front Shield | | 1 |
| 9 | PM2000-309 | Bushing..... | | 1 |
| 10 | PM2000-310 | Top Sight Shield | | 1 |
| 11 | TS-1541021 | Nylon Insert Lock Nut | M6..... | 8 |
| 12 | TS-081B012 | Pan Head Screw..... | #8-32x1/4 | 2 |
| 13 | PM2000-313 | Roll Pin | 5x25 | 1 |
| 14 | PM2000-314 | Roll Pin | 5x12 | 2 |
| 15 | PM2000-315 | Lock Pin | | 1 |
| 16 | PM2000-316 | Roll Pin | 4x28 | 1 |
| | JTAS12DX-AKPA | Anti-Kickback Pawl Assembly (#17 thru 24) | | 1 |
| 17 | JTAS12DX-317 | Left Anti-Kickback Pawl | | 1 |
| 18 | JTAS12DX-318 | Right Anti-Kickback Pawl..... | | 1 |
| 19 | PM2000-318 | Pawl Base..... | | 1 |
| 20 | JTAS12DX-320 | Flange..... | | 1 |
| 21 | PM2000-320 | Lock Pin | | 1 |
| 22 | PM2000-321 | Spring | | 2 |
| 23 | JTAS12DX-323 | Flange..... | | 1 |
| 24 | PM2000-322 | E-Clip | E5..... | 2 |



427 New Sanford Road
LaVergne, Tennessee 37086
Phone: 800-274-6848
www.jettools.com