



## Parts List for LM200-B2 Type 2

Item Number	Part Number	Description	Qty Required
1	5140016-16	SCREW	3
2	5140016-17	SCREW	1
3	5140016-18	PLATE	2
4	5140016-19	MOTOR HOUSING	1
5	5140016-20	PLATE	2
6	5140016-21	PLATE	3
7	5140016-22	WHEEL	4
8	5140016-23	RIGHT COVER	2
9	5140016-24	NUT	3
10	5140016-25	SCREW	1
11	5140016-26	WIND CANISTER	1
12	5140016-27	CAP	1
13	5140026-49	CAPACITOR	1
14	5140016-29	CABLE CLAMP	3
15	5140016-30	RIGHT HANDLE	1
16	5140016-31	POWER CORD	1
17	5140016-33	TERMINAL	1
18	5140016-34	TERMINAL	2
19	5140016-35	SWITCH	1
20	5140016-36	SWITCH SUPPORT	1
21	5140016-37	SPRING	1
22	5140016-38	BUTTON	1
23	5140016-39	PROTECTOR	1
24	5140016-40	SWITCH LEVER	1
25	5140016-41	SWITCH SUPPORT	1
26	5140016-42	CONNECTOR	1
27	5140016-43	SCREW	8

## Parts List for LM200-B2 Type 2

Item Number	Part Number	Description	Qty Required
28	5140016-44	CORD PROTECTOR	1
29	5140016-45	GUIDE,CABLE	1
30	5140016-46	UPPER HANDLE	1
31	5140016-47	KNOB	2
32	5140016-48	NUT	2
33	5140016-49	SCREW	2
34	5140016-50	HANDLE,LEFT	1
35	5140016-51	SPRING,BUTTON	1
36	5140016-52	CAP,REAR	1
37	5140016-53	SPINDLE	1
38	5140016-54	GUIDE	2
39	5140016-55	HANDLE	1
40	5140016-56	GRASS CATCHER	2
41	5140016-57	SCREW	6
42	5140026-50	MOTOR ASSY.	1
43	5140016-60	COVER,WHEEL	2
44	5140016-61	PAD	8
45	5140016-62	PAD	8
46	5140016-63	SCREW	4
47	5140016-64	FAN	1
48	5140016-65	STRAP	1
49	5140026-51	SCREW	1
50	5140016-67	RETAINER	4
51	5140016-68	CAP	1
52	5140016-69	CAP	1
53	5140016-70	SCREW	2
54	5140026-52	NAMEPLATE	1