


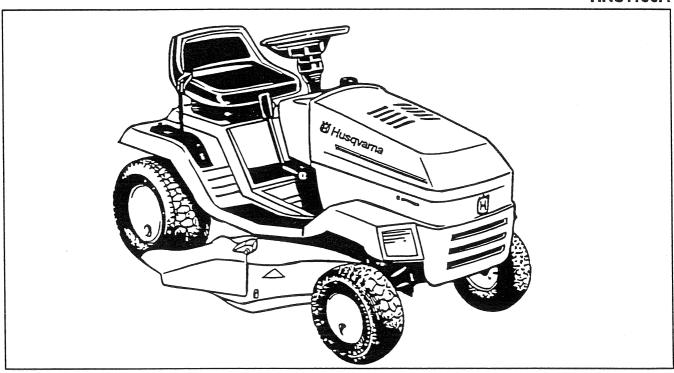


13

HNS1136A



1.1994 Spare parts

11 HP 36" TRACTOR - MODEL NO. LR111 (HNS1136A), PRODUCT NO. 954 00 06-32 ELECTRICAL

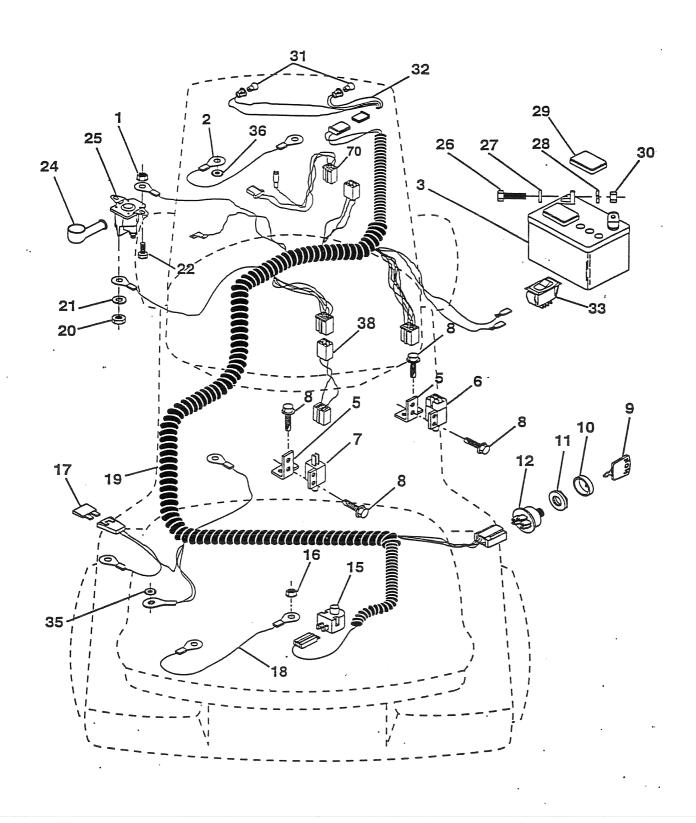


11 HP 36" TRACTOR - MODEL NO. LR111 (HNS1136A), PRODUCT NO. 954 00 06-32 ELECTRICAL

KEY NO.	PART NO.	DESCRIPTION
8 9 10 11 12 15 16 17 18 19 20 21	873510400 532108423 532133909 532108236 532109553 532104445 817021008 532140402 532140400 532140399 532121305 873510500 532128353 532128353 532128353 532140411 873350400 810090400 874780408	Nut, Hex Keps 1/4-20 Assembly, Cable Battery Bracket, Switch Switch, Interlock (4-terminal) Switch, Interlock (2-terminal) Screw, Hex Hd. Tap #10-24 x 1/2 Key, Steel Delta Cover, Key Ignition Nut, Ignition Switch, Ignition Switch, Plunger Nut, Hex, Keps 5/16-18 Fuse Assembly, Cable Hamess, Ignition Nut, Hex Jam 1/4-20 Washer, Lock 1/4 Bolt, Fin. Hex 1/4-20 UNC x 1/2 Gr. 5
28 29 30 31 32 33 35 36	874760412 819091016 810040400 532121264 873220400 532004152 532131078 532110712 811050600 811150400 532140660	Cover, Terminal Solenoid Bolt, Hex Hd. 1/4-20 UNC x 3/4 Washer 9/32 x 5/8 x 16 Washer, Lock 1/4 Cap, Battery Nut, Fin. Hex 1/4-20 UNC Bulb, Light Harness, Headlight Switch, Light Washer Lock Ext. Tooth 3/8 Washer Lock Inter. Tooth 1/4 Adapter Harness Harness Engine


NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm

11 HP 36" TRACTOR - MODEL NO. LR111 (HNS1136A), PRODUCT NO. 954 00 06-32 DASH

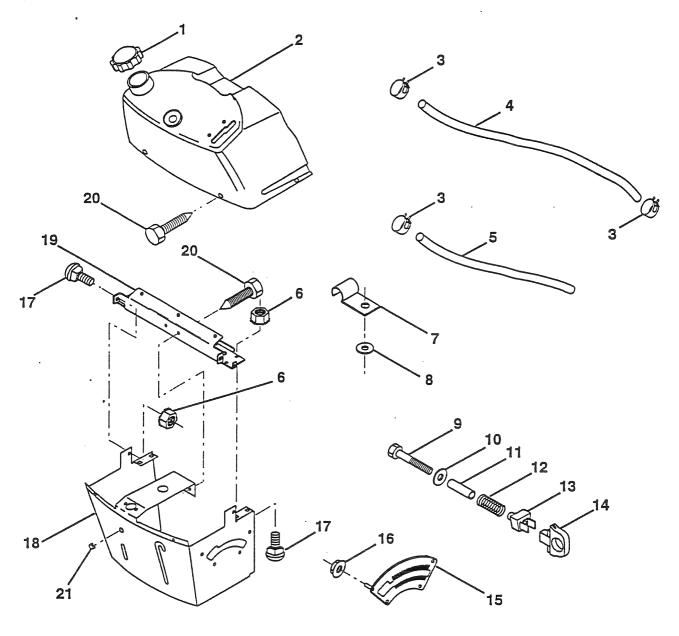


KEY NO.	PART NO.	DESCRIPTION .	KEY NO.	PART NO.	DESCRIPTION
1 2 3 4 5 6 7 8 9 10 11	532132735 532138395 532123487 532008544 532008548 873510400 532124996 819091216 874760428 819091413 532121249	Cap, Fuel Assembly, Dash & Fuel Tank Clamp, Hose Line, Fuel Line, Fuel Nut, Hex, Keps 1/4-20 Clip, Fuel Line Washer 9/32 x 3/4 x 16 Ga. Bolt, Hex, Fin 1/4-20 x 1-3/4 Washer 11/32 x 11/16 x 16 Ga. Spacer, Split	12 13 14 15 16 17 18 19 20 21	532003720 532126450 532126115 532122023 532124346 872110404 532130745 532134744 817060408 532134014	Spring Clip, Height Adjustment Knob, Height Stop Adjustment, Quadrant Height Nut, Self-Threading 3/16-18 Bolt, Carriage 1/4-20 x 1/2 Gr. 5 Support Assembly, Dash Brace, Cross Screw, Self-Tapping 1/4-20 x 1/2 Plug Dome Black

11 HP 36" TRACTOR - MODEL NO. LR111 (HNS1136A), PRODUCT NO. 954 00 06-32 HOOD

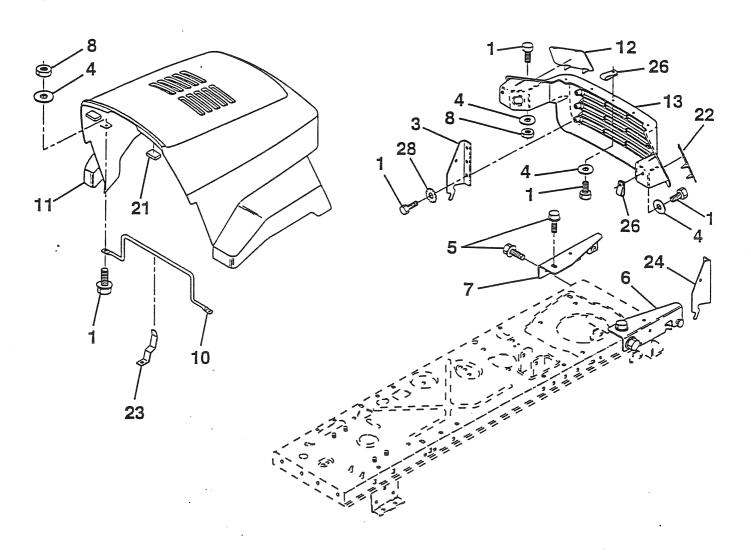


KEY NO.	PART NO.	DESCRIPTION	KEY No.	PART NO.	DESCRIPTION
1 3 4 5 6 7 8 10	874780410 532128445 819091016 817490512 532140051 532140050 873220400 532130850	Bolt Fin Hex 1/4-20 x 5/8 Bracket Pivot Hood LH Washer, Fiat 1/4 Screw Thdrol 5/16-28 x 3/4 Bracket Asm. Pivot Hood RH Bracket Asm. Pivot Hood LH Nut Fin Hex 1/4-20 Brace Hood	11 12 13 21 22 23 24 26 28	532140142 532130986 532130984 532126938 532130985 532139969 532128446 532052921 811050400	Hood Lens LH Grille Bumper Hood Lens RH Latch Hood Bracket Pivot Hood RH Clip Tinnerman Washer Lock Ext. Tooth

11 HP 36" TRACTOR - MODEL NO. LR111 (HNS1136A), PRODUCT NO. 954 00 06-32 FENDER / CHASSIS

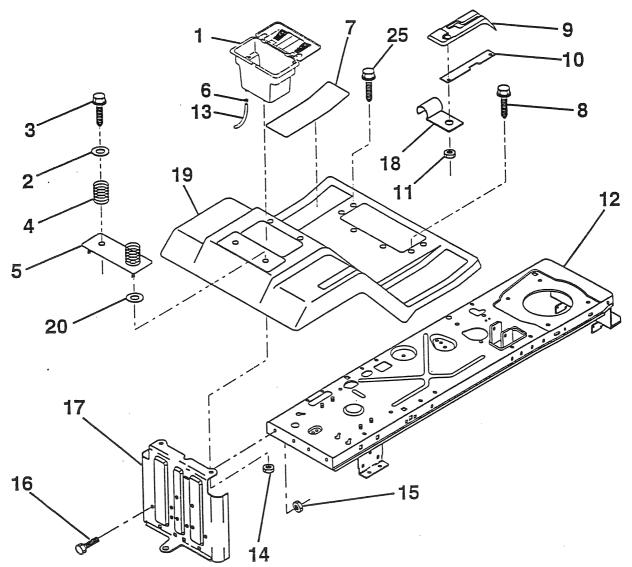


KEY NO.	PART NO.	DESCRIPTION	KEY NO.		PART NO.	DESCRIPTION
123 456789	532129965 819132012 817490612 532124181 532125142 532109596 532124144 817490512 532126993 532139783	Case, Battery Washer 13/32 x 1-1/4 x 12 Ga. Screw, Hex Wsh. Thrdrol 3/8-16 x 3/4 Spring, Compression, Seat Plate, Asm. Battery Clamp, Hose Pad, Footrest Screw Thdrol 5/16-18 x 3/4 Console, Shift Control Bar, Shift Lock	11 12 13 14 15 16 17 18 19 20 25	55 55 8 55 55 55 8	32124346 32140784 32109238 73510400 73800500 74760512 32127880 32126470 32141393 19091413 71490516	Nut, Self-Threading, Wsher Hd 3/16 Assembly, Frame Tube, Battery Drain Nut, Keps 1/4-20 UNC Nut, Crownlock 5/16-18 Bolt, Hex Hd. 5/16-18 UNC x 3/4 Drawbar Clip, Insulated Fender/Footrest Washer 9/32 x 7/8 x 13 Ga. Scr-Hx Wsh Thd Rol 5/16-18 x 1

11 HP 36" TRACTOR - MODEL NO. LR111 (HNS1136A), PRODUCT NO. 954 00 06-32 SEAT

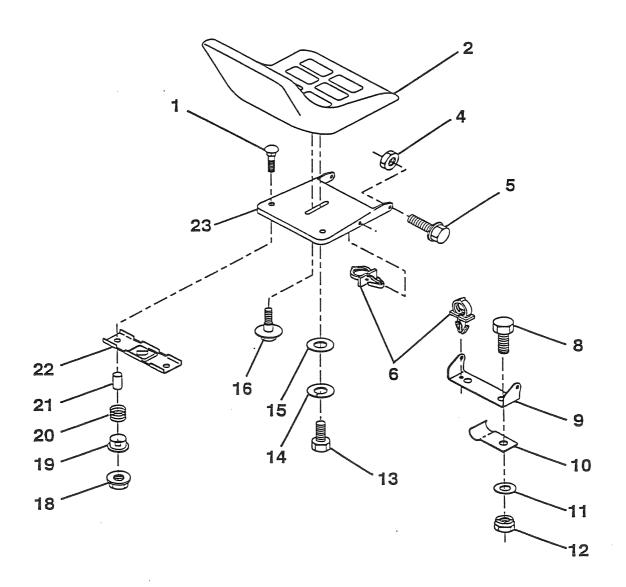

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	872050411	Bolt, Carriage 1/4-20 x 1-3/8	13	874780814	Bolt Hex 1/2-13 x 7/8
2	532130875	Seat	14	810040800	Washer Lock Hvy. Hlicl Spring 1/2
4	873800500	Locknut, Hex w/lns 5/16-18	15	819171912	Washer, 17/32 x 1-3/16 x 12 Ga.
5	532139888	Bolt, Shoulder 5/16-18 UNC	16	532127018	Bolt, Shoulder
6	532140407	Clip, Insulated	18	532123976	Nut, Hex Large Flange Lock
8	874760612	Bolt, Fin Hex 3/8-16 UNC x 3/4	19	532121248	Bushing, Snap
9	532140551	Bracket, Pivot Seat	20	532121250	Spring, Compression
10	532126471	Clip, Insulated	21	532134300	Spacer, Split 28 ld. x .88 Lg.
11	819133210	Washer 12/32 x 2 x 10 Ga.	22	532121246	Bracket, Switch, Mounting
12	873800600	Nut, Lock Hex w/Wsh 3/8-16	23	532140552	Pan, Seat


11 HP 36" TRACTOR - MODEL NO. LR111 (HNS1136A), PRODUCT NO. 954 00 06-32 STEERING WHEEL

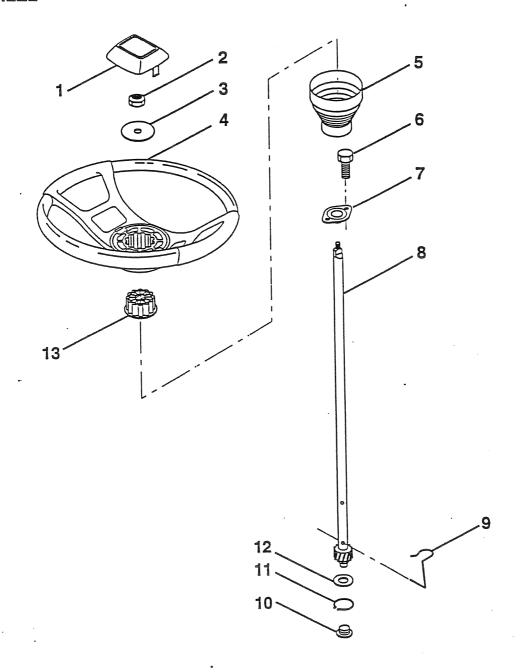

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART · NO.	DESCRIPTION
1 2 3 4 5 6 7	532124416 532124701 819133808 532124415 532127396 817431008 532102803	Insert, Wheel, Steering Nut, Lock 3/8-24 UNF Washer 12/32 x 2-3/8 x 8 Ga. Wheel, Steering Sleeve, Steering Screw, Hex #10-16 x 1/2 TY-B Bushing, Steering	8 9 10 11 12 13	532123651 532124210 532123438 812000045 819211616 532104820	Shaft, Steering Clip, Steering Bushing, Lower, Steering Ring, Retaining Washer 21/32 x 1 x 16 Ga. Adaptor, Wheel, Steering

HEPAIR PARIS


11 HP 36" TRACTOR - MODEL NO. LR111 (HNS1136A), PRODUCT NO. 954 00 06-32 SECTOR GEAR / AXLE SUPPORT

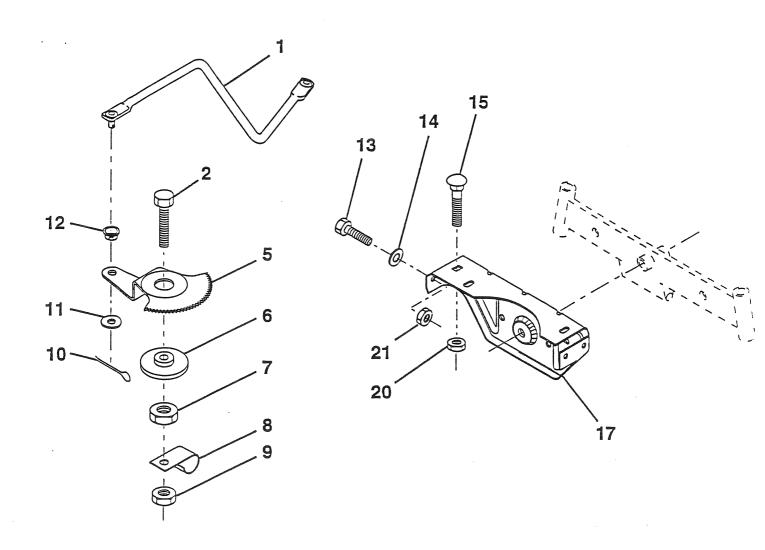

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1 2 5 6 7 8 9 10	532132566 874780828 532121926 532121927 873030800 532126472 873680800 876020412	Link, Drag Bolt, Fin Hex 1/2-13 x 1-3/4 Gear, Sector Bushing Nut, Heavy Hex Top Lock 1/2-13 UNC Clip, Insulated Nut, Crownlock 3/8-16 Pin, Cotter 1/8 x 3/4	11 12 13 14 15 17 20 21	819131316 532126847 874760512 819111416 872110606 532137096 873800600 873800500	Washer, 13/32 x 13/16 x 16 Ga. Bushing Bolt, Hex Hd. 5/16-18 UNC x 3/4 Washer 11/32 x 7/8 x 16 Ga. Bolt, Carriage 3/8-16 UNC x 3/4 Support, Front Axle Nut, Crownlock 3/8-16 UNC Nut, Crownlock 5/16-18


REPAIR PARTS

11 HP 36" TRACTOR - MODEL NO. LR111 (HNS1136A), PRODUCT NO. 954 00 06-32 FRONT AXLE

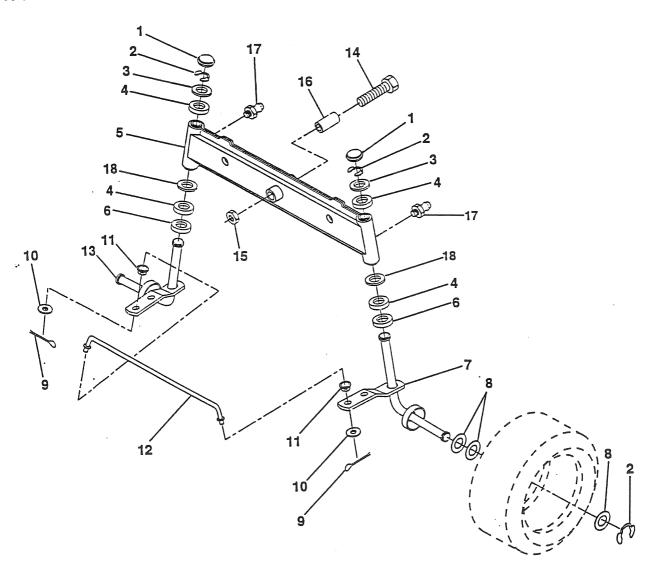


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
123456789	532121232 812000029 532121748 532124937 532133988 532124931 532137062 532121749 876020412	Cap, Spindle Ring, Clip Washer 25/32 x 1-5/8 x 16 Ga. Nyliner Axle, Front Bearing, Thrust Spindle, R.H. Asm. Washer 25/32 x 1-1/4 x 16 Ga. Pin, Cotter 1/8 x 3/4		819131316 532126847 532130465 532137061 874011056 873901000 532110438 532124836 819272016	Washer 13/32 x 13/16 x 16 Ga. Bushing Rod, Tie Spindle, L.H. Asm. Bolt Hex 5/1-11 x 3-1/2 Nut, Lock Flange 5/8-11 Spacer, Bearing Axle Fitting, Grease Washer 27/32 x 1-1/4 x 16 Ga.

11 HP 36" TRACTOR - MODEL NO. LR111 (HNS1136A), PRODUCT NO. 954 00 06-32 GROUND DRIVE

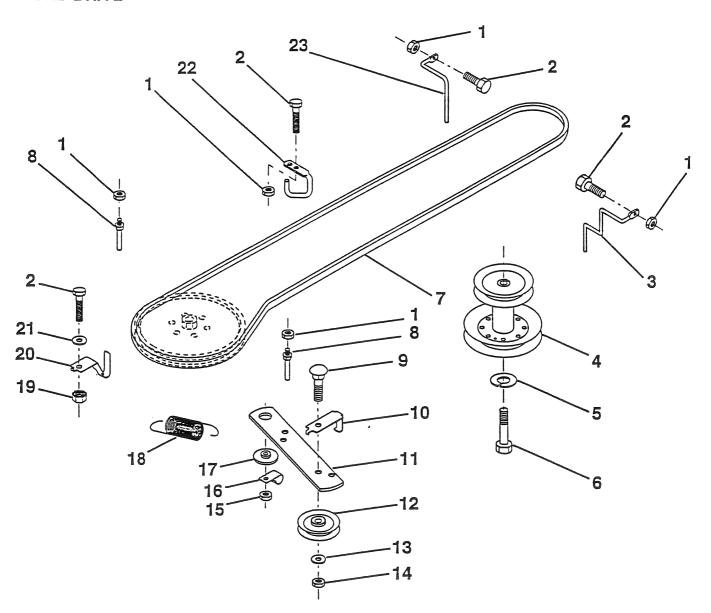


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1234567890 1112	873800500 874760512 532131205 532138029 810040700 871170744 532124525 532123405 872140612 532123396 532123395 532123674	Locknut, Hex w/Ins 5/16-18 Bolt, Hex Hd 5/16-18 UNC x 3/4 Keeper, Mower Drive, R. H. Pulley, Engine Washer, Lock 7/16 Bolt Hex 7/16-20 Gr. 5 Traction, V-Belt Drive Keeper, T/A Ground Drive Belt Bolt, Carr. 3/8-16 UNC x 1-1/2 Keeper, Belt Ground Drive Idler Arm, Ground Drive Clutch Idler, Flat	13 14 15 16 17 18 19 20 21 22 23	819131316 873930600 873800600 532126471 532122052 532131459 873510500 532139919 819111016 532123404 532131204	Washer 13/32 x 13/16 x 16 Ga. Nut, Centerlock 3/8-16 UNC Nut, Lock Hex w/Wsh 3/8-16 UNC Clip, Insulated Spacer, Retainer Spring Extension Nut, Keps 5/16-18 UNC Keeper, T/A Ground Drive Belt Washer 11/32 x 5/8 x 16 Ga. Keeper, Frame Ground Drive Belt Keeper, Mower Drive, L. H.

11 HP 36" TRACTOR - MODEL NO. LR111 (HNS1136A), PRODUCT NO. 954 00 06-32 TRANSAXLE

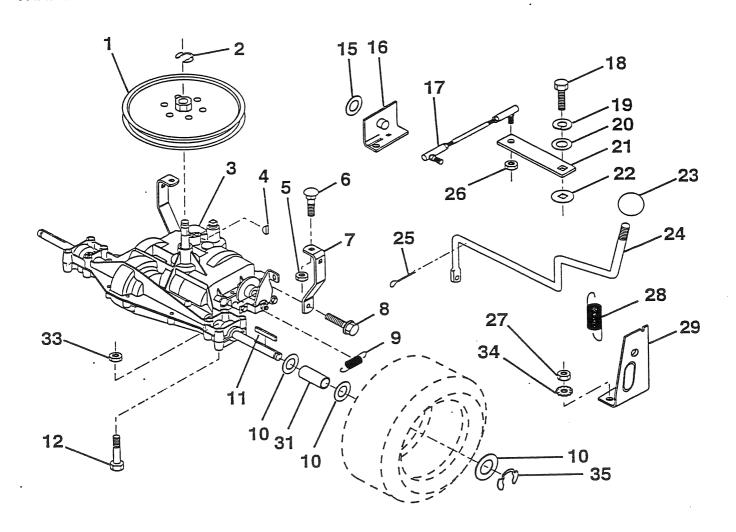


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1 2 3	532123385 812000028	Pulley Ring, Retainer Transaxle, Dana 4 Spd. Model No. 4360-49	18 19 20 21	871040412 810040400 819091210 532123484	Bolt, Fin Hex 1/4-28 UNF x 3/4 Gr. 8 Washer, Lock 1/4 Washer 9/32 x 3/4 x 10 Ga. Arm, Shift
4 5	532125096 873800500	Key, Woodruff #9 Nut, Crownlock 5/16-18	22 23	532105701 532106933	Washer, Shift Plate Knob, Rd 1/2-13
6	872140506 532123378	Bolt, Carriage 5/16-18 UNC x 3/4 Strap, Torque	24 25	532128215 876020416	Rod Shift Pin, Cotter 1/8 x 1
8	817490512	Screw 5/16-18 x 3/4	26	873810500	Locknut 5/16-24 UNF
. 9	532110422	Spring, Brake	27	873510500	Nut, Keps 5/16-18
10	532121749	Washer 25/32 x 1-1/4 x 16 Ga.	28 29	532128085 532128084	Extension, Spring Support Handle Shift RH
11	532123583	Key, Square	31	532123049	Spacer Axie
· 12	874760644 819171616	Bolt, Fin Hex 3/8-16 UNC 2-3/4 Washer 17/32 x 1 x 16 Ga.	33	873680600	Nut, Crownlock 3/8-16 UNC
16	532124600	Support Handle Shift LH	34	811050500	Washer External Tooth 5/16
17	532126293	Link, Shift	35	812000001	E-Ring

11 HP 36" TRACTOR - MODEL NO. LR111 (HNS1136A), PRODUCT NO. 954 00 06-32 ENGINE

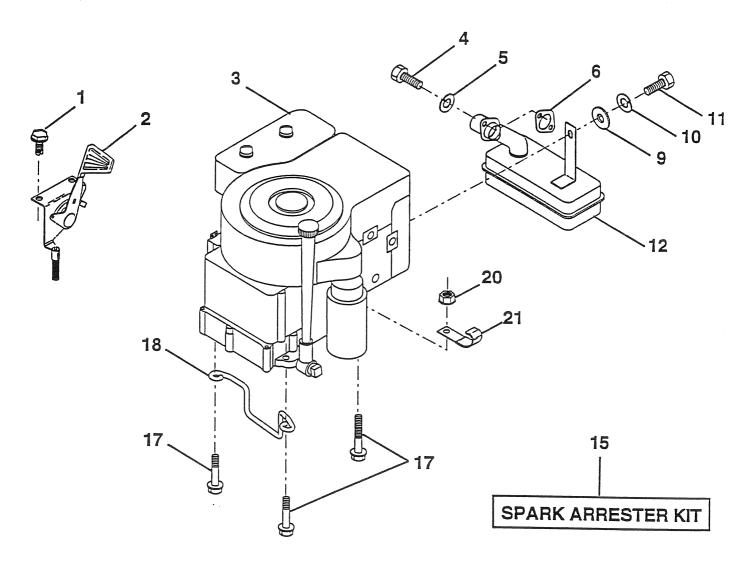


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
2	817060408 532133025	Screw, Hex Thd. Cut 1/4-20 x 1/2 Control, Throttle	11		Bolt, Hex Fin. (Order From Eng. Mfg.)
3	****	Engine, Briggs and Stratton Model No. 28C707	12 15	532137437 532137180	Muffler
4	871070512	Screw, Hex. Cap 5/16-18 x 3/4			Arrester, Spark (Optional equipment)
5	810040500	Washer, Lock Heavy Helical Spring 5/16	17	817490624	Screw, Hex Washer Head, Thdrol. 3/8-16 x 1-1/2
6 9	532125593	Gasket, Exhaust	18	532126636	Keeper, Ground Drive Belt
10	819101216 810040400	Washer 5/16 x 3/4 x 16 Washer, Lock Hvy Hicl Spring 1/4	20 21	873510600 532124966	Nut, Keps 3/8-16 Clip, Line Fuel

11 HP 36" TRACTOR - MODEL NO. LR111 (HNS1136A), PRODUCT NO. 954 00 06-32 MOWER LIFT LEVER

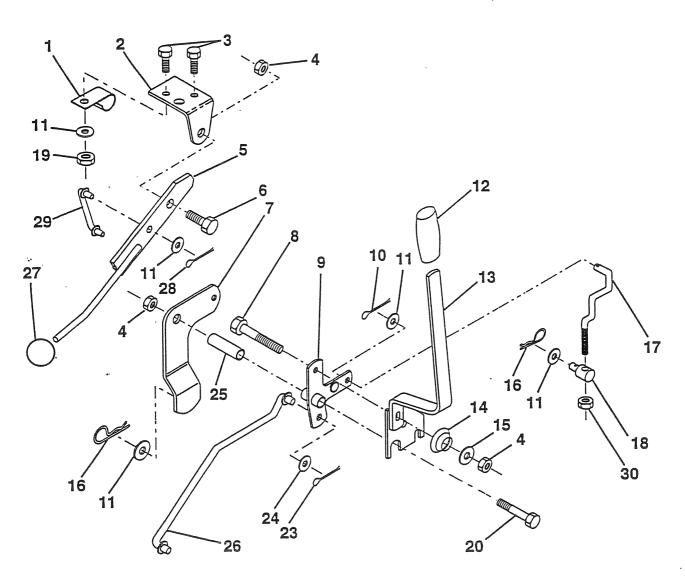


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532126470	Clip, Insulated		819131212	Washer 13/32 x 3/4 x 12 Ga.
2	532122018	Bracket, Mower Clutch	16	532124961	Retainer, Spring
3	874780408	Bolt, Fin. Hex	17	532127359	Link, Front Lift
_		1/4-20 UNC x 1/2 Gr. 5	18	532133205	Trunnion, Threaded 3/8-16
4	873800600	Nut, Lock Hex w/Wsh 3/8-16	19	873680400	Nut, Crownlock 1/4-20
5	532123417	Assembly, Clutch Lever	20	874760644	Bolt, Fin. Hex
6	532106451	Bolt, Shoulder			3/8-16 UNC x 2-3/4
7	532135371	Assembly, Mower Clutch Arm	23	876020416	Pin, Cotter 1/8 x 1
8	874760636	Bolt, Hex 3/8-16 UNC x 2-1/4	24	819171616	Washer 17/32 x 1 x 16 Ga.
. 9	532121930	Assembly, Bellcrank Lift	25	532121933	Tube, Spacer
10	876020412	Pin, Cotter 1/8 x 3/4	26	532121934	Rod, Mower Lift
11	819131316	Washer 13/32 x 13/16 x 16 Ga.	27	532106932	Knob
12	532131861	Grip, Handle	28	876020312	Pin, Cotter 3/32 x 3/4
13	532139352	Assembly, Lift Handle	29	532131655	Link, Mower Clutch
14	532123496	Spring, Compression	30	873350600	Nut Hex Jam 3/8-16 x 1.30
14	332123490	Spring, Compression	50	0,000000	11011107 00111 010 10 7 1.00

# 11 HP 36" TRACTOR - MODEL NO. LR111 (HNS1136A), PRODUCT NO. 954 00 06-32 BRAKE / REAR MOWER LIFT ASSEMBLY

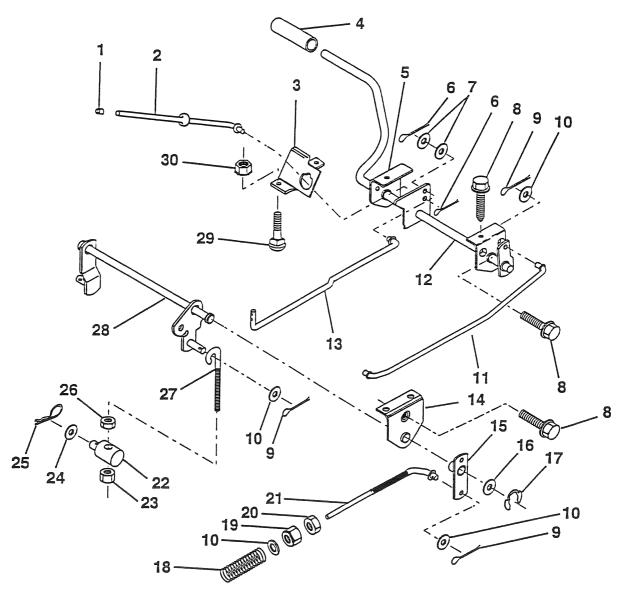

KEY NO.	PART NO.	DESCRIPTION	KEY NO.		PART NO.	DESCRIPTION
12345678 90112345 1112345	532071673 532123436 532123437 532008156 532122504 876020312 819131016 817490508 876020412 819131316 532123543 532123543 532123543 532123394 532123641	Cap, Plunger Rod, Parking Brake Bracket, Parking Brake Cover, Pedal Bracket, Clutch/Brake Pedal, L.H. Pin, Cotter 3/32 x 3/4 Washer 13/32 x 5/8 x 16 Ga. Screw, Hex, Thd. Roll. 5/16-18 x 1/2 Pin, Cotter 1/8 x 3/4 Washer 13/32 x 13/16 x 16 Ga. Rod, Brake Front Assembly, Clutch/Brake Pedal Rod, Clutch Bracket, Lift, Shaft Assembly, Brake, Pivot, Arm	16 17 18 19 20 21 22 23 24 25 26 27 28 29 30	81 81 53 87 87 53 87 81 53 87 53 87	9251816 2000034 32106888 3350600 3800600 32127378 3800600 9132012 32124961 3930600 32127369 32127358 32110506	Washer 25/32 x 1-1/8 x 16 Ga. Ring, Klip Spring, Brake Rod Nut, Hex, Jam 3/8-16 UNC Locknut, Hex w/Washer Insert 3/8-16 UNC Rod, Rear Brake Trunnion, Lift Nut, Lock Hex w/Wsh 3/8-16 Washer 13/32 x 1-1/4 x 12 Ga. Spring, Retainer Nut, Centerlock 3/8-16 UNC Link, Threaded Assembly, Rear Mower Lift Bolt, Carriage 5/16-18 UNC x 3/4 Nut, Keps 5/16-16 UNC
						,


11 HP 36" TRACTOR - MODEL NO. LR111 (HNS1136A), PRODUCT NO. 954 00 06-32

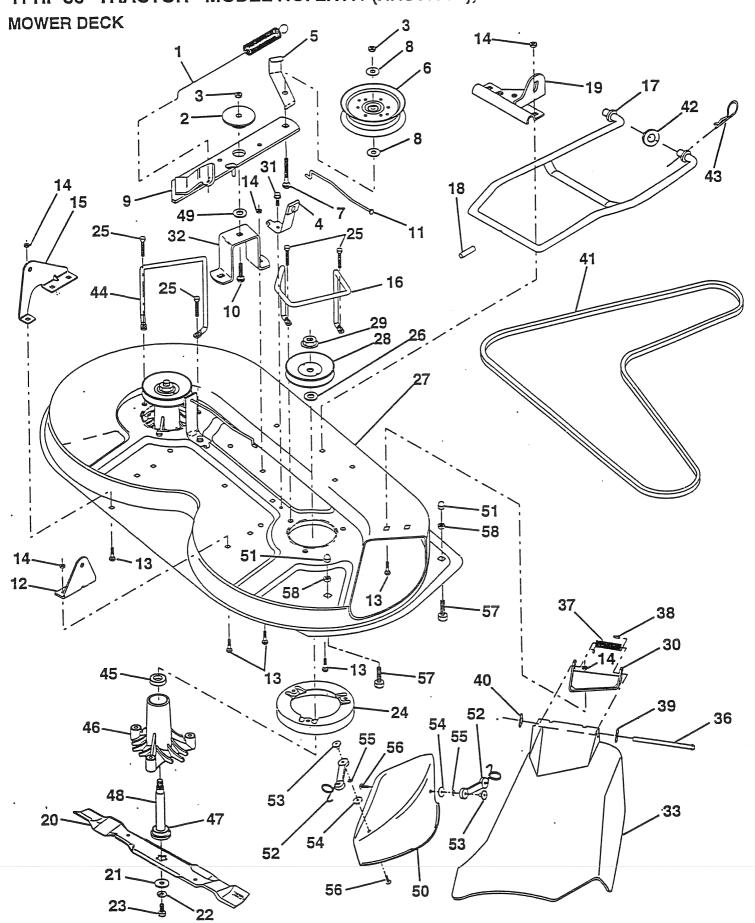

11 HP 36" TRACTOR - MODEL NO. LR111 (HNS1136A), PRODUCT NO. 954 00 06-32 MOWER DECK

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532140064	Spring, Mower Clutch	31	817490508	Screw, Hex Wsh. Thdrol.
2 3	532122052	Spacer, Retainer	00	E201000E1	5/16-18 x 1/2
3	873800600	Nut, Lock Hex w/Wsh 3/8-16		532122051	Arm, Support Idler Mower
4	532130840	Brake Asm.	33		Deflector
5	532131251	Guide, Belt Idler	35	532121980	Rod, Hinge
4 5 6 7	532121316	Pulley, Flat Idler		532123713	Spring, Torsion Deflector
7	872110616	Bolt, Carr. 3/8-16 x 1-3/4 Gr. 5		532105304	Cap, Sleeve
8 9	819131410	Washer 13/21 x 7/8 x 10 Ga.	39	819111016	Washer 11/32 x 5/8 x 16 Ga.
9	532140092	Arm Asm., Idler Mower		532110452	Pushnut
10	872140610	Bolt, Carriage 3/8-16 x 1-1/4	41	532131264	V-Belt
11	532130841	Rod, Brake	42	819171616	Washer 11/32 x 5/8 16 Ga.
12	532127356	Bracket, Lift R. H. Rear	40	532124660	Retainer, Spring
13	872140505	Bolt, Carriage 5/16-18 x 5/8		532140608	Keeper, L. H.
14	873800500	Locknut, Hex w/lns 5/16-18		532110485	Bearing
15	532127357	Bracket, Lift L. H. Rear		532128774 532129895	Housing Mandrel Vented
16	532140093	Keeper, R. H.		532129695	Bearing Shoft Mondrel (Includes Key # 47)
17	532128508	Link, Asm. Mower Stabilizer	40	532133943	Shaft, Mandrel (Includes Key # 47)
18	532128511	Pin, Drive		532140102	Washer, Hardened Mulcher Plate
19	532127380	Bracket, Asm. Front	50 51	532133841	Acom Nut 5/16-18
20	532140101	Blade Mulching	52	532130758	Latch Hook
21	532140296	Washer, Hard	53	532125004	Nut, Weld
22	810030600	Washer, Lock 3/8		819061216	Washer #10
23	532850857 532140329	Bolt 3/8-24 x 1-1/4 Gr. 8	5 <del>5</del>	810071000	Washer, Lock #10
24 25		Stripper Screw Thdrol Hex Hd	56 56	871161010	Screw
20	532138776	Washer .150 Thk.		874930516	Bolt, Hex 5/16-18 x 1
26 27	532129963	Pook Accombly		532063124	Locknut 5/16-18
28 28	532129983 532129207	Deck Assembly		532130794	Mandrel Asm. (Includes Key No.'s
29	532129207	Pulley, Mandrel		002100707	22-23, 26, 29 and 45-48)
30	532136631	Nut, Flangelock 9/16 Bracket, Asm. Deflector		532140979	Deck, Mower Complete

11 HP 36" TRACTOR - MODEL NO. LR111 (HNS1136A), PRODUCT NO. 954 00 06-32 DANA TRANSAXLE MODEL NUMBER 4360-49

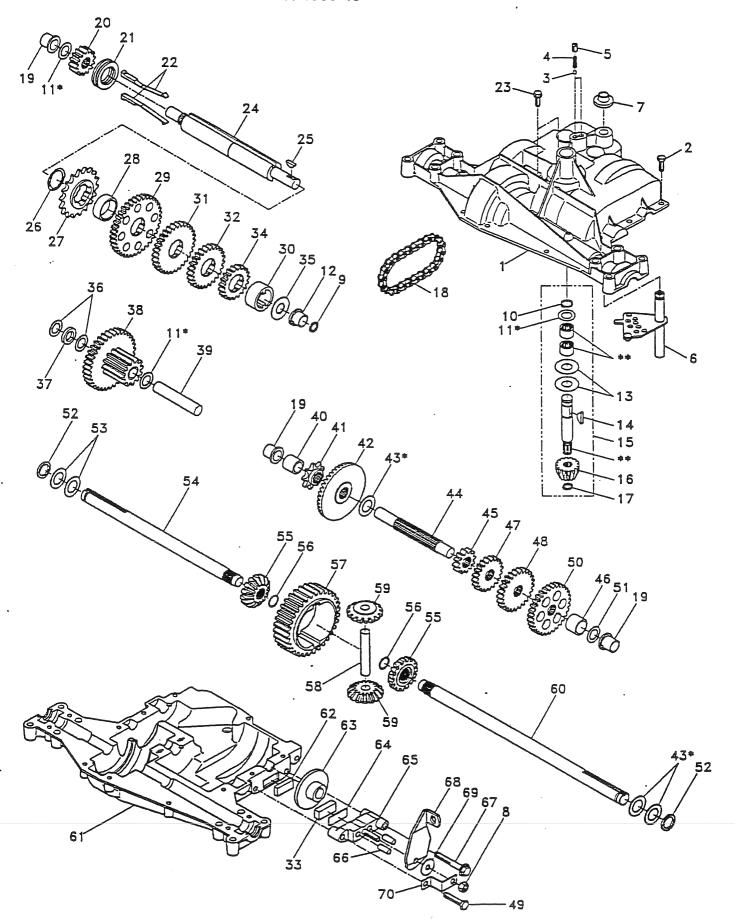


ILI AII I AII I J

# 11 HP 36" TRACTOR - MODEL NO. LR111 (HNS1136A), PRODUCT NO. 954 00 06-32 DANA TRANSAXLE MODEL NUMBER 4360-49


KE'	Y PART NO.	DESCRIPTION		Y PART . NO.	DESCRIPTION
1	532138248 532002274	Housing, Upper Screw, Self-Tapping, Large	40 41		Spacer .635 x .875 x .755 Sprocket 9 Teeth
3 4 5 6	532134400 532105904 532105905 532138235	Screw, Self-Tapping, Large 1/4-20 x .734 Ball, Detent Spring, Detent Screw, Set	45	532134394 532120473 532105933	Gear, Bevel, 42 Teeth  * Assembly, Kit, Shim, .750 Shaft Shaft, Drive Gear, Spur. 12 Teeth
7 8 9 10	532134399 873810500 532138241 532002267	Kit, Shifter Assembly Boot, Shifter Locknut 5/16-24 Square Ring Ring, Retaining	46 47 48 49		Spacer .781 x 1.00 x .750 Gear, Spur, 20 Teeth Gear, Spur, 25 Teeth Screw, Self-Tapping
11 12 13 14	532134793	* Assembly, Kit. Shim .625 Shaft	50 51 52 53	532105937 532002226 532134401	5/16-18 x 1.40 Gear, Spur, 31 Teeth Washer, Plain .632 x 1.00 x .060 Washer, Neopre Tee
15 16 17 18	532138234 532110078 532105909 532105910	Bearing, Fiange Washer, Plain .632 x 1.38 x .046 Key, Woodruff, #9 Assembly, Kit, Input Shaft Pinion, Bevel, 14 Teeth Ring, Retaining Chain, 24 Pitches Bearing, Flange Gear, Spur, 14 Teeth Collar, Clutch Assembly, Kit, Clutch Keys Screw, Self-Tapping, with Sealer Shaft, Intermediate Key, Woodruff, #61 Ring, Retaining Sprocket, 18 Teeth Spacer	54 55 56 57	532123907 532110081 532105941	Washer, Plain .758 x 1.25 x .031 Axle, L.H. Gear, Miter, 15 Teeth Ring, Retaining
21 22	532105911 532138242 532138246 532138236	Bearing, Flange Gear, Spur, 14 Teeth Collar, Clutch Assembly, Kit, Clutch Kevs	58 59 60	532120952 532110082 532123908 532138247	Gear, Spur, 32 Teeth Shaft, Cross Gear, Miter, 15 Teeth Axle, R.H.
24 25 26	532134791 532138243 532002244 532105916	Screw, Self-Tapping, with Sealer Shaft, Intermediate Key, Woodruff, #61 Ring, Retaining	62 63 64	532120961 532007294 532108989	Housing, Lower Puck, Friction Disc, Brake Spacer
27 28 29 30	532120470 532110070 532108977 532138239	Geal, Spur. 3/ Leetn			Jaw, Brake Pin, Dowel Screw, Self-Tapping, Large 5/16-18 x 2.25
31 32 33	532120405 532108980 532120951 532134796	Spacer 1.133 x 1.50 x .750 Gear, Spur, 30 Teeth Gear, Spur, 25 Teeth Puck, Friction Gear, Spur, 19 Teeth		532138244 532108996 532120956 532120416	Lever, Actuating Washer, Plain .321 x 1.00 x .055 Bracket, Anti-Rotation Grease
35 36 37	532105925 532002232 532108978 532110079	Washer, Plain .640 x 1.37 x .061 Washer, Plain .632 x 1.00 x .026 Spacer .630 x 1.00 x .169 Assembly, Gear, Combination of		Use in combin	nations to maintain proper clearances
	532124639	12 Teeth and 35 Teeth Shaft, Idler	NOT	E: All components 1 inch = 25.	ent dimensions given in U.S. inches .4 mm

11 HP 36" TRACTOR - MODEL NO. LR111 (HNS1136A), PRODUCT NO. 954 00 06-32 DECALS

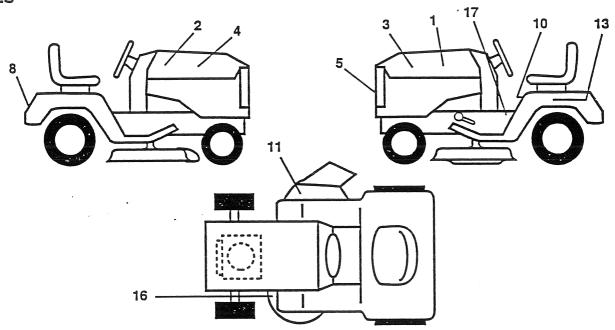

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532140206	Decal, Hood, L. H., Husqv.	11	532137259	Decal, Warning, Cut Finger,
2	532140205	Decal, Hood, R. H., Husqv.	40	500404540	(Multi-Lang)
3	532141304	Decal, Hood, L. H.	13	532121549	Decal, Caution, Battery
4	532141303	Decal, Hood, R. H.	16	532136830	Decal, V-Belt Sch.
5	532140213	Decal, Logo, Grill	17	532138269	Decal, Inst. Oper.
8	532131582	Decal, Logo, Fender		532141494	Manual, Owner's (French)
10	532133795	Decal Caution Fender		532141492	Manual, Owner's (English)

#### WHEELS & TIRES

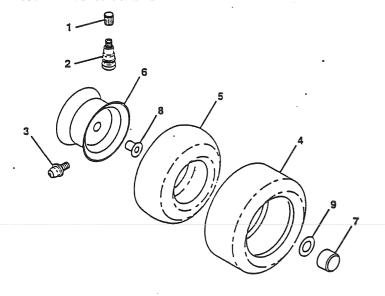

KEY NO.	PART NO.	DESCRIPTION
1	532059192	Cap, Valve
2	532065139	Stem, Valve
2	532124957	Fitting, Grease
		(Front Wheels Only)
4	532123410	Tire, Front
4	532106230	Tire, Rear
4 5	532059904	Tube, Front (Optional Service Items Only)
5	532008134	Tube, Rear (Optional Service Items Only)
6	532140298	Rim, Front
6	532142268	Rim, Rear
7	532104757	Cap Axle
8	532124959	Bearing Flange
9		
3	532121748	Washer 25/32 x 1-5/8 x 16 Ga.