


**RYOBI
SPEED SAW
MODEL NO. P531
REPAIR SHEET**

RYOBI SPEED SAW – MODEL NUMBER P531

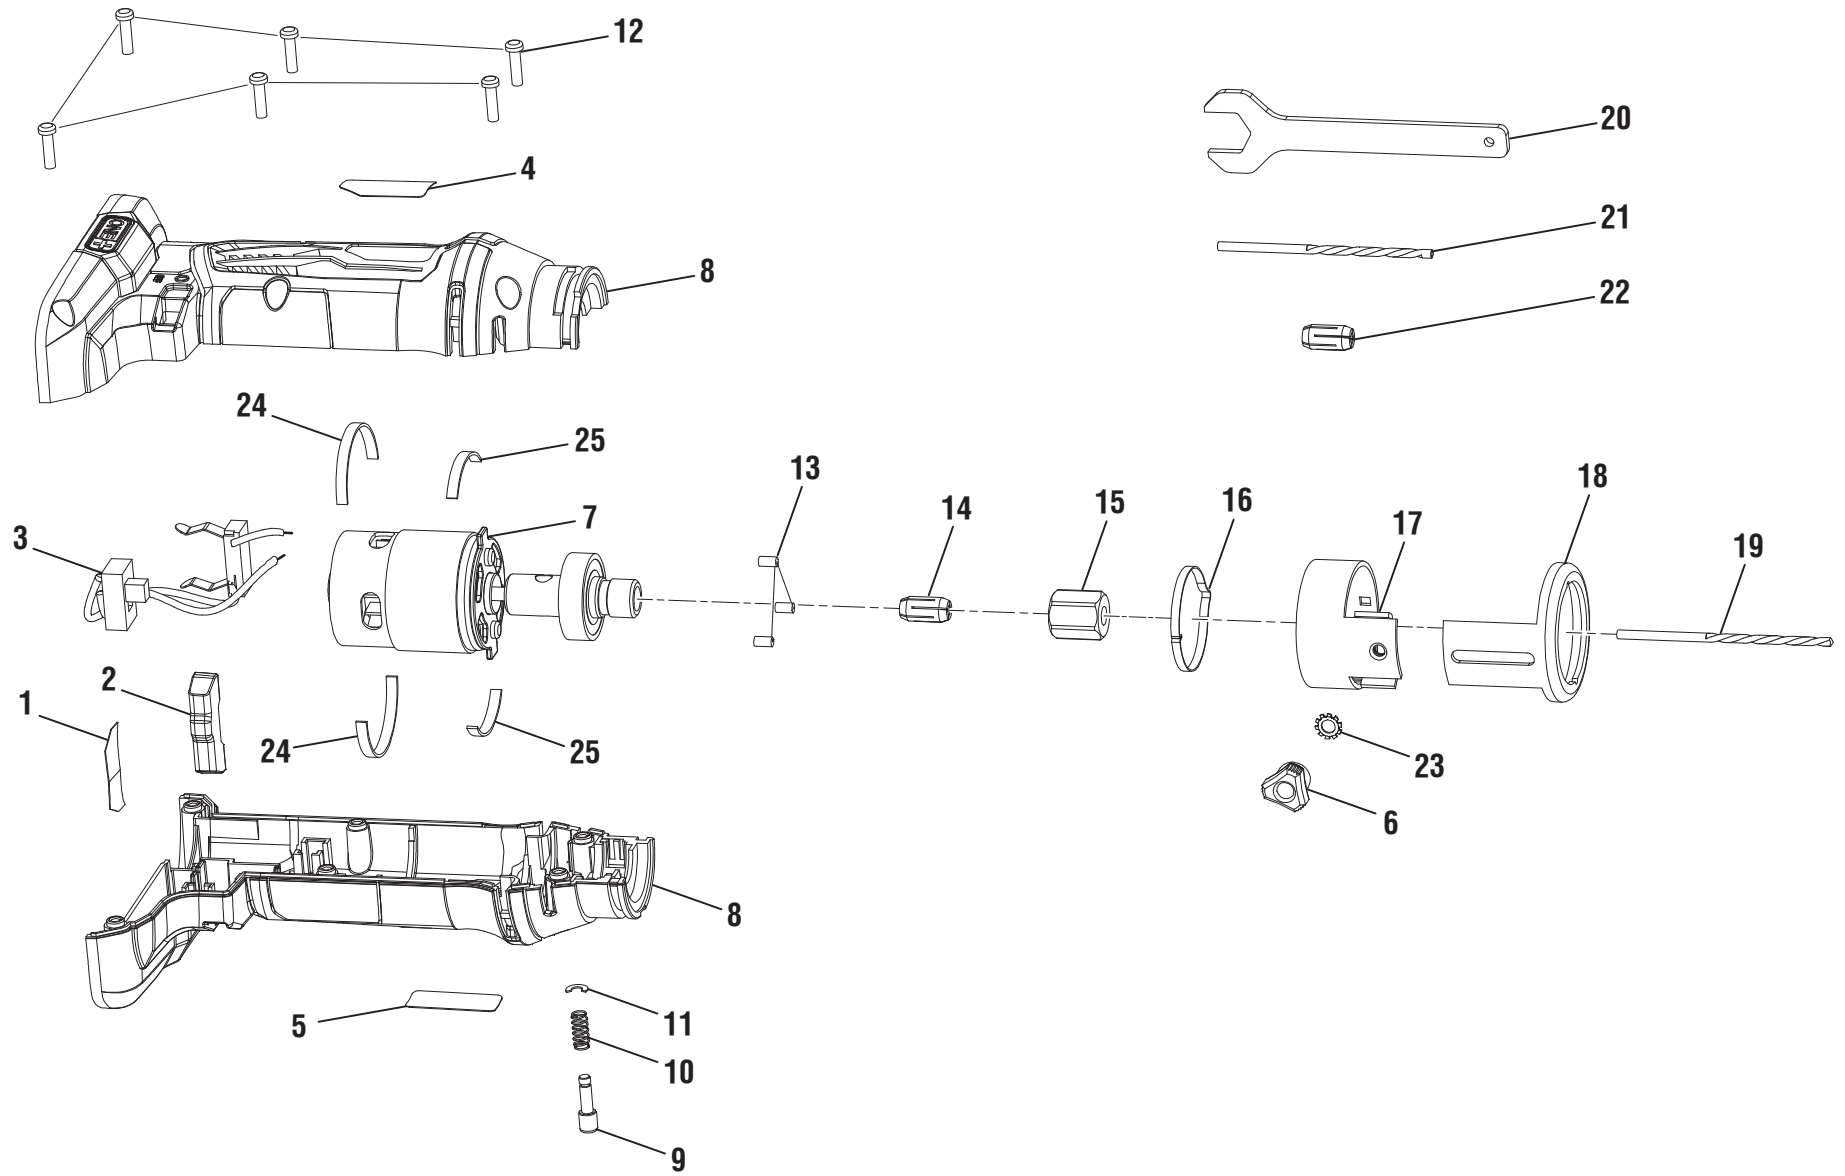


RYOBI SPEED SAW – MODEL NUMBER P531

The model number will be found on a label attached to the motor housing. Always mention the model number in all correspondence regarding your **SPEED SAW** or when ordering repair parts.

PARTS LIST

KEY NO.	PART NUMBER	DESCRIPTION	QTY	KEY NO.	PART NUMBER	DESCRIPTION	QTY
1	941121376	Battery List Label	1	16	6960101	Sleeve Spring (OD 38.5).....	1
2	527863001	Switch Knob.....	1	17	6960201	Base Sleeve	1
3	270013112	Switch and Contact Plate Assembly	1	18	6960301	Base Plate.....	1
4	941121375	Data Label.....	1	19	670233003	Piloted Drywall Cut Bit (1/8 in.).....	1
5	941002150	Logo Label	1	20	6960401	Wrench.....	1
6	3031704	Knob Assembly.....	1	21	670233005	Non-Piloted Drywall Cut Bit (1/8 in.).....	1
7	206274001	Motor Assembly.....	1	22	6904501	Collet (1/4 in.).....	1
8	203315001	Housing Assembly (Inc. Key Nos. 4-5)	1	23	6725201	External Tooth Lock Washer	1
9	6722901	Lock Pin	1	24	563498001	Foam Rubber	2
10	6723101	Compression Spring	1	25	563498003	Foam Rubber	2
11	6725101	Retaining Ring (E).....	1	Not Shown:			
12	660208048	Screw (M4 x 16 mm).....	6	991000088 Operator's Manual			
13	5671801	Rubber Pin	3	4-14-15			
14	6904401	Collet (1/8 in.).....	1	(Rev:01)			
15	6904301	Collet Nut (M14)	1				

RYOBI SPEED SAW - MODEL NUMBER P531

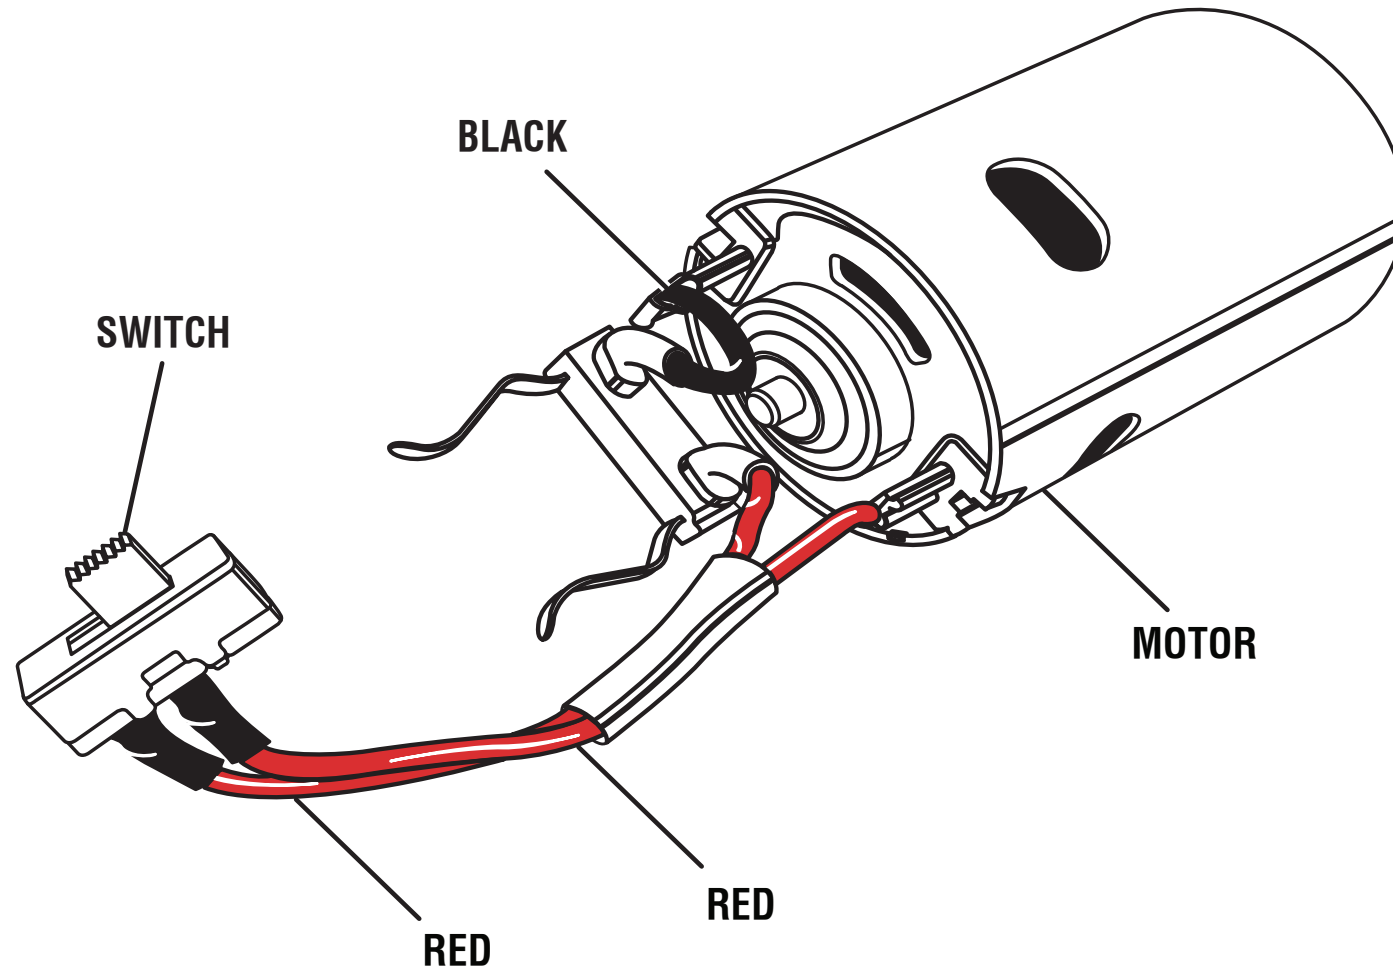

WIRING DIAGRAM