

RYOBI
18 VOLT HYBRID Score™ PRIMARY SPEAKER
18 VOLT HYBRID Score™ SECONDARY SPEAKER
MODEL NOs. P760 & P761
REPAIR SHEET


ONE WORLD TECHNOLOGIES, INC.

1428 Pearman Dairy Road, Anderson, SC 29625 • Phone 1-800-525-2579

États-Unis, Téléphone 1-800-525-2579 • USA, Teléfono 1-800-525-2579

www.ryobitools.com

RYOBI 18 VOLT SPEAKER – MODEL NUMBERS P760 and P761

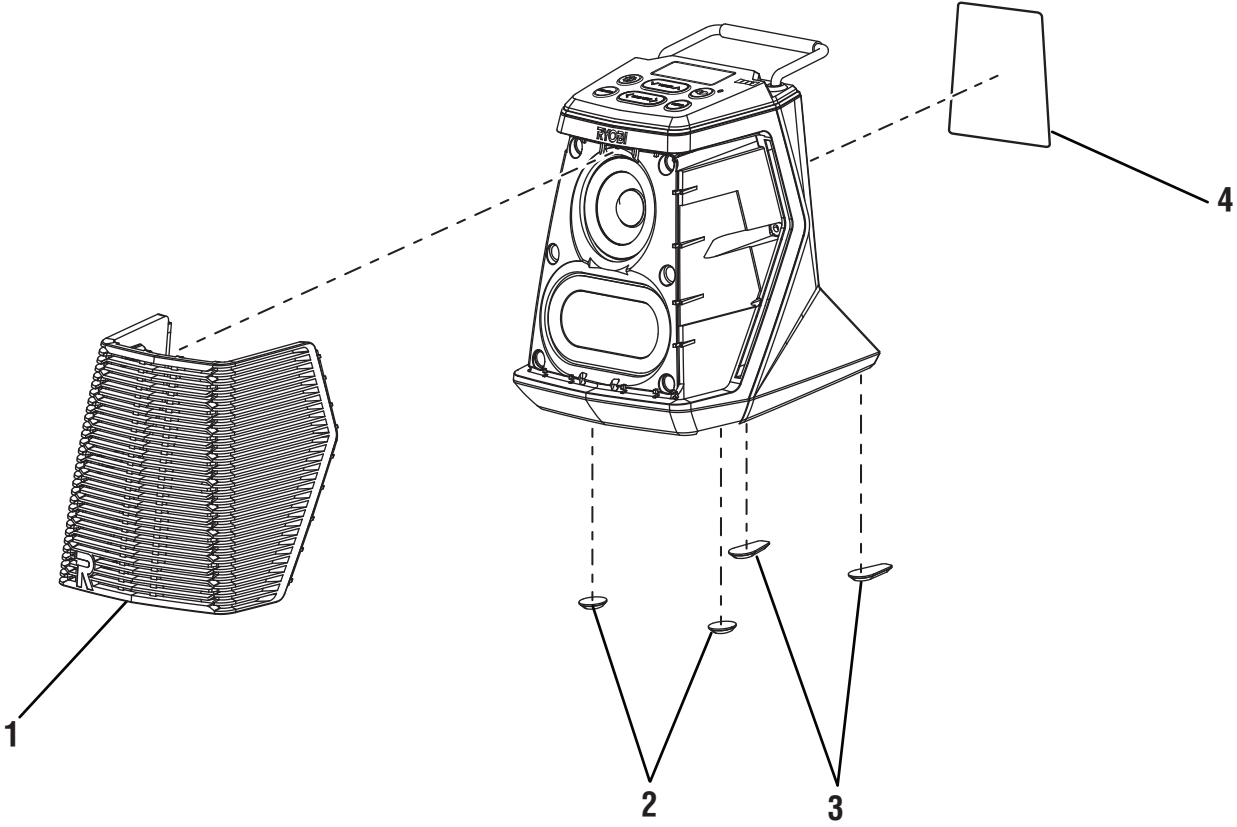

RYOBI 18 VOLT SPEAKER – MODEL NUMBERS P760 and P761

The model number will be found on a label attached to the housing. Always mention the model number in all correspondence regarding your **SPEAKER** or when ordering repair parts.

PARTS LIST

KEY NO.	PART NUMBER	DESCRIPTION	QTY
1	019727001001	Speaker Grill.....	1
2	019727001034	Feet "A".....	2
3	019727001042	Feet "B".....	2
4	941121863	Data Label (760).....	1
	941121862	Data Label (761).....	1
Not Shown:			
	019744001	Adapter, 100-240V SKAA Speaker	
	995000171	Operator's Manual (961152750)	
	5-30-17 (Rev:01)		