



## Parts List for PCC791B Type 1

Item Number	Part Number	Description	Qty Required
1	90611409-01	HOUSING SET	1
2	90614654	LEFT SIDE FRAME	1
3	90614655	RIGHT SIDE FRAME	1
4	90616600	END CAP	1
5	90621610	RUBBER PLUG	2
6	90615767	TRIGGER	1
7	098185-20	PIN	1
8	90551259	SPRING	1
9	90620174	LOCK OFF	1
10	90619629	LEVER	1
11	90619630	PIVOT	1
12	90615568	TORSION SPRING	1
13	90629535	POWER TAKE-OFF ASSY.	1
15	90626647	ROLLER	1
16	N082403	DOWEL PIN	1
17	90629538	BUMPER	1
18	638469-00	BUMPER	1
19	90615815	SPRING	1
20	90629542	DEPTH GUIDE	1
21	90616223	HOUSING	1
22	90616224	HOUSING	1
23	90623226	PCB ASSEMBLY	1
24	90629540	END BRIDGE	1
25	90608798	ARMATURE & BRG.	1
26	90614720	MAGNET RING	1
27	90614719	FLYWHEEL	1
28	90618959	TAPE	1

## Parts List for PCC791B Type 1

Item Number	Part Number	Description	Qty Required
29	90559833	BALL BEARING	1
30	90615722	RETAINING RING	1
31	90622035	BEARING PLATE	1
32	330041-61	ROLLER PIN	1
33	326467-00	DETENT	1
34	588470-00	PIN	1
35	90610773	NUT	1
36	90516498	SPRING	2
37	330019-04	SCREW,PLASTITE	10
38	90617084	MAGAZINE ASSEMBLY	1
39	330019-05	SCREW,PLASTITE	2
40	330045-05	LOCK SCREW	7
41	90621828	WASHER	2
42	330045-07	SCREW M4X20 T20	7
43	330019-38	SCREW	2
44	90614915	SCREW	2
45	582193-00	SCREW	1
46	90626342	MACHINE SCREW	1
47	90618133	HARNESS & SWITCH ASY	1
100	90626069	BELT HOOK	1
120	9R209494	CONTACT FOOT-NO MAR	1
141	90629541	DRIVER ASSEMBLY	1
142	90629537	RETURN DEVICE	1
150	90623626	INFORMATION LABEL	1
866	PCC680L	BATTERY PACK	1
871	PCC692L	CHARGER	1