



## Parts List for PCE211 Type 1

Item Number	Part Number	Description	Qty Required
1	5140191-58	SCREW	4
2	5140191-59	SPRING WASHER	4
3	5140191-60	WASHER	4
4	5140191-61	GEARCASE	1
5	5140191-62	O-RING	1
6	5140191-63	BUSHING	1
7	5140191-64	WASHER	1
8	5140191-65	ANVIL	1
9	5140191-66	STEEL BALL	2
10	5140191-67	HAMMER BLOCK	1
11	5140136-73	BALL	24
12	5140191-68	WASHER	1
13	5140191-69	SPRING	1
14	5140191-70	MAIN SHAFT	1
15	5140191-71	PLANET GEAR	3
16	5140191-72	ROLL PIN	3
17	5140191-73	WASHER	1
18	5140191-74	BEARING	1
19	5140191-75	SNAP RING	1
20	5140191-76	GEAR RING	1
21	5140191-77	OIL RING	1
22	5140191-78	GEARBOX	1
23	5140191-79	SEAL	1
24	5140191-80	BEARING	1
25	5140191-81	ARMATURE	1
25	5140191-82	FAN	1
26	5140191-83	BEARING	1

## Parts List for PCE211 Type 1

Item Number	Part Number	Description	Qty Required
27	5140191-84	SLEEVE BEARING	1
28	5140191-85	FAN BAFFLE	1
29	5140191-86	SCREW	2
30	5140191-87	BAFFLE	1
31	5140191-88	FIELD	1
32	5140191-89	GRIP	1
33	5140136-60	SCREW	7
34	5140191-90	SWITCH	1
35	5140187-29	CORD CLAMP	1
36	5140191-91	SCREW	3
37	5140187-51	TERMINAL BLOCK	1
38	5140191-92	CORD PROTECTOR	1
39	5140191-93	CORDSET	1
40	5140191-94	FIELD CASE	1
41	5140191-95	BRUSH HOLDER	2
42	5140191-96	SPRING	2
43	5140191-97	SCREW	4
44	5140191-98	BRUSH	2
45	5140191-99	LEAD WIRE	1
46	5140192-00	REAR HOUSING	1