



Parts List for PTX45-B3 Type 1

Item Number	Part Number	Description	Qty Required
1	5140065-06	FLANGE NUT	1
2	5140065-07	GRINDING WHEEL	1
3	5140065-08	FLANGE RUBBER SHIELD	1
4	5140065-09	FLANGE	1
5	5140065-10	WHEEL GUARD	1
6	5140065-11	RETAINER	1
7	5140065-12	HEX SOC HD SCR	4
8	5140065-13	SPRING WASHER	4
9	5140065-14	GASKET	1
10	5140065-15	ARBOR	1
11	5140065-16	WOODRUFF KEY	1
12	5140065-17	BALL BEARING	1
13	5140065-18	BEVEL GEAR	1
14	5140065-19	WAVY WASHER	1
15	5140065-20	RETAINER RING	1
16	5140065-21	BALL BEARING	1
17	5140065-22	SEAL PLATE	1
21	5140065-23	RD HD SCREW	2
22	5140065-24	EXHAUST DEFLECTOR	1
22	5140065-25	OIL CUP	1
23	5140065-26	MOTOR HOUSING	1
24	5140065-27	HANDLE	1
25	5140065-28	BEVEL PINION	1
26	5140065-29	BALL BEARING	1
27	5140065-30	BALL BEARING	2
28	5140065-31	FRONT PLATE	1
29	5140065-32	CYLINDER	1

Parts List for PTX45-B3 Type 1

Item Number	Part Number	Description	Qty Required
30	5140065-33	SPRING PIN	1
31	5140065-34	ROTOR	1
32	5140065-35	ROTOR BLADE	4
33	5140065-36	REAR PLATE	1
34	5140065-37	ADJUST NUT	1
35	5140065-38	SPRING	1
36	5140065-39	SCREW	1
36	5140065-40	ADJUSTING SHAFT	1
37	5140065-41	GOVERNOR	1
38	5140065-42	PENDULUM	6
39	5140065-43	SPRING PIN	2
41	5140065-44	HANDLE GRIP	1
42	5140065-45	O-RING	1
43	5140065-46	LOCK RING	1
44	5140065-47	COUPLING NUT	1
45	5140065-48	HANDLE GRIP	1
46	5140065-49	THROTTLE VALVE HSG.	1
47	5140065-50	PLUNGER	1
48	5140065-51	HOSE ADAPTOR	1
49	5140065-52	VALVE STEM	1
50	5140065-53	O-RING	1
51	5140065-54	SPRING	1
52	5140065-55	O-RING	1
53	5140065-56	THROTTLE LEVER PLUG	1
54	5140065-57	THROTTLE LEVER	1
55	5140065-58	SPRING PIN	1
56	5140065-59	SPRING PIN	1

Parts List for PTX45-B3 Type 1

Item Number	Part Number	Description	Qty Required
57	5140065-60	TORSION SPRING	1
58	5140065-61	THROTTLE LEVER LOCK	1
60	5140065-62	WRENCH	1
61	5140065-63	WRENCH	1
62	5140065-64	PLUG	1