
Tanaka Parts Catalog

Portable Generator

Model: QEG-250/300


FIG.1 ENGINE

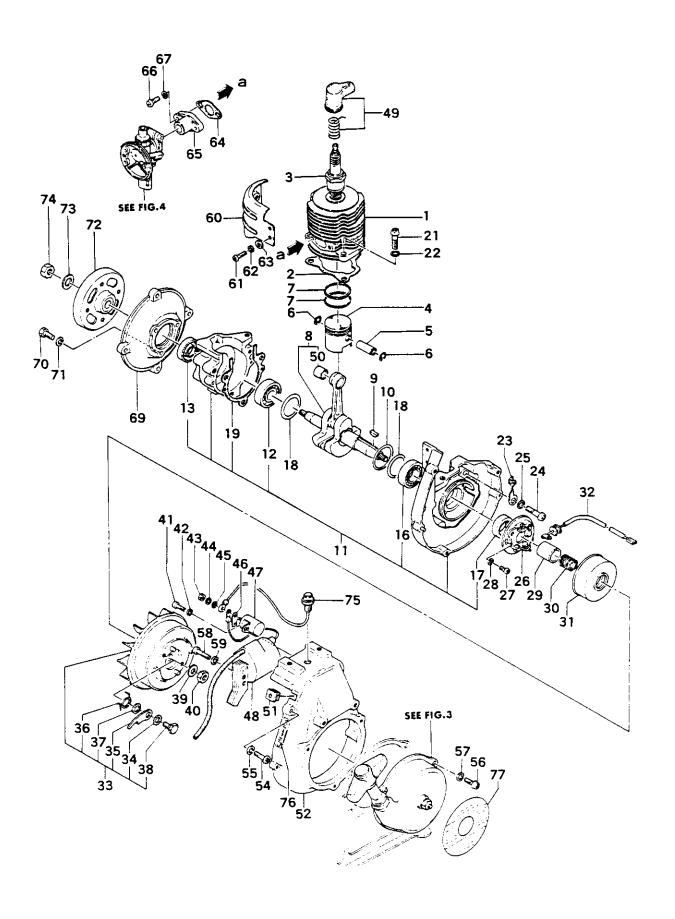

		, 		
	ENCE PRODUCTION PI	ART /	QUANTITY SERIAL T	/ ca /
	LE ONP	<i></i>		IMBE QT
	ere sole	NAME		L PER
144	WEE ZOOLNEE	, ar '	JAN ERIAL	OARTMEL
DE M	ENCE PRODUCTION PO	PART WAVE	QUANTITY SERIAL !	SPARE PART
	FIG.1 ENGIN	E		
1-001		CYLINDER COMP.	1	002 0010 1
1-002		CYLINDER GASKET	1 1	017 0010 9
1-003 1-004	018-00502-200	SPARK PLUG BM6A	li l	031 0010 3
1-005		PISTON PIN 9X24	1	037 0000 8
1-006	039-00000-201	PISTON PIN CIRCLIP	2	039 0000 2
1-007	041-00000-200	PISTON RING	2	041 0000 9
1-008	046-00501-803	CRANK SHAFT COMP.	1	046 0020 8
1-009		WOOD-RUFF KEY 3X13X5	1	068 0040 2
1-010 1-011	070-02401-201	CRANK SHAFT WASHER 15X22 CRANK CASE ASSTY		072 0210 8
1-012	999-61620-100		i	999 6133 4
1-013	999-66122-821	OIL SEAL 12287	1	999 6615 3
1-016	999-61600-200	BALL BEARING #6002	1	999 6111 2
1-017		OIL SEAL 15257		999 6622 3
1-018 1-019		CRANK SHAFT WASHER 12X18 CRANK CASE GASKET	2	090 0010 4
1-021	990-11060-201		3	990 1133 6
	202 100/0 013	C HACHED 4	3	992 1019 7
1-022 1-023	992-10060-012		i	198 0010 1
1-024	990-11060-221	SCREW 6X22	3	990 1136 3
1-025	992-10060-012		3	992 1019 7
1-026 1-027	790-11040-101	CONTACT BREAKER ASS*Y SCREW 4×10	1 2	159 0160 4 990 1029 0
1-028	992-01040-011		2	992 0031 0
1-029 1-030	1	CAM SUPPORT SPRING	i	247 0001 2
1-031		CONTACT POINT COVER	1	191 0010 2
1-032	173-20702-804		1	173 0230 0
1-033	155-21708-900	MAGNETO ROTOR ASSTY	1	155 0990 1
1-034	992-01050-011		2	992 0035 6
1-035 1-036	788-00601-203	STARTER PAWL STARTER PAWL SPRING	2 2	788 0010 4
1-037		STARTER PAWL SHIM 0.6T	2	822 0000 B
1-038	793-10200-201	STEP BOLT	2	793 0030 6
1-039	065-00000-200	FLYWHEEL WASHER	1	065 0000 3
1-040		FLYWHEEL NUT 12	1	066 0000 0
1-041	990-11040-081		1	990 1026 3
1-042 1-043	992-10040-012	1	1	992 1007 2
1-044	992-10030-012		i l	992 1002 7
1-045	792-01030-011		1	992 0028 6
1-046	205-00501-200	TERMINAL TAB	1	205 0000 7
1-047	177-20701-801	CONDENSER COMP.	1	177 0131 4
1-048		IGNITION COIL COMP.	1	167 0160 3
1-049 1-050		SPARK PLUG CAP ASS*Y PISTON PIN BUSHING		157 0050 0 038 0000 5
1-051		SECONDARY CORD GROMMET	î	202 0100 9
1-052	112-00535-001	FAN CASE COMP.		112 0240 2
1-054	990-11050-201		3	990 1077 7
1-055	992-10050-012	S-WASHER 5	3	992 1012 4
1-056 1-057	990-11040-121		3	990 1033 3
1-058	990-11050-201		2	990 1077 7

REFERENCE PRODU	CTION PART WILE PART MAINE	QUANTIT	SERIAL NUMBER SPARE PART
B.V.	NGINE		
1-060 132-0050 1-061 990-1104 1-062 992-1004 1-063 992-0104 1-064 403-0000 1-065 393-0000 1-066 990-1105 1-067 992-1005 1-070 990-2106 1-071 992-1006 1-072 028-3080 1-073 992-0107 1-074 991-0107 1-075 170-0050	COUPLING TO-011 HASHER 7 TO-011 NUT 7 CO-011 STOP BUTTON COMP. CHOKE MARK COL-200 STARTER MARK QEG	2 1 3 3 3 1 1 2 2 1 3 3 3 1 1 1 1 1	992 1012 4 132 0000 4 990 1026 3 992 1007 2 992 0031 0 403 0010 2 393 0011 7 990 1070 4 992 1012 4 113 0140 6 990 2039 6 992 1019 7 028 0040 0 992 0045 3 991 0026 1 170 0000 2 908 0030 6 913 0040 1


FIG.2 AIR CLEANER & MUFFLER

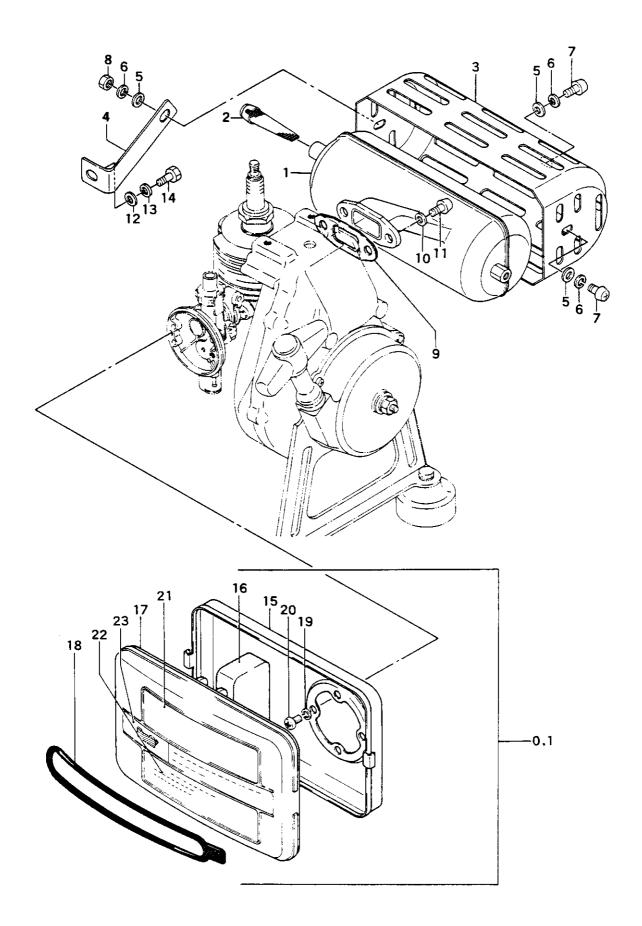

ae n	MERCE PRODUCTOR P	ART DART WAME	QUANTITY &	SERIAL NUMBER SPARE PART
	FIG.2 AIR C	LEANER & MUFFLER		
2-001 2-002 2-003 2-004 2-005 2-006 2-007 2-010 2-011 2-012 2-013 2-014 2-019 2-017 2-018 2-019 2-020 2-021 2-021 2-021 2-021 2-021 2-021 2-021 2-023 2-023 2-023	706-30807-810 732-00555-800 738-30807-210 760-30807-210 992-01060-011 992-10060-012 990-11060-061 971-01060-011 737-00531-201 990-11050-121 990-11050-121 992-10060-011 972-10060-011 972-10060-012 990-23060-151 424-30800-900 423-00535-802 444-00535-201 438-30800-200 972-10040-012 990-11040-081 904-30809-200 704-30809-200 704-30800-230 904-30803-200 894-30803-200 894-30803-200 894-30803-200 894-30803-200 894-30803-200	MUFFLER COMP. SPARK ARRESTER COMP. HEAT SHIELD MUFFLER STAY WASHER 6 SCREW 6X6 HEX. NUT 6 MUFFLER GASKET S.WASHER 5 SCREW 5X12 WASHER 6 BOLT 6X15 W/PLUS AIR CLEANER ASS'Y AIR CLEANER BODY COMP. AIR CLEANER ELEMENT A AIR CLEANER COVER CLEANER BAND S.WASHER 4 SCREW 4X8 NAME PLATE QEG-250 NAME PLATE QEG-300 NAME PLATE AQB-250 NAME PLATE AQB-250 NAME PLATE AQB-250 NAME PLATE AQB-300 CAUTION MARK QEG	1 1 1 1 1 2 2 1 1 1 1 1 1 1 1 1 1	706 2010 4 732 0090 3 738 1150 9 760 0230 2 992 0040 8 992 1019 7 990 1111 4 991 0022 5 737 0031 5 992 1012 4 990 1065 2 992 0040 8 992 1019 7 990 2131 7 424 0460 2 423 0040 9 444 0010 1 424 0071 6 438 0C20 3 992 1007 2 990 1026 3 992 1007 2 990 1026 3 904 0301 5 904 0301 5 904 0330 7 904 0340 4 894 0090 6 894 0100 6 900 0030 0 900 0040 7

	•••••••••••••••••	***************************************		···································	
		······································			
			•••••		
•					
		,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,			


FIG.3 RECOIL STARTER

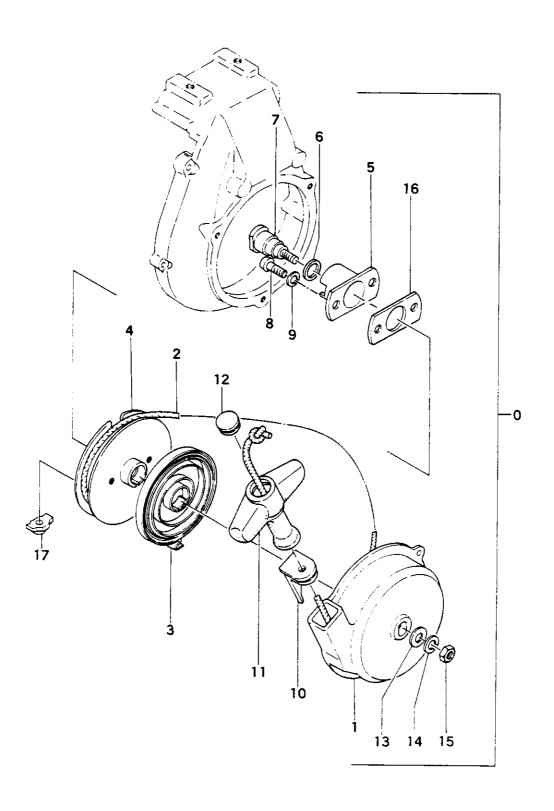

REFERENCE PRODUCTION PO	PART HAME	QUANTITY SERIAL N	UMBER SPARE PART
	L STARTER		
3-001 772-01014-200 3-002 783-01006-201 3-003 779-01006-201 3-004 774-01006-204 3-005 773-01006-206 3-006 814-00500-200 3-007 776-01006-207 3-008 990-11050-121 3-009 992-10050-012 3-010 785-10207-201 3-012 833-10207-200 3-013 992-01060-011 992-10060-012 3-015 991-01060-011	RECOIL SPRING STARTER ROPE REEL PULLEY SHAFT/OUTER STARTER PULLEY SHIM PULLEY SHAFT SCREW 5X12 S.WASHER 5 ROPE GUIDE STARTER HANDLE STARTER HANDLE CAP HASHER 6 S.WASHER 6 HEX. NUT 6 PULLEY SHAFT/OUTER COLLAR		756 0050 9 772 0250 3 783 0030 3 779 0030 2 774 0051 0 773 0020 3 814 0000 9 776 0010 7 990 1065 2 992 1012 4 780 0020 5 785 0100 9 833 0000 8 992 0040 8 992 1019 7 991 0022 5 823 0010 2 782 0000 5


······································

FIG.4 CARBURETOR & GOVERNOR LINK

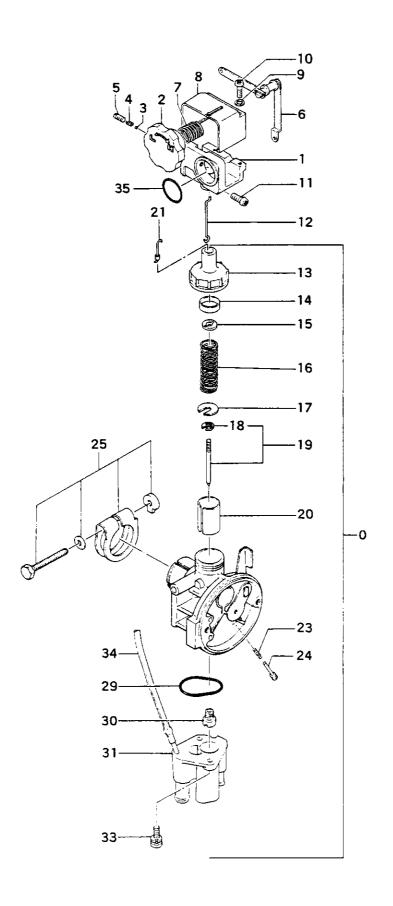

		ENCE PROUCTION PO	, AT		JUANTITY SERIAL NUN	aea	/	
	REFU	MCE TION P	PART NAME		NUN	NE .	SPARE PAR	క్త
	140	BER OUGER	at MA.		JANTITY SERIAL MUN		ARENEE	
	REKU	PRONUM	PAR		or ser		eb.Mo.	
	_		INTER & COVERNOR LINE					
l	•	FIG.4 CARBU	RETOR & GOVERNOR LINK					
ı	4-000		CARBURETOR ASSTY GEG/AGB-250	1			1120 0	
ı	4-000		CARBURETOR ASSTY QEG/AQ8-300	1			1060 5	
ı	4-001	340-30800-201	GOVERNOR CONTROL KNOB BASE	1	•		0010 2	- 1
I	4-002		GOVERNOR CONTROL KNOB	1			030 3	- 1
ı	4-003		STEEL BALL 1/8	1			010 5	- 1
١	4-004	496-26000-200	CHOKE SPRING	1		496 (0020 7	1
١	4-005	990-80040-100	SET SCREW	ı			8 000	
ı	4-006	348-30800-800	LINK SHAFT COMP.	1			0040 9	
ı	4-007		GOVERNOR SPRING A	1			090 2	1
ı	4-008	343-30800-200	CONTROL KNOB BASE COVER	ı			0020 0	- 1
ı	4-009	992-00030-011	SMALL WASHER 3	2	İ		0004 6	
ļ	4-010	990-11030-121	SCREM 3X12	2		990	1017 5	
١	4-011	990-11040-081	SCREW 4X8	1		990	1026 3	
ı	4-012		THROTTLE ROD B	1		516	0010 7	
ı	4-013		LINK MOTION CAP	1		498 (0090 0	1
1	4-014	526-22007-200	COLLAR	l I		526 (0040 1	1
1	4-015		THROTTLE SPRING CLAMP	1		535 (0010 6	1
ł	4-016	486-22007-200	THROTTLE SPRING	1		486 (0020 4	
ĺ	4-017	619-22912-200	THROTTLE SPRING RECEIVER 250	1		619 (0260 0	
I	4-017		THROTTLE SPRING RECEIVER 300	i		619 (0170 4	
ı	4-018		JET NEEDLE CLIP QEG/AQ8-250	li –		593 (0260 1	
1	4-018		JET NEEDLE CLIP QEG/AGB-300	l i		593	0250 4	
Ì	4-019		JET NEEDLE ASS'Y QEG/AQB-250	lī.	1	592	1121 1	
ı	4-019		JET NEEDLE ASSTY QEG/ACB-300	1		592	1310 1	
	4-020	501-22005-200	THROTTLE VALVE	1		591	1060 0	
١	4-020		THROTTLE ROD A COMP.	li			0020 7	1
	4-021		ADJUST SPRING	li l			0110 3	
	4-024	622-22000-200		li 💮			0130 0	
1	4-024		BODY BAND ASSTY	li			0150 8	
			CHAMBER GASKET	li			0370 3	
	4-029	801-22000-200	UNAMBER GASKET	1		" '		
Ì	4-030	579-22000-260	MAIN JET	1	1	599	0334 1	
	4-031	580-22007-800	FLOAT CHAMBER COMP.	1			0050 4	
	4-033	994-34040-100	SCREW 4X10/S	2			3031 1	
	4-034	565-00535-200	AIR VENT PIPE	1			0000 8	
	4-035	999-67015-000	O-RING P15	Į.		999	6717 4	
		ı	1	1	1 -	1		

FIG.5 ELECTRO-MAGNETIC GOVERNOR

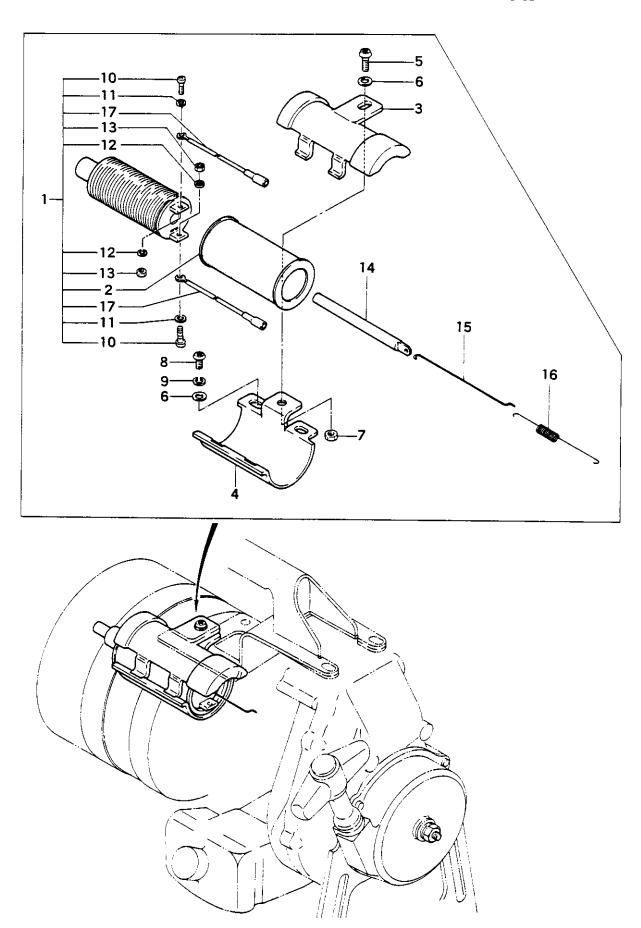


ak th	RENCE PRODUCTION P	PART MAME	QUANTITY SERIAL N	UMBER SPARE PART
!		O-MAGNETIC GOVERNOR		
5-001 5-002 5-003 5-004 5-005 5-006 5-007 5-008 5-009 5-010 5-011 5-012	368-30600-202 368-30800-200	WASHER 5 HEX. NUT 5 SCREW 5X10 S.WASHER 5 SCREW 3X8 SMALL WASHER 3	1 1 1 1 3 1 2 2 2 2 2	405 0060 1 368 0030 8 368 0040 5 366 0030 4 990 1065 2 992 0035 6 991 0015 5 990 1062 5 992 1012 4 990 1014 8 992 0004 6 992 1002 7
5-013 5-014 5-015 5-016 5-017		GOVERNOR PLUNGER	2 1 1 1 2 2	991 0007 6 266 0020 6 395 0080 1 376 0080 2 813 0030 3

 •••••					
 		•			
 		·····			
 		••••••		······································	······
 •••••••••••	·······				••••••


 		•••••		·····	
 		••-•••	****	***************************************	

FIG.6 GENERATOR

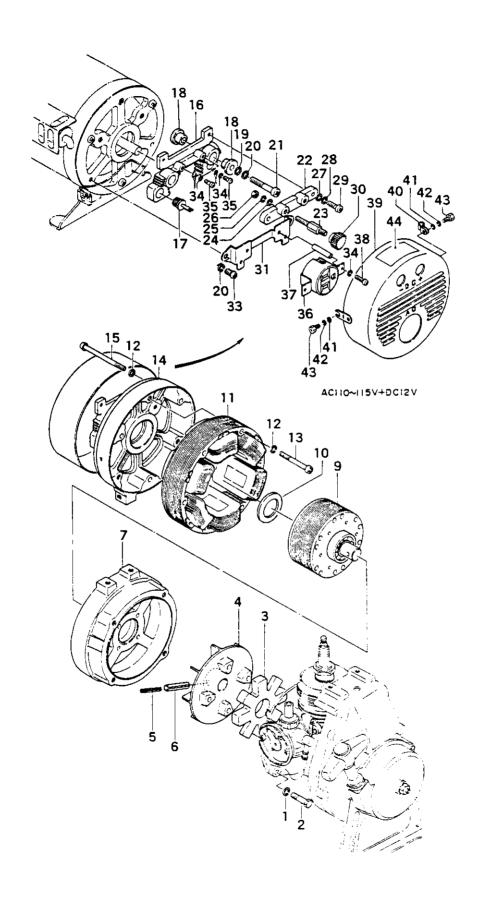

	HERE PRODUCTION P	ART		JUANTITY SEMAL MU	ZER	/
_	HERE PRODUCTION P	PARTNAME		/ J / SIL	MEE. SPARE PAR	<u>ئ</u> م
	REGER SUCTER	WAR		JUANTITY SERIAL NU	/26.0E	١٩
10E 21	IMP OR TUME	OAR!	/	JUAN GERN	EPARUME	\mathcal{A}
<u> </u>		/	<u> </u>		() (\prec
1	FIG.6 GENER					i
1			,	<u> </u>	002 1010 7	
6-001	992-10060-012		3		992 1019 7	
6-003	030-30200-200	COUPLING RUBBER	1		030 0010 6	1
6-004	027-30200-200		1	1	027 0050 0	
6-005 6-006	1	SPRING PIN 3.5X28 SPRING PIN 6X28	1 1		993 2014 8	ļ
" " " " " " " " " " " " " " " " " " "	773 27000 200	STATE OF THE ONE	-		//3 201/	ŀ
6-007		REAR CASE COMP.	1		105 0010 3	
6-010	108-30800-900		1 V		109 0000 7	
6-011		STATUR CORE ASS'Y GEG/AGB-250	ľ		067 0100 0	
6-011		STATUR CORE ASS'Y GEG/AGB-300	ī		067 0080 3	j
6-012	992-10060-012	S.WASHER 6	4		992 1019 7	l
6-013	990-11060-451	SCREW 6X45	1		990 1155 8	j
6-014	I .	FRONT CASE COMP.	ī	[110 0080 0	
6-015	990-11060-651		3		990 1163 7	ł
6-016	231-30805-200	1	1	1	231 0050 3	-
6-017	174-30800-200	DIODE BASE BUSHING A	2	ł	174 0040 8 232 0010 2	
0-016	232-30803-200	DIOCE BASE BUSHING A	7		232 0010 2	
6-019	992-01060-011	1	2		992 0040 8	1
6-020	972-10060-012	1	4	ł	992 1019 7	- 1
6-021	990-11060-351	SCREW GX35 DC TERMINAL BASE	2	ì	990 1149 7	- 1
6-023	160-30805-200		2		295 0000 4	- 1
6-024	992-01050-011	<u> </u>	2		992 0035 6]
6-025	992-10050-012	SAWASHER 5	2		992 1012 4	l
6-026	991-01050-011		2		991 0015 5	
6-027	992-01050-011	WASHER 5	2		992 0035 6	- 1
6-028	992-10050-012		2		992 1012 4	- 1
6-029	990-11050-141	DC TERMINAL CAP COMP.	2		990 1068 9	
0.030		DE TERMINAL CAP COMPS	-		181 0011 2	- 1
6-031		AC RECEPTACLE BASE COMP.	1		235 0030 7	
6-033	990-11060-081		2	}	990 1112 3	- 1
6-035	990-11040-081		ž		990 1026 3	
6-036	409-30803-900		1		409 0020 1	
6-037	410-30407-200	SOCKET COLLAR	2		410 0800 1	
6-038	990-11040-301	SCREW 4×30	2		990 1054 6	- 1
6-039	184-30809-800	CASE COVER COMP. QEG/AQ8-250	ī		184 0060 5	
6-039	184-30805-800	CASE COVER COMP. QEG/AQB-300	ī		184 0050 8	
6-040	198-00701-201		1		198 0050 9	- 1
6-041	992-01040-011		2		992 0031 0	1
•					[[
6-043	990-23040-101	BOLT 4X10 Battery Caution Mark	2		990 2176 0	
	5.70 50807-200	DETERT CHUILDI MARK	*		888 0040 6	-
						-
]			
L						


FIG.7 PUMP & FUEL TANK

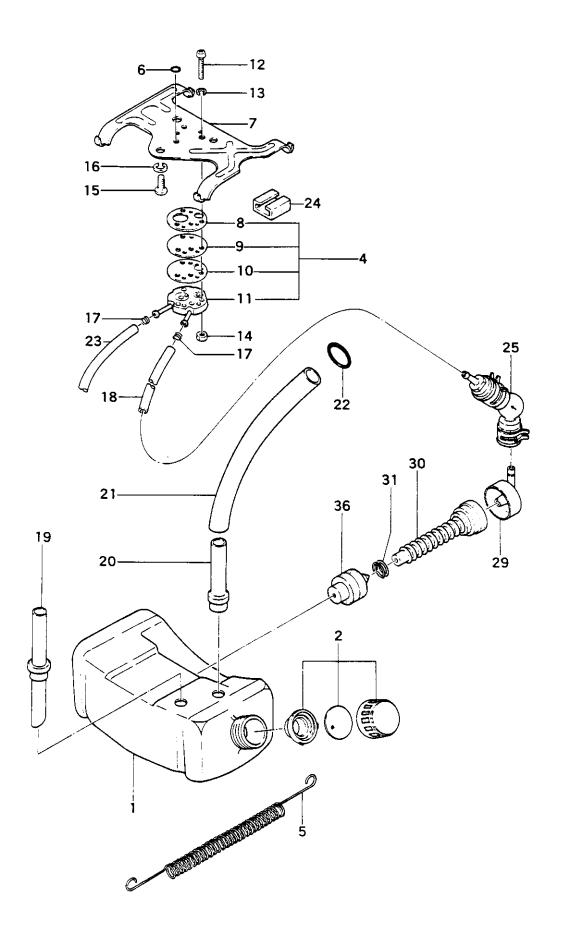

/,c&	RENCE PRODUCTION P	ART PART WAME		JUANTITY SERIAL MI	MBER	PART
AF A	S. SKM.	PA		3 ⁽¹⁾ 5 ⁽²⁾	SP'M	,
	FIG.7 PUMP 8					
7-001	591-00535-210	TANK COMP.	1		571 0101	1
7-002	595-00539-900	TANK CAP ASSTY	1		595 0020	1
7-004	593-00535-900		1		593 0040	1
7-005		FUEL TANK BAND	2		648 0040	2
7-006	979-67004-000	F =	1		999 6702	2
7-007	653-00502-200	FUEL TANK BRACKET	ı		653 0030	3
7-008	671-04001-213	PUMP GASKET	1		671 0001	3
7-009	670-04003-200	PUMP DIAPHRAGM	1		670 0030	8
7-010	674-04001-211		1	ĺ	674 0001	4
7-011		PUMP SUCTION SIDE COMP.	1		667 0041	0
7-012	990-11040-121	<u> </u>	3		990 1033	3
7-013	992-10040-011	S+HASHER 4	3		992 1006	3
7-014	991-01040-013	NUT 4	3		991 0012	a
7-015	970-11060-101	SCREW 6X10	3		990 1116	· 1 1
7-016	992-10060-012	S-WASHER 6	3		992 1019	
7-017	701-00702-200	FUEL PIPE STOPER	2		701 0040	
7-018	700-03005-120	FUEL PIPE 3X5X120	li i	1	700 0580	8
7-019	532-00535-20 <i>2</i>	RETURN PIPE A	1		532 0001	7
7-020	530-00502-202	RETURN PIPE	1		530 0010	
7-021	700-14508-255	FUEL PIPE	li		700 2050	-
7-022	999-67015-000	O-RING P15	1		999 6717	-
7-023		FUEL PIPE 3X5X120	1		700 0580	1 1
7-024	655-04001-200	FUEL TANK CUSHION RUBBER A	4		655 0100	9
7-025	593-00638-900	PRIMER PUMP ASS Y	1		593 0060	5
7-029	500-33202-205	RUBBER PIPE CAP	1		500 0171	
7-030	678-00206-203		li i		678 0051	1 1
7-031	680-04019-210	CLIP 7	li l		680 0162	
7-036	675-00206-900	PUMP FILTER BODY ASS*Y	i		675 0020	-
[
İ						

 ······································

FIG.8 HANDLE & FRAME

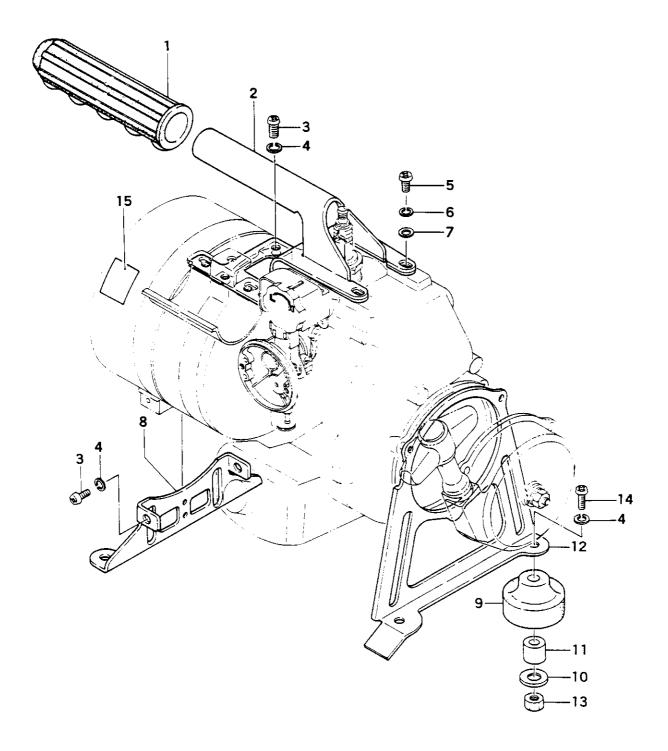

DE THE	RENCE PRODUCTON PART	PARTNAME	QUANTITY SERIAL	NUMBER SPARE PART
	FIG.8 HANDLE & FRA	AME		
8-001 8-002 8-003 8-004 8-005 8-006 8-007 8-008 8-009 8-010 8-011 8-012	266-30600-201 HANDLE 259-30800-900 HANDLE 990-11060-121 SCREW 6 992-10060-012 S-WASHE 990-11050-141 SCREW 5 992-10050-012 S-WASHE 992-01050-011 WASHER 249-30800-200 FRAME B 312-30200-200 CLUTCH 321-30410-200 COLLAR 248-30800-200 FRAME A	ASS*Y X12 R 6 X14 R 5 S BASE WASHER B	1 1 3 7 2 2 2 1 4 4	266 0010 9 259 0060 2 390 1119 6 992 1019 7 990 1068 9 992 1012 4 992 0035 6 249 0020 1 312 0020 4 359 0010 8 321 0000 6 248 0020 4
8-013 8-014 8-015 8-015	991-01060-011 HEX. NU 990-11060-251 SCREW 6 912-30809-200 MODEL M 912-30803-210 MODEL M	X25 BARK GEG/AGB-250	4 4 1 1 1 1	991 0022 5 990 1141 5 912 0030 7 912 0011 2

 		••••••

FIG.9 TOOLS & OPTIONAL PARTS

