

RYOBI CORDLESS CIRCULAR SAW - MODEL NUMBER R10630

The model number will be found on a plate attached to the motor housing. Always mention the model number in all correspondence regarding your **CORDLESS CIRCULAR SAW** or when ordering repair parts.

SEE BACK PAGE FOR PARTS ORDERING INSTRUCTIONS

PARTS LIST

Key No.	Part Number	Description	Quan.	Key No.	Part Number	Description	Quan.
1	975546-000	Carriage Bolt (M6 x 102 mm)	1	16	975541-000	Bumper Screw	1
2	975547-000	Base Assembly	1	17	975540-000	Spring	1
3	975544-000	Lock Nut	2	18	975539-000	Lower Blade Guard	1
4	975548-000	Knob	2	19	975538-000	Ball Bearing (NTN #6200LB)	1
5	975552-000	Spring	1	20	975537-000	Bearing Retainer	1
6	975551-000	Rip Guide Screw	1	21	975536-000	Bearing Retainer Screw	3
7	975549-000	Base Screw	1	22	975534-000	Inner Blade Washer	1
8	975559-000	Hex Nut	1	23	975419-001	Saw Blade	1
9	975558-000	Screw	1	24	975533-000	Outer Blade Washer	1
10	975550-000	Carriage Bolt (M6 x 13 mm)	1	25	975532-000	Blade Screw	1
11	980057-000	Data Plate	1	26	980011-000	Battery Pack	1
12	975557-000	Warning Label	1	27	977405-000	Charger	1
13	975545-000	Upper Blade Guard	1	28	975554-000	Optional Rip Guide	1
14	975543-000	Upper Blade Guard Screw	3	29	975553-000	Blade Wrench (5 mm Hex Key)	1
15	975542-000	Bumper	1	30	980058-000	Carrying Case - Not Shown	1
					972000-573	Operator's Manual	