


RYOBI LED UTILITY LIGHT – MODEL NO. RP4410

The model number will be found on a label attached to the housing. Always mention the model number in all correspondence regarding your **LED UTILITY LIGHT** or when ordering replacement parts.

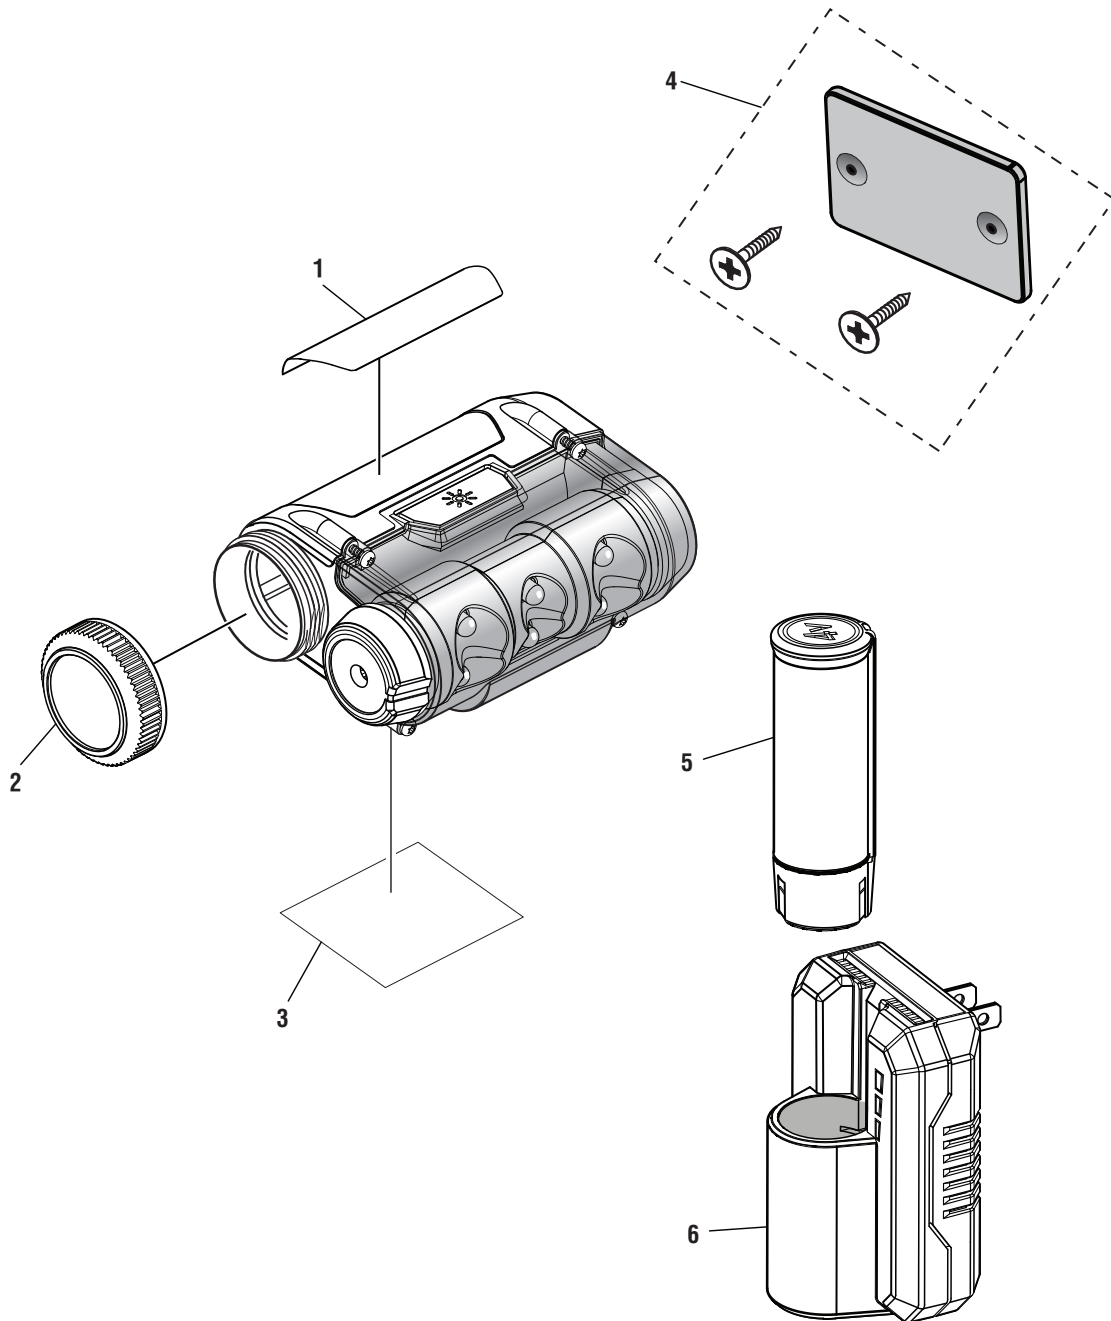

PARTS LIST

KEY NO.	PART NUMBER	DESCRIPTION	QTY.	KEY NO.	PART NUMBER	DESCRIPTION	QTY.
1	83-187-A03H000	Logo Label	1	NOT SHOWN:			
2	52-187-R04R010	Battery Cap	1	987000975		Operator's Manual.....	1
3	83-187-A00H000	Data Label.....	1	987000654		Operator's Manual (AP4700)..	1
4	ACC-187A-01R	Wall Mounting Plate w/Screws.....	1	987000706		Operator's Manual (AP4001)..	1
5	130166003	Battery Pack.....	1	3-24-10			
6	140129002	Charger.....	1	(REV:01)			