


RYOBI 3/8 in. 14.4 VOLT CORDLESS DRILL - MODEL NO. SA14402

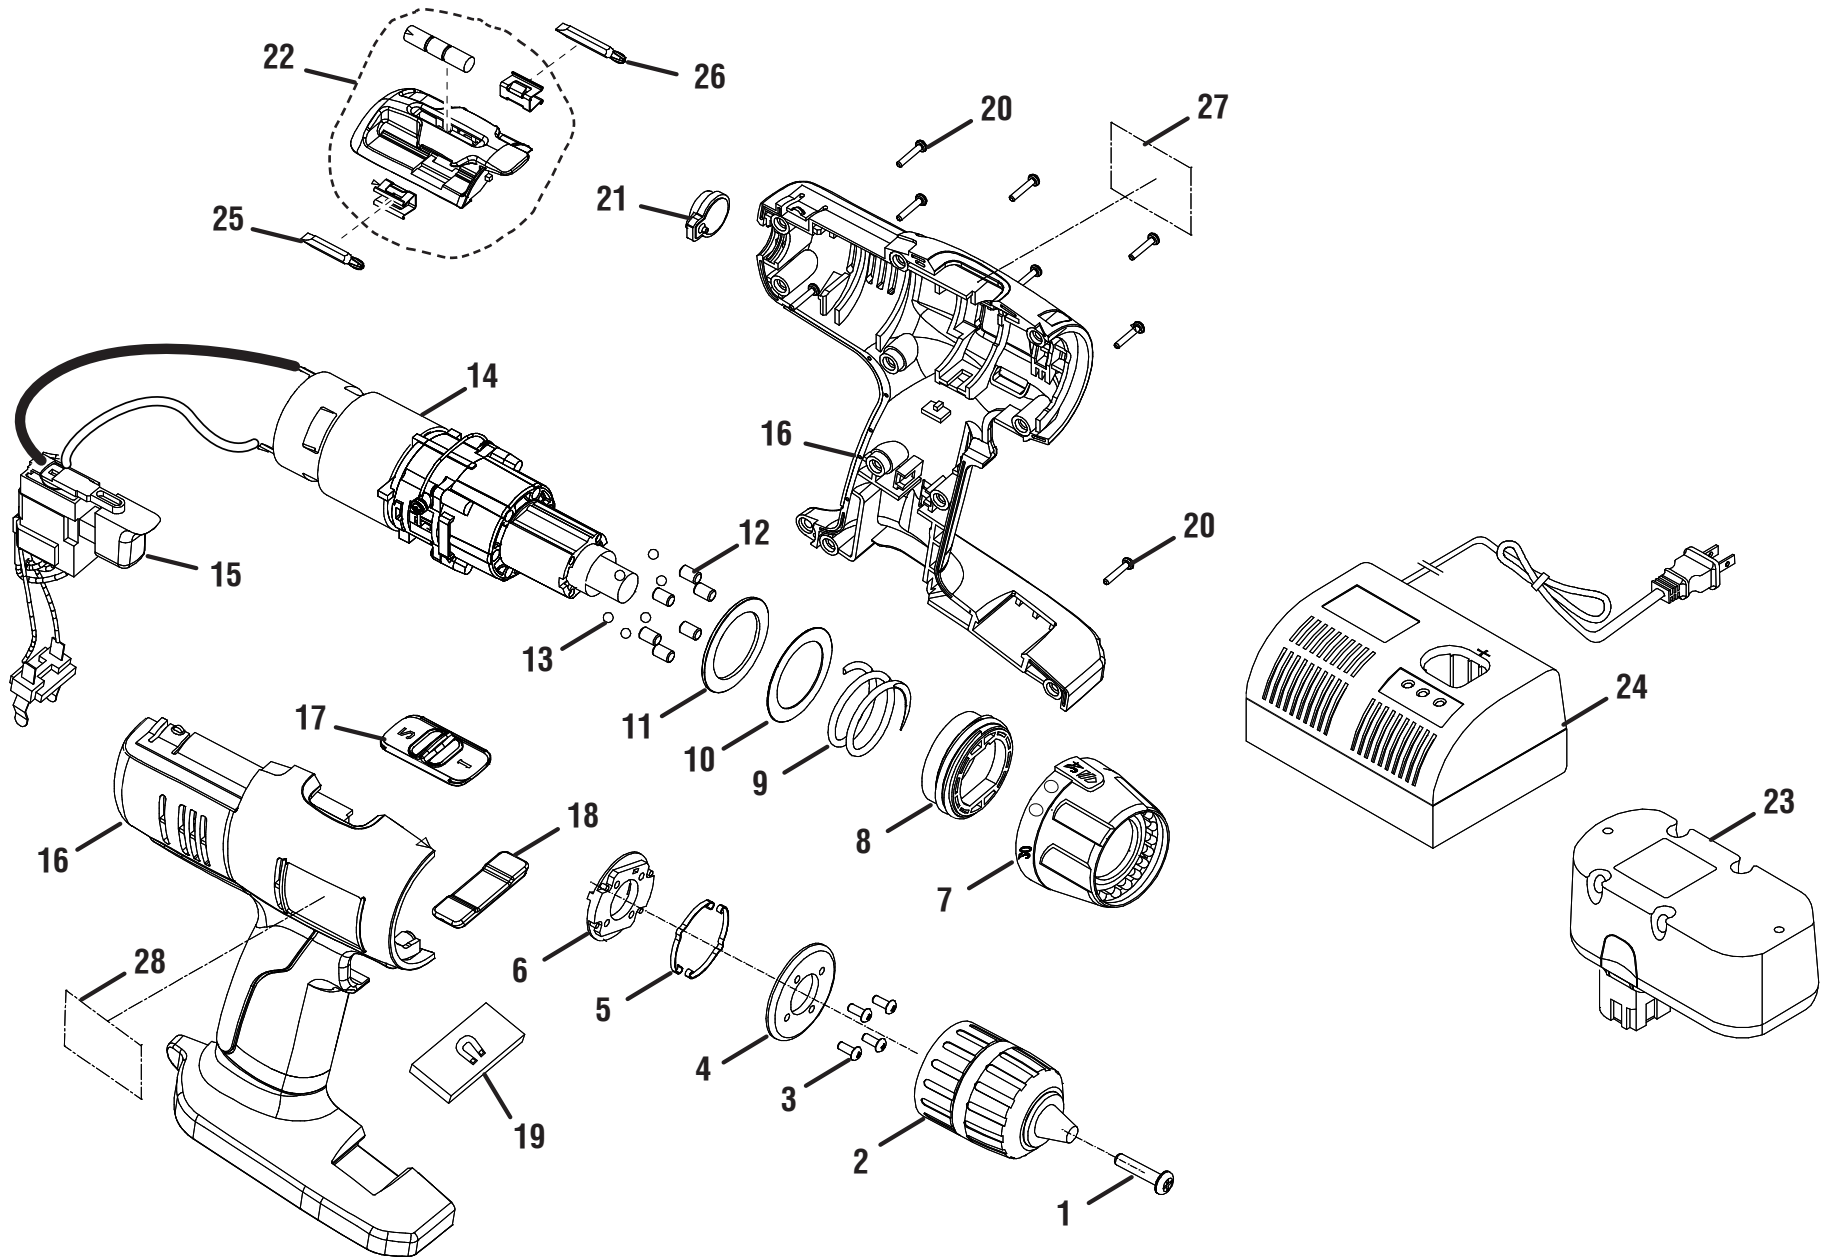

## RYOBI 3/8 in. 14.4 VOLT CORDLESS DRILL – MODEL NO. SA14402

The model number will be found on a label attached to the motor housing. Always mention the model number in all correspondence regarding your **RYOBI CORDLESS DRILL** or when ordering repair parts.

### PARTS LIST

KEY NO.	PART NUMBER	DESCRIPTION	QTY	KEY NO.	PART NUMBER	DESCRIPTION	QTY
1	6612001	Screw (M5 x 26 mm).....	1	17	540753002	Gear Change Button.....	1
2	690032011	Chuck .....	1	18	540752003	Foward/Reverse Selector .....	1
3	6620311	Screw (M3 x 20 mm).....	4	19	6000303	Magnet.....	1
4	6359801	Mounting Plate .....	1	20	6620614	Screw (M3.5 x 14 mm).....	11
5	6399201	Spring Plate .....	1	21	304152003	Rear Level.....	1
6	5434601	Spring Holder .....	1	22	300034004	Bit Storage and Level Assembly .....	1
7	300155029	Clutch Cap Assembly .....	1	23	130224010	Battery Pack .....	2
8	5437201	Sleeve.....	1	24	1412001	Charger.....	1
9	6843401	Spring .....	1	25	6782044	Bit .....	1
10	6854701	Washer (.2 mm).....	1	26	6782045	Bit .....	1
11	6710501	Washer (.8 mm).....	1	27	940237016	Data label.....	1
12	6833802	Pin.....	6	28	9418528	Logo label.....	1
13	6721901	Ball.....	6	<b>Not Shown:</b>			
14	985133001	Motor w/Gear Train Assembly .....	1	300912024	Carrying Case.....	1	
15	270016074	Switch Assembly .....	1	983000334	Operator's Manual		
16	200202022	Housing Assembly.....	1	9-15-11 (Rev:02)			