


RYOBI 1/2 in. 18 VOLT CORDLESS DRILL – MODEL NO. SA1802

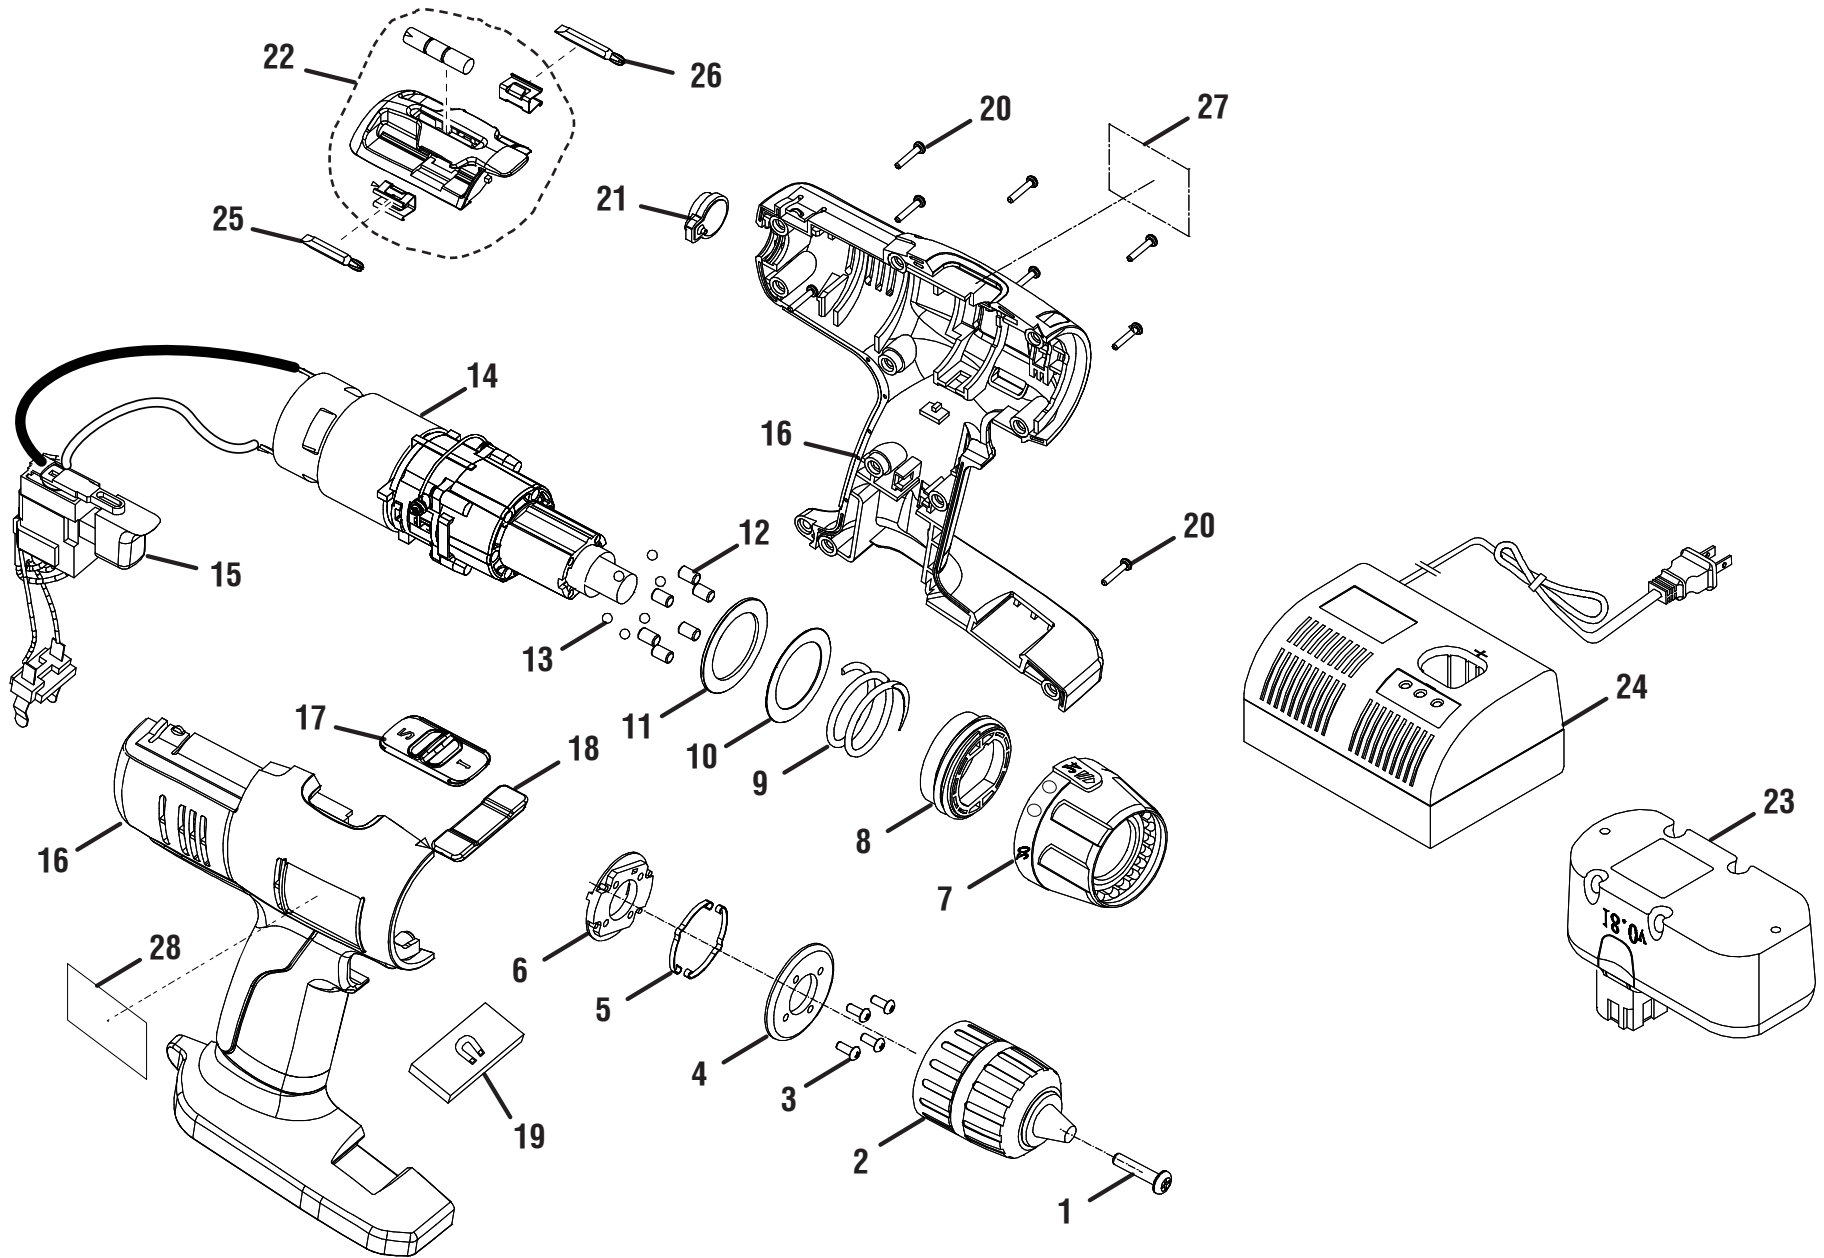

RYOBI 1/2 in. 18 VOLT CORDLESS DRILL – MODEL NO. SA1802

The model number will be found on a label attached to the motor housing. Always mention the model number in all correspondence regarding your **RYOBI CORDLESS DRILL** or when ordering repair parts.

PARTS LIST

KEY NO.	PART NUMBER	DESCRIPTION	QTY	KEY NO.	PART NUMBER	DESCRIPTION	QTY
1	6613402	Screw (M6 x 27 mm).....	1	17	540753002	Gear Change Button.....	1
2	690032012	Chuck.....	1	18	5475201	Foward/Reverse Selector	1
3	6620311	Screw (M3 x 20 mm).....	4	19	6000303	Magnet.....	1
4	6359801	Mounting Plate.....	1	20	6620614	Screw (M3.5 x 14 mm).....	11
5	6399201	Spring Plate	1	21	304152003	Rear Level.....	1
6	5434601	Spring Holder.....	1	22	300034004	Bit Storage and Level Assembly.....	1
7	300155029	Clutch Cap Assembly	1	23	130224007	Battery Pack	2
8	5437201	Sleeve	1	24	1423701	Charger	1
9	6843401	Spring	1	25	6782044	Bit	1
10	6854701	Washer (0.2 mm).....	1	26	6782045	Bit.....	1
11	6710501	Washer (0.8 mm).....	1	27	940237017	Data label.....	1
12	6833802	Pin.....	6	28	9418529	Logo label	1
13	6721901	Ball.....	6	Not Shown:			
14	985137001	Motor W/Gear Train Assembly.....	1	300912025	Carrying Case	1	
15	270016075	Switch Assembly	1	983000334	Operator's Manual		
16	200202021	Housing Assembly	1	9-15-11 (REV:02)			