


Pneumatic Concrete Pinner

Parts Reference Guide

Guía de referencia de piezas

Pièces Guide de référence

Schematic Drawings Inside
Plano esquemático en el interior
Schéma intérieur

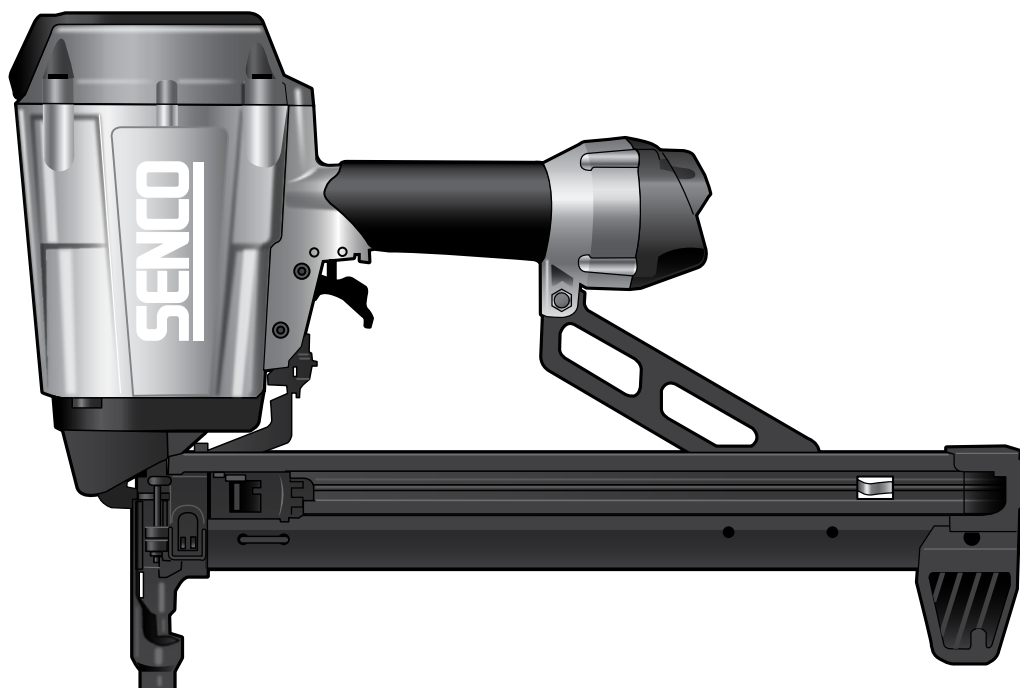

Repair Kits

YK0444

YK0445

SENCO[®]


Senco Brands, Inc.
4270 Ivy Pointe Blvd.
Cincinnati, OH 45245
1-800-543-4596
www.senco.com

NFG07J • Revised October 9, 2014 (Replaces 11/21/2013)

Questions? Comments? call SENCO's toll-free Action-Line: 1-800-543-4596
(North and South America Only) or email: toolprof@senco.com



¿Tiene preguntas? ¿Comentarios? Llame a la línea gratuita de acción de Senco: 1-800-543-4596
(sólo para América del Norte y del Sur) o envíe un correo electrónico: toolprof@senco.com

Des questions? Des commentaires? Communiquez avec le service d'assistance sans frais de Senco : 1-800-543-4596
(Amérique du Nord et Amérique du Sud seulement) ou envoyer un courriel: toolprof@senco.com

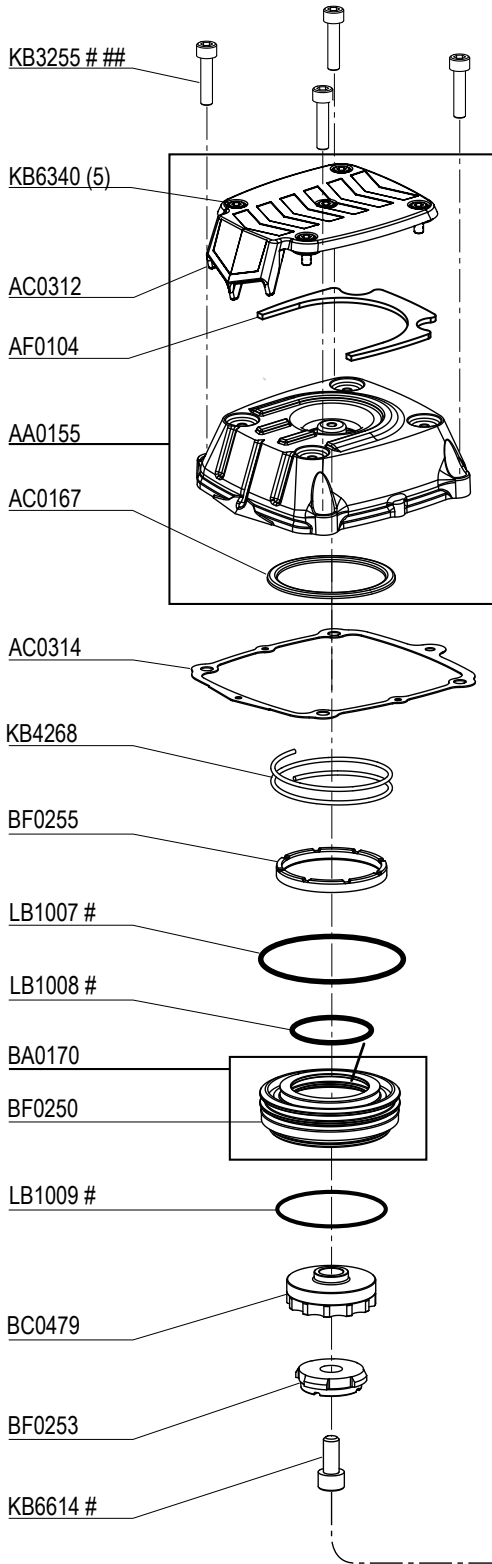


Tool #

7J0001N

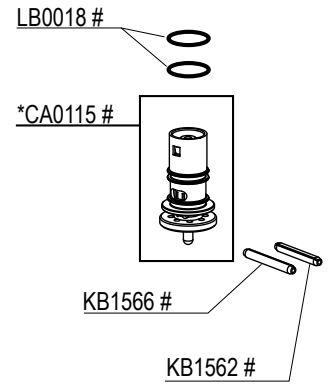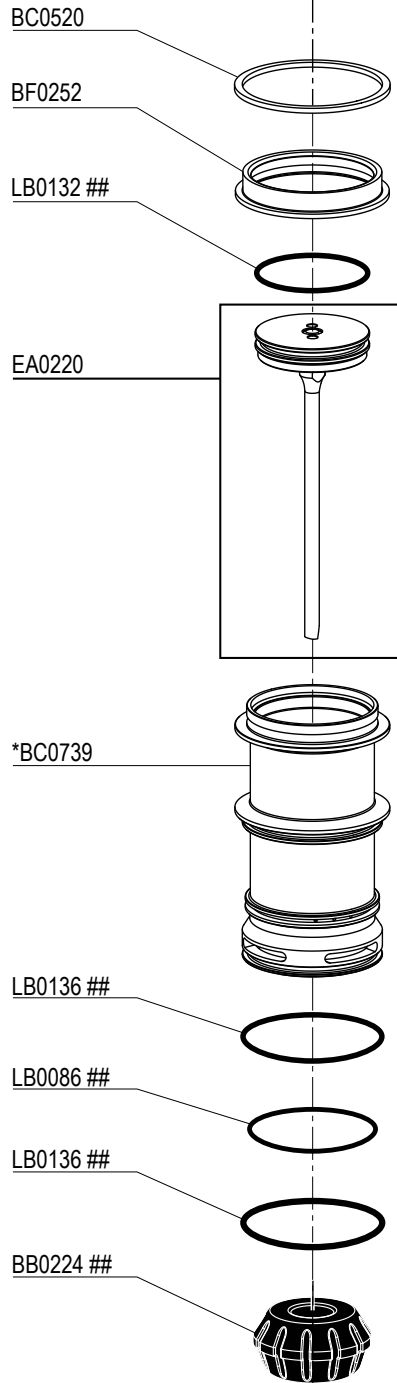


- * Does Not Include O-rings
- * No incluye sellos de gomas
- * Joints exclus

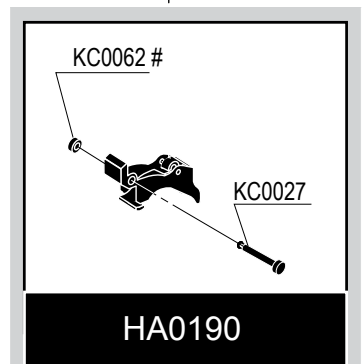





Contents of YK0444 Repair Kit
 ## Contents of YK0445 Repair Kit

Pneumatic Concrete Pinner

SCP40XP

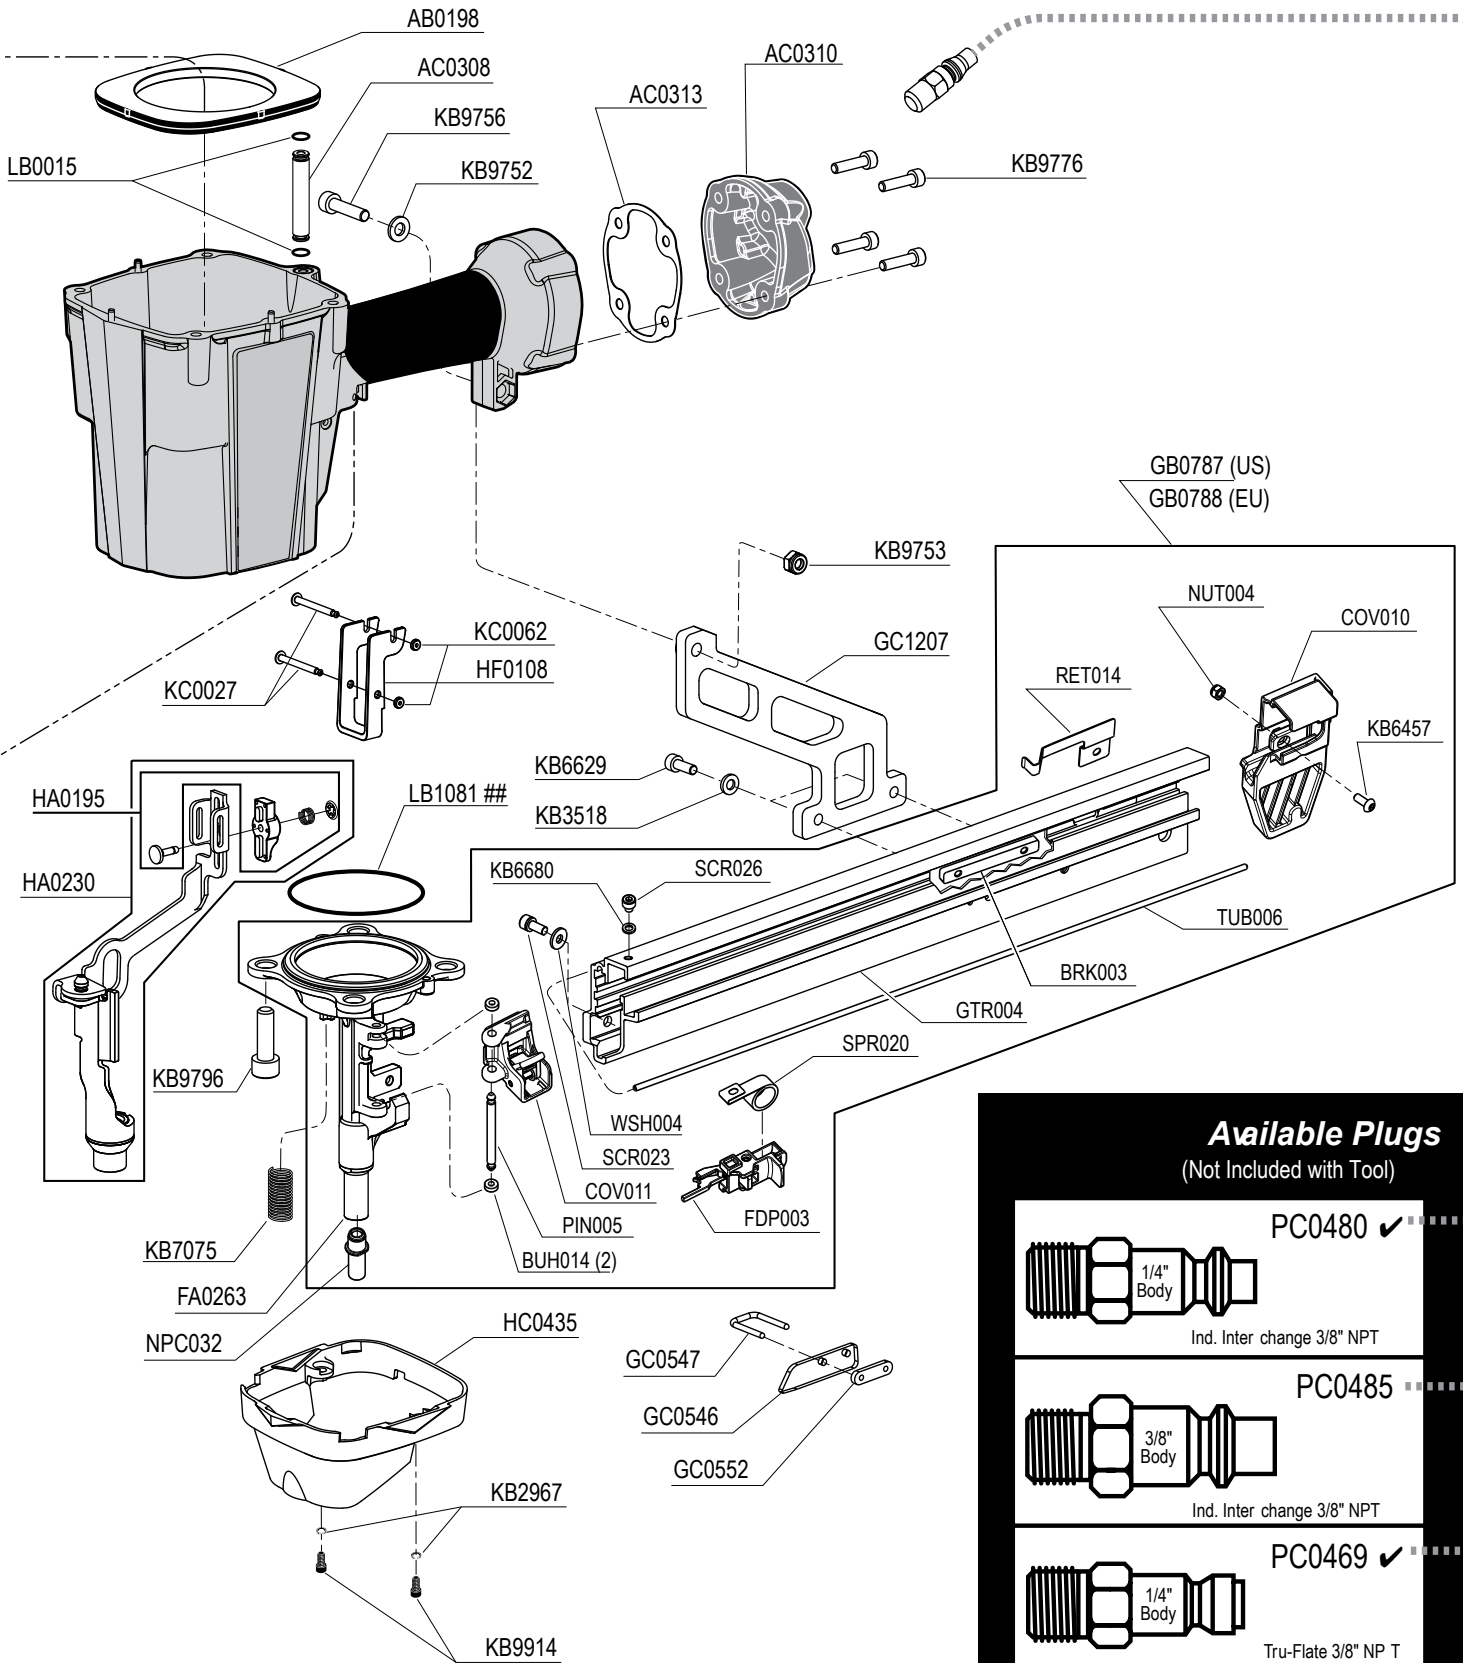

    Available Plugs (Not Included with Tool)

	PC0480 ✓ 1/4" Body Ind. Inter change 3/8" NPT
	PC0485 3/8" Body Ind. Inter change 3/8" NPT
	PC0469 ✓ 1/4" Body Tru-Flate 3/8" NP T
	PC0475 3/8" Body Tru-Flate 3/8" NPT

✓ Recommended Plugs

REPLACEMENT PARTS LIST • LISTA DE PARTES DE REPUESTO • LISTE DE PIÈCES DE RECHANGE

PART NO.	DESCRIPTION	DESCRIPCIÓN	DÉSIGNATION
AA0155	.CAP	.TAPA	.BOUCHON
AB0198	.PRESSURE PLATE	.SEAL	.JOINT
AB0213	.CAP	.TAPA	.BOUCHON
AC0167	.RING	.ANILLO	.ANNEAU
AC0308	.TUBE	.CILINDRO	.CYLINDRE
AC0310	.END CAP	.TAPA	.BOUCHON
AC0312	.DEFLECTOR	.DESVIADOR	.DÉFLECTEUR
AC0313	.GASKET	.SEAL	.JOINT
AC0314	.GASKET	.SEAL	.JOINT
AF0104	.SEAL EXHAUST DEFLECTOR	.SELLO	.JOINT
BA0170	.VALVE ASY	.ASAMBLE DE VÁLVULA	.VALVE D'ASSEMBLÉE
BB0224	.STOP	.TOPE	.ARRÊT
BC0479	.VALVE	.VÁLVULA	.VALVE
BC0520	.RING	.ANILLO	.ANNEAU
BC0739	.CYLINDER	.CILINDRO	.CYLINDRE
BF0250	.SEAL	.SELLO	.JOINT
BF0252	.RETAINER	.RETÉN	.RETENUE
BF0253	.BUMPER	.AMORTIGUADOR	.AMORTISSEUR
BF0255	.BUMPER	.AMORTIGUADOR	.AMORTISSEUR
BRK003	.MAGAZINE BRACKET	.SOPORTE DEL CARGADOR	.SUPPORT DE MAGASIN
BUH014	.GROMMET	.RETÉN	.RETENUE
CA0115	.VALVE ASSEMBLY	.ASAMBLE DE VÁLVULA	.VALVE D'ASSEMBLÉE
COV010	.MAGAZINE COVER	.CUBIERTA DEL CARGADOR	.COUVERCLE DE MAGASIN
COV011	.DOOR ASY	.CONJ. DE PUERTA	.ENSEMBLE DE PORTE
EA0220	.DRIVER ASY	.PERCUSOR	.COUTEAU
FA0263	.GUIDE BODY	.PLACA DE NARIZ	.FRONT
FDP003	.FEEDERSHOE	.ZAPATA ALIMENTADORA	.SABOT D'ALIMENTATION
GB0788	.MAGAZINE ASY (EU)	.CONJ. DEL CARGADOR	.ENSEMBLE DE MAGASIN
GB0799	.MAGAZINE ASY (US)	.CONJ. DEL CARGADOR	.ENSEMBLE DE MAGASIN
GC0546	.BLOCK-OUT	.BLOQUE	.BLOC
GC0547	.CLIP	.CLIP	.CLIP
GC0552	.GROMMET	.RETÉN	.RETENUE
GC1207	.MAGAZINE BRACKET	.SOPORTE DEL CARGADOR	.SUPPORT DE MAGASIN
GTR004	.MAGAZINE	.CARGADOR	.MAGASIN
HA0190	.TRIGGER ASSY	.ASAMBLE DE GATILLO	.ENSEMBLE GÂCHETTE
HA0195	.SWITCH ASSY	.ASAMBLE DE ADAPTADOR	.ADAPTEUR D'ASSEMBLÉE
HA0230	.SAFETY ASSEMBLY	.ASAMBLE DE SEGURO	.PALPEUR DE SÉCURITÉ
HC0435	.SHROUD	.PROTECTOR	.CACHE
HF0108	.LINER	.SEPARADOR	.ENTRETOISE
KB1562	.PIN	.PASADOR	.GOUPILLE
KB1566	.PIN	.PASADOR	.GOUPILLE
KB2967	.WASHER	.ARANDELA	.RONDELLE
KB3255	.SCREW	.TORNILLO	.VIS
KB3518	.WASHER	.ARANDELA	.RONDELLE
KB4268	.SPRING	.RESORTE	.RESSORT
KB6340	.SCREW	.TORNILLO	.VIS
KB6457	.SCREW	.TORNILLO	.VIS
KB6614	.SCREW	.TORNILLO	.VIS
KB6629	.SCREW	.TORNILLO	.VIS
KB6680	.MAGAZINE WASHER	.ARANDELA DEL CARGADOR	.RONDELLE DE MAGASIN
KB7075	.SPRING	.RESORTE	.RESSORT
KB9752	.WASHER	.ARANDELA	.RONDELLE
KB9753	.NUT	.TUERCA	.ÉCROU
KB9756	.SCREW	.TORNILLO	.VIS
KB9776	.SCREW	.TORNILLO	.VIS
KB9796	.SCREW	.TORNILLO	.VIS
KB9914	.SCREW	.TORNILLO	.VIS
KC0027	.PIN	.PASADOR	.GOUPILLE
KC0062	.RETAINER	.RETÉN	.RETENUE
LB0015	.SEAL	.SELLO	.JOINT
LB0018	.SEAL	.SELLO	.JOINT
LB0086	.SEAL	.SELLO	.JOINT
LB0132	.SEAL	.SELLO	.JOINT
LB0136	.SEAL	.SELLO	.JOINT
LB1007	.SEAL	.SELLO	.JOINT
LB1008	.SEAL	.SELLO	.JOINT
LB1009	.SEAL	.SELLO	.JOINT
LB1081	.SEAL	.SELLO	.JOINT
NPC032	.GUIDEBODY LOWER	.CUERPO GUÍA INFERIOR	.CORPS DE GUIDAGE INFÉRIEURE
NUT004	.NAIL DETAINER LOCK NUT	.CONTRATUERCA DEL RETÉN DE CLAVOS	.CONTRE-ÉCROU DE MAINTIEN DE CLOU
PIN005	.PIN	.PASADOR	.GOUPILLE
RET014	.NAIL DETAINER	.RETÉN DE CLAVOS	.MAINTIEN DE CLOU
SCR023	.MAGAZINE SCREW	.TORNILLO DEL CARGADOR	.VIS DE MAGASIN
SCR026	.FEED SPRING SCREW (BUTTON)	.TORNILLO DEL RESORTE ALIMENTADOR (BOTÓN)	.VIS DE RESSORT D'ALIMENTATION (BOUTON)
SPR020	.FEED SPRING	.RESORTE	.RESSORT
TUB006	.WEAR ROD		
WSH004	.MAGAZINE WASHER	.ARANDELA DEL CARGADOR	.RONDELLE DE MAGASIN