



**BOSCH**

# Cutoff saw

TCO 2100 | 3 601 M17 781

---

## Table of Content

Spare parts list.....	2
Illustration - Type.....	5

Spare parts list

Item	Part Number	Description
1	1 619 PA8 394	Motor Housing
2	1 619 PA8 395	Field 220V
4	1 619 PA8 415	On-Off Switch
5	1 619 PA8 412	Power supply cord
6	1 619 PA8 413	Grommet
7	1 619 PA1 552	Spring Washer
10	1 619 PA1 499	Carbon-Brush Set
12	1 619 PA1 500	Suppression Capacitor
16	1 619 PA1 501	Brush Holder
18	1 619 PA1 502	Screw
19	1 619 PA1 503	Screw
22	1 619 PA1 504	Plug
23	1 619 PA1 505	Screw
24	1 619 PA8 393	End cap
25	1 619 PA8 397	Arm
26	1 619 PA1 508	Rubber Bar
27	1 619 PA8 401	Stop Bracket
28	1 619 PA8 383	Flange Bolt
29	1 619 PA1 511	Plain Washer
30	1 619 PA8 402	Flange Bolt
31	1 619 PA8 406	Clamp Screw
32	1 619 PA8 403	Clamp Bracket
33	1 619 PA1 515	Spring Pin
34	F 000 616 356	Locking Pin
35	1 619 PA8 396	Plain Washer
36	1 619 PA8 419	Infeed spindle
44	1 619 PA1 526	O-Ring
45	1 619 PA1 527	Spring retaining ring
48	1 619 PA1 530	Rubber Ring
49	1 619 PA8 407	Clamping Block
50	1 619 PA2 947	Flange
51	1 619 PA8 404	Connecting Rod
52	1 619 PA1 534	Spring Pin
53	1 619 PA1 535	Clamping Support
54	1 619 PA8 405	Screw

## Spare parts list

Item	Part Number	Description
55	1 619 PA8 399	Base
57	1 619 PA1 539	Shaft
58	1 619 PA1 540	Spring Pin
59	1 619 PA1 541	Spring
60	1 619 PA8 398	Cap Nut
61	1 619 PA8 390	Safety Guard
62	1 619 PA8 409	Hexagon Bolt
63	1 619 PA8 410	Hex Nut
64	1 619 PA1 546	Thread-forming tap. Screw
65	1 619 PA8 414	Handle
66	1 619 PA8 416	Handle
67	1 619 PA1 549	Air-Deflector Ring
68	1 619 PA1 550	Screw
69	1 619 PA1 551	Screw
70	1 619 PA8 386	Lining
71	1 619 PA8 417	Dowel pin
72	1 619 PA1 554	Shaft
73	1 619 PA1 555	Nut
74	1 619 PA1 556	Compression Spring
75	1 619 PA1 557	Holder
76	1 619 PA1 558	Plain Washer
77	1 619 PA1 559	Bolt
78	1 619 PA1 560	Nut
79	F 000 620 023	Compression Spring
80	1 619 PA8 384	Flange
81	1 619 PA1 563	Screw
82	1 619 PA8 385	Flap Guard
83	1 619 PA1 570	Rubber Gasket
84	1 619 PA1 566	Nut
90	1 619 PA8 400	Protective Cover
91	1 619 PA1 573	Screw
93	1 619 PA2 941	Washer
94	1 619 PA8 408	Adjusting Wrench
96	1 619 PA1 577	Pin
97	1 619 PA1 578	Screw

## Spare parts list

Item	Part Number	Description
98	1 619 PA1 579	connecting terminal
99	F 000 620 024	Spring
100	F 000 616 357	Spring Pin
101	F 000 623 033	Linkage
103	1 619 PA8 388	Gear Cover
104	F 000 616 358	Spring retaining ring
105	1 619 PA3 010	Plain Washer
106	1 619 PA8 389	Screw
107	F 000 616 361	Nut
108	1 619 PA8 387	Knob
110	F 000 616 414	Spring Pin
111	F 000 616 415	Washer
117	F 000 616 413	Screw
803	1 619 PA8 442	Armature 220V

Illustration - Type - E

