



BOSCH

Marble Saw

TDM 1250 | 3 601 C95 080

Table of Content

Spare parts list.....	2
Illustration - Type.....	4

Spare parts list

Item	Part Number	Description
2	1 619 PA7 559	Field 220V
4	1 619 PA7 561	Switch
5	1 619 PA7 562	Power supply cord
6	1 619 PA7 566	Grommet
7	1 619 PA3 406	Cable Clip
12	1 619 PA6 211	Suppression Filter
13	1 619 PA3 414	groove ball bearing
14	1 619 PA3 415	groove ball bearing
16	1 619 PA3 416	Insulating Cap
19	1 619 PA3 417	Torx Oval-Head Screw
22	1 619 PA3 418	Retainer
23	1 619 PA4 646	Pinion
24	1 619 PA3 420	Woodruff Key
25	1 619 PA3 421	Washer
26	1 619 PA3 422	Sealing washer
27	1 619 PA7 572	Air-Deflector Ring
28	1 619 PA3 424	Tapping Screw
29	1 619 PA7 591	Protecting Cover
30	1 619 PA7 592	Protecting Cover
31	1 619 PA7 573	Handle Cover
32	1 619 PA7 574	Tapping Screw
33	1 619 PA3 429	Extension Spring
34	1 619 PA3 430	Carbon Brush Holder
35	1 619 PA7 575	Pan head screw
36	1 619 PA3 432	Spring Washer
38	1 619 PA3 434	O-Ring
39	1 619 PA7 589	Gear Housing
40	1 619 PA3 436	mat seal
41	1 619 PA3 437	groove ball bearing
42	1 619 PA3 438	Ring
43	1 619 PA4 645	Conversion Gear
44	1 619 PA8 030	Spacer Ring
45	1 619 PA3 441	Retainer
46	1 619 PA3 442	groove ball bearing
47	1 619 PA3 443	Bearing Flange

Spare parts list

Item	Part Number	Description
48	1 619 PA3 444	Hex Screw
49	1 619 PA3 445	Seal
50	1 619 PA3 446	Woodruff Key
51	1 619 PA8 029	Spindle
52	1 619 PA6 216	Wing Screw
53	1 619 PA3 449	Spacer Ring
54	1 619 PA7 576	Base Plate
56	1 619 PA8 027	Pan head screw
57	1 619 PA8 028	Nut
650	1 619 PA6 709	Flange
801	1 619 PA7 587	Housing Set
803	1 619 PA7 588	Armature set 220V
810	1 619 PA4 025	Carbon-Brush Set
851	1 619 PA8 032	Spindle Assembly

Illustration - Type - E

