


ILLUSTRATED PARTS LIST

MODEL NUMBER XT722FE

PRODUCT NUMBER 961 43 00-61

MFG. ID. NUMBER 96143006106

HUSQVARNA ROTARY LAWN MOWER - MODEL NO. XT722FE (96143006106) PRODUCT NO. 961 43 00-61

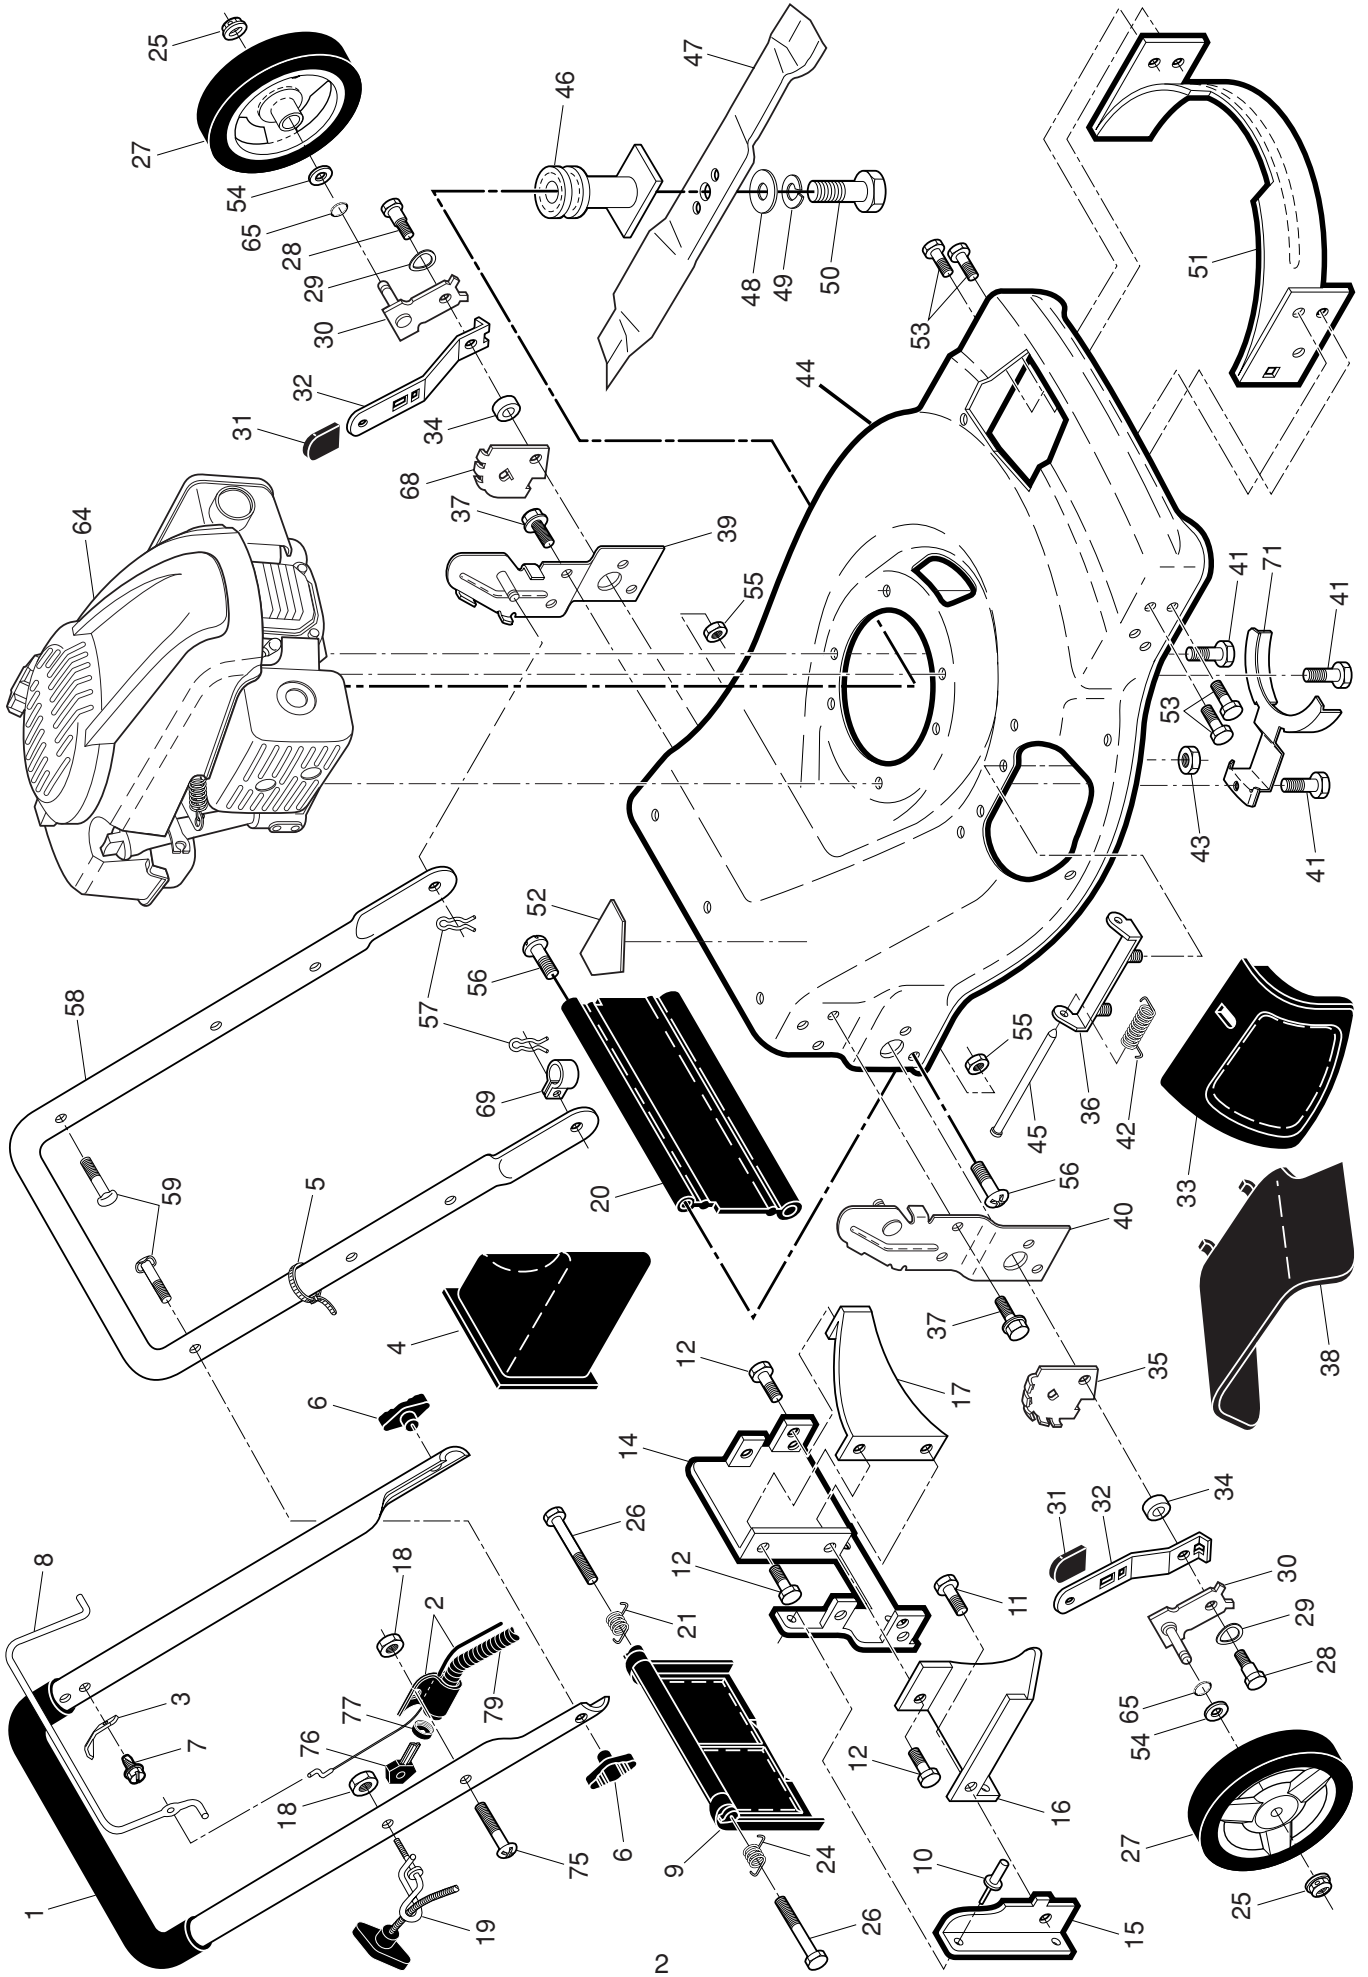


HUSQVARNA ROTARY LAWN MOWER - MODEL NO. XT722FE (96143006106) PRODUCT NO. 961 43 00-61

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532 42 76-63	Upper Handle (Includes Foam Grip)	39	532 41 91-93	Handle Bracket Assembly, LH
2	532 40 19-94	Cable, Operator Presence (Includes Key Start Switch)	40	532 41 91-92	Handle Bracket Assembly, RH
3	532 12 51-62	Bracket, Upstop	41	532 15 04-06	Screw, Hex Head, Threaded, Rolled 3/8-16 x 1-1/8
4	532 16 66-49	Mulcher Plug	42	532 19 30-00	Spring, Torsion
5	532 06 64-26	Wire Tie	43	873 80 04-00	Nut, Hex, Nylock
6	532 44 50-19	Handle Knob	44	532 41 74-05	Kit, Lawn Mower Housing (Includes Key Numbers 14, 15 and 51)
7	532 75 06-34	Screw	45	532 17 56-50	Rod, Hinge
8	532 41 31-85	Control Bar	46	532 42 12-48	Blade Adapter / Pulley
9	532 40 84-92	Rear Door Assembly	47	532 40 67-13	Blade, 22"
10	532 12 84-15	Pop Rivet	48	532 85 10-74	Washer, Hardened
11	532 15 00-50	Screw, Self-Tapping #10-24 x 5/8	49	532 85 02-63	Washer, Helical
12	817 06 04-10	Screw, Hex Hex Head, Sems 1/4-20 x 5/8	50	532 85 10-84	Screw, Machine, Hex Head 3/8-24 x 1-3/8 Grade 8
14	532 19 70-76	Back Plate	51	532 17 00-31	Kit, Front Baffle
15	532 41 13-34	Side Baffle	52	532 40 47-63	Danger Decal
16	532 17 71-33	Discharge Baffle	53	817 60 04-06	Screw
17	532 14 89-41	Rear Baffle	54	532 08 83-48	Washer, Flat
18	532 13 20-04	Keeps Locknut 1/4-20	55	873 93 06-00	Nut, Hex
19	532 19 47-88	Rope Guide	56	532 08 86-52	Screw, Hinge 1/4-20 x 1-1/4
20	532 41 31-60	Rear Skirt	57	532 05 17-93	Hairpin Cotter
21	532 40 54-21	Spring, Rear Door, LH	58	532 44 86-94	Lower Handle
24	532 40 54-23	Spring, Rear Door, RH	59	532 19 15-74	Handle Bolt
25	532 40 91-48	Nut, Hex, Flanged	64	- - -	Engine, Kohler, Model Number XT173-3227 (For engine service and replacement parts, call Kohler at 1-800-544-2444)
26	532 18 41-93	Bolt, Rear Door	65	532 19 74-80	O-Ring
27	532 41 08-31	Wheel & Tire Assembly, Rear	68	532 41 06-23	Wheel Adjusting Bracket, LH
28	532 17 47-19	Bolt, Shoulder 3/8-16 x 1	69	532 19 79-91	Clip, Cable
29	532 40 16-30	Washer, Belleville	71	532 42 57-11	Belt Keeper
30	532 40 78-71	Axle Arm Assembly	75	532 18 61-59	Screw
31	532 70 10-37	Selector Knob	76	532 18 03-31	Key
32	532 40 64-28	Selector Spring	77	532 19 48-48	Nut, Cap
33	532 19 70-29	Mulcher Door	79	532 40 95-67	Wiring Harness
34	532 40 16-29	Spacer	- -	532 42 59-37	Fuse (not shown)
35	532 41 06-24	Wheel Adjusting Bracket, RH	- -	532 40 47-64	Warning Decal (not shown)
36	532 17 57-35	Hinge Bracket Assembly	- -	532 43 11-60	Operator's Manual, English / French
37	532 42 88-67	Screw, Sems, Thread Cutting 5/16-18 x 3/4			
38	532 43 94-30	Discharge Deflector			

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm. **IMPORTANT:** Use only Original Equipment Manufacturer (O.E.M.) replacement parts. Failure to do so could be hazardous, damage your lawn mower and void your warranty.

HUSQVARNA ROTARY LAWN MOWER - MODEL NO. XT722FE (96143006106) PRODUCT NO. 961 43 00-61

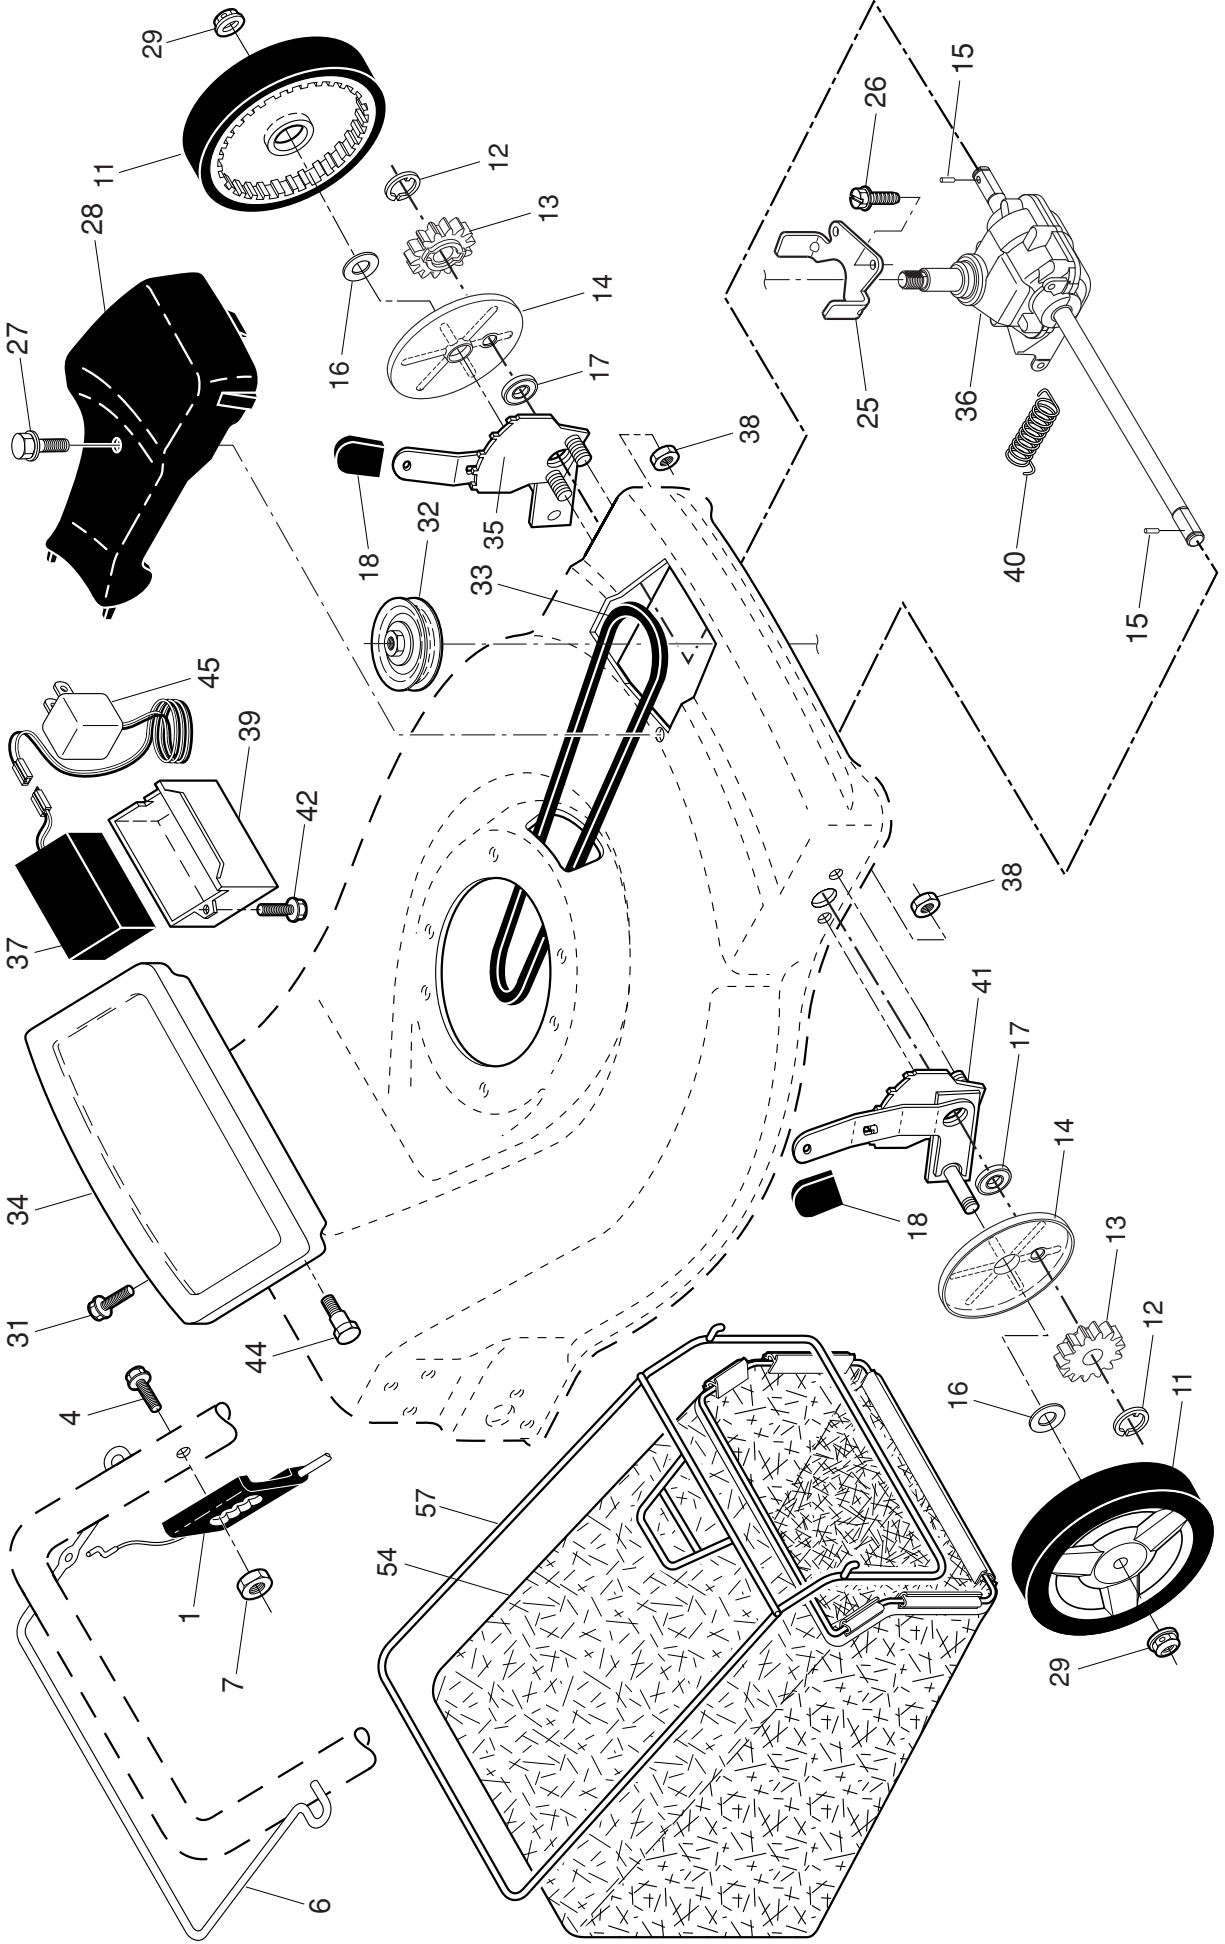

HUSQVARNA ROTARY LAWN MOWER - MODEL NO. XT722FE (96143006106) PRODUCT NO. 961 43 00-61

KEY PART NO.	DESCRIPTION	KEY PART NO.	DESCRIPTION
1	532 40 78-16 Drive Control Cable	31	532 14 18-41 Screw, Torx Pan Head #20
4	532 19 96-87 Screw 1/4-20	32	532 44 32-62 Pulley, Drive
6	532 19 90-93 Bar, Drive Control	33	532 19 68-57 V-Belt
7	532 19 17-30 Nut, Hex 1/4-20	34	532 41 11-90 Trimplate
11	532 41 10-81 Wheel & Tire Assembly	35	532 43 84-85 Kit, Wheel Adjuster, LH
12	812 00 00-58 E-Ring		(Includes Knob and Bearing)
13	532 40 38-49 Gear, Pinion	36	532 40 48-34 Gear Case Assembly, Complete
14	532 18 94-03 Dust Cover	37	532 18 95-89 Battery
15	532 40 48-45 Pawl, Drive	38	873 80 04-00 Locknut, Hex 1/4-20
16	532 06 77-25 Washer, Flat 3/8	39	532 18 62-37 Box, Battery
17	532 42 18-36 Ball Bearing	40	532 40 65-58 Spring
18	532 70 10-37 Selector Knob	41	532 43 84-86 Kit, Wheel Adjuster, RH
25	532 43 17-11 Belt Keeper		(Includes Knob and Bearing)
26	532 16 43-09 Screw	42	817 41 13-08 Screw, Hex Head #13 x 1/2
28	532 43 26-66 Drive Cover Assembly (Includes Mounting Screw and Pushnut)	44	532 17 55-51 Screw, Shoulder, Hex Head #10-28 x 5/8
29	532 40 91-48 Locknut, Hex	45	532 42 86-26 Charger, Battery
		54	532 42 56-69 Grassbag Assembly
		57	532 41 19-52 Frame, Grassbag

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm. **IMPORTANT:** Use only Original Equipment Manufacturer (O.E.M.) replacement parts. Failure to do so could be hazardous, damage your lawn mower and void your warranty.