
## SERVICE PARTS LIST

Milwaukee

SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS REVISED BULLETIN DATE Apr. 2014 54-26-2451 M12™ Impact Driver WIRING INSTRUCTION STARTING 2450-20 **B59C** CATALOG NO. SEE REVERSE SIDE SERIAL NO

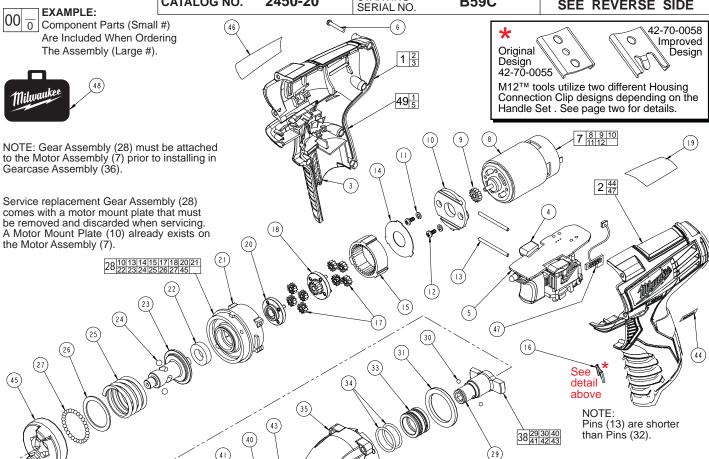

★= Part number change from previous service parts list.

Washer

26

(42)

(Type 'J' Grease, No. 49-08-4220): Coat inside grooves of Bushing (33) with grease. Lightly coat front washer surface of Anvil (38) with grease. Place a dab of grease in the Ball holes 38 and in the hole in the back of the Anvil.

(32) FIG.

33


**LUBRICATION** 

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.	FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
<b>★</b> 1	31-50-2403	Handle Set	(1)	27		3.0mm Dia. Steel Ball	(29)
2		Left Handle Half	(1)	28	14-29-0190	Gear Assembly	(1)
3		Right Handle Half	(1)	29		Anvil	(1)
4	45-24-0105	Fwd./Rev. Button	(1)	30		3.5mm Steel Ball	(2)
<b>★</b> 5	23-66-1132	Electronics Module Assembly	(1)	31	45-88-0455	Washer	(1)
6	06-82-2385	M2.6 x 14 T-9 Screw	(5)	32	06-65-0085	Pin	(2)
7	23-30-0090	Motor Service Assembly	(1)	33		Sleeve Bearing	(1)
8		Motor	(1)	34		O-Ring	(2)
9		Pinion	(1)	35		Gear Housing	(1)
10		Motor Mount	(1)	36	14-30-0005	Gearcase Assembly	(1)
11		Washer	(2)	37	06-81-0005	M3.5 x 24 Screw	(4)
12		M3 x 6 Screw	(2)	38	45-22-0015	Sleeve and Anvil Assembly	(1)
13	06-65-0075	Pin	(2)	39	45-22-0010	Sleeve and Ball Assembly	(1)
14		Washer	(1)	40		Spring	(1)
15		Ring Gear	(1)	41		Washer	(1)
16	42-70-0055	Housing Connection Clip	(1)	42		Retaining Ring	(1)
17		Planet Gear Set	(8)	43		Sleeve	(1)
18		Sun Gear	(1)	44		LED Label	(1)
19	10-20-0790	Warning Label	(1)	45		Hammer	(1)
20		Carriage	(1)	46	12-20-2450	Service Nameplate	(1)
21		Rear Housing	(1)	47		Fuel Gauge LED Assembly	(1)
22		Ball Bearing	(1)	48	42-55-2450	Carrying Case, Optional	(1)
23		Cam Shaft	(1)	<b>★</b> 49	14-46-1705	Handle Set and Switch Assembly	(1)
24		3/16" Dia. Steel Ball	(2)		N	ILWAUKEE ELECTRIC TOOL COR	PORATION
25		Compression Spring	(1)			13135 W. Lisbon Road, Brookfield	_
26		Machar	(4)	I		10100 VV. LISDOIT ROAG, DIOORIICI	a, **1 00000


36 33 34

39 30 40 41 42 43


(37)

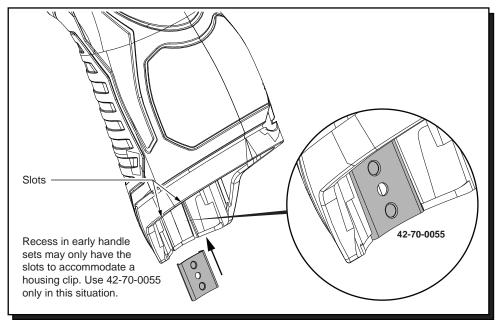


Early M12™ Handle Sets utilize Housing Connection Clip No. 42-70-0055. Install this clip design by aligning the side rails of the clip with the two slots in the handle set. Gently push into place with the aid of a small flat blade screwdriver or a similar instrument. Be sure that the clip is properly seated in both slots and that the clip is flush to sub-flush to the end of the handle set. To remove the clip, use the same small flat blade screwdriver or a similar instrument and push the clip out of the handle set. If the clip is loose or will not stay in place, a needle nose pliers can be used to gently bend/pinch the side rails of the clip. If the clip is damaged do not use, replace with a new 42-70-0055 housing clip.

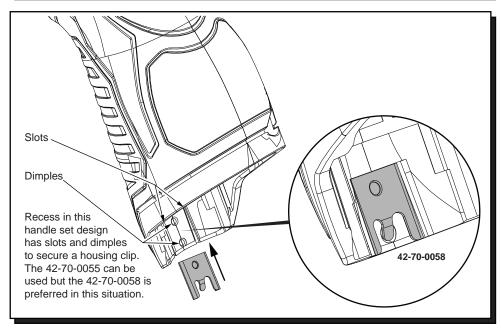

Updated M12™ Handle Sets utilize Housing Connection Clips No. 42-70-0055 and 42-70-0058. (The 42-70-0058 is a preferred upgrade). Install this clip design by aligning the side rails of the clip with the two slots in the handle set. Gently push into place with the aid of a small flat blade screwdriver or a similar instrument. Be sure that the clip is properly seated in both slots and that the tab of the clip snaps down in the round dimpled cavity of the handle set. Be sure that the clip is flush to sub-flush to the end of the handle set. To remove the clip, use the same small flat blade screwdriver or a similar instrument and lift up on the clip tab while pushing the clip out of the handle set. Use a needle nose pliers to gently rebend the clip tab if necessary. If the tab on the clip is damaged during this process and is loose or will not stay in place, replace with a new 42-70-0058 clip.

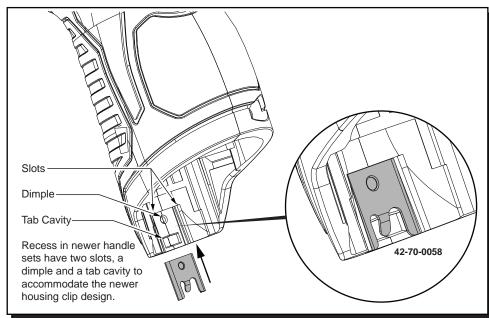

Newer M12™ Handle Sets utilize Housing Connection Clip No. 42-70-0058. Install this clip design by aligning the side rails of the clip with the two slots in the handle set. Gently push into place with the aid of a small flat blade screwdriver or a similar instrument. Be sure that the clip is properly seated in both slots and that the tab of the clip snaps down in the rectangular cavity of the handle set. Be sure that the clip is flush to sub-flush to the end of the handle set. To remove the clip, use the same small flat blade screwdriver or a similar instrument and lift the clip tab out of the cavity while pushing the clip out of the handle set. Use a needle nose pliers to gently rebend the clip tab if necessary. If the tab on the clip is damaged during this process and is loose or will not stay in place, replace with a new 42-70-0058 clip.

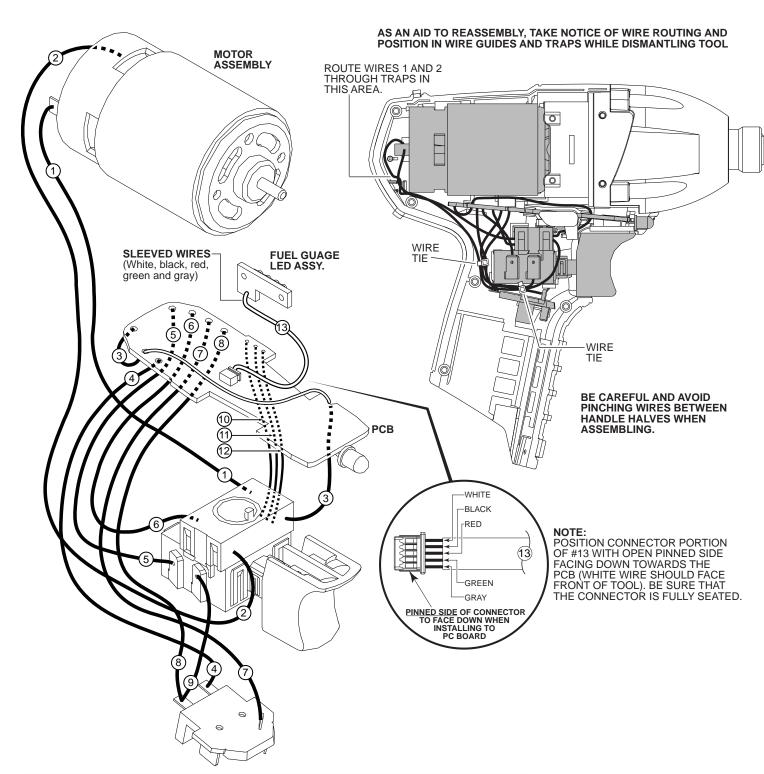

WIRING SPECIFICATIONS								
Wire No.	Wire Color	Origin or Gauge	Length	Terminals, Connectors and 1 or 2 End Wire Preparation				
1	Black	23-30-0090		Component of the motor assembly.				
2	Red	23-30-0090		Component of the motor assembly.				
3	White	23-66-1132		Component of the electronics module assembly.				
4	Black	23-66-1132		Component of the electronics module assembly.				
5	Black	23-66-1132		Component of the electronics module assembly.				
6	Red	23-66-1132		Component of the electronics module assembly.				
7	White	23-66-1132		Component of the electronics module assembly.				
8	Red	23-66-1132		Component of the electronics module assembly.				
9	Red	23-66-1132		Component of the electronics module assembly.				
10	Yellow	23-66-1132		Component of the electronics module assembly.				
11	Blue	23-66-1132		Component of the electronics module assembly.				
12	Black	23-66-1132		Component of the electronics module assembly.				
13	Sleeve	23-66-1132		Component of the electronics module assy. / Fuel gauge LED.				