


# Parts Breakdown for the "J" Series Pallet Trucks

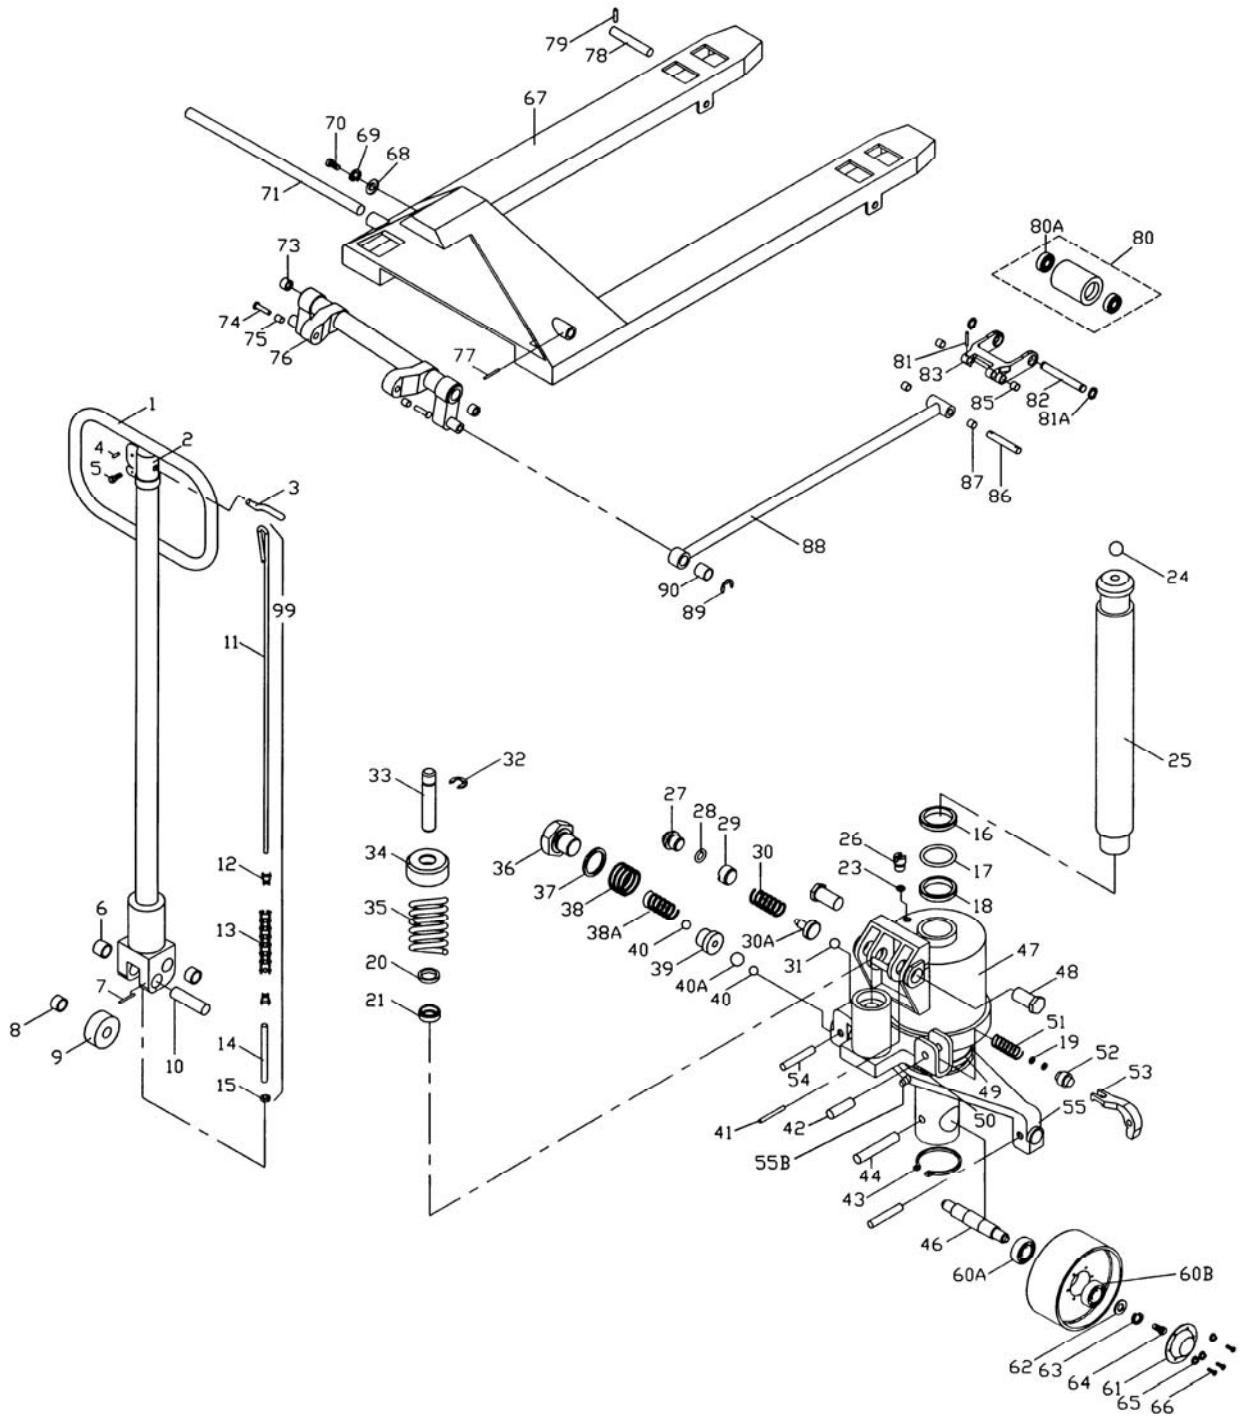

## Parts List for the "J" Series Pallet Trucks

Index No.	Part No.	Description	Size	Qty.
1.....	PT2748A-001.....	Handle.....		1
2.....	PT2748A-002.....	Handle Cap.....		1
3.....	PT2748A-003.....	Lever.....		1
4.....	PT2748A-004.....	Spring Pin.....	5x16mm.....	1
5.....	PT2748A-005.....	Bolt.....	M8x20.....	1
6.....	PT2748A-006.....	Oil Lite Bushing.....		2
7.....	PT2748A-007.....	Spring Pin.....	3x28mm.....	1
8.....	PT2748A-008.....	Oil Lite Bushing.....		1
9.....	PT2748A-009.....	Roller.....		1
10.....	PT2748A-010.....	Roller Pin.....		1
11.....	PT2748A-011.....	Release Rod.....		1
12.....	PT2748A-012.....	Chain Joint.....		2
13.....	PT2748A-013.....	Chain.....		1
14.....	PT2748A-014.....	Anchor Bolt.....		1
15.....	PT2748A-015.....	V-Nut.....	M8.....	1
16.....	PT2748J-101A.....	Dust Seal *.....		1
17.....	PT2748J-101A.....	O-Ring *.....	29.8x3.5mm.....	1
18.....	PT2748J-101A.....	U-Packing *.....	30x38x6mm.....	1
19.....	PT2748J-101A.....	O-Ring *.....	4.8x1.9mm.....	2
20.....	PT2748J-101A.....	Dust Seal *.....		1
21.....	PT2748J-101A.....	U-Packing *.....	18x26x5.....	1
23.....	PT2748J-101A.....	O-Ring *.....	6x1.9mm.....	1
24.....	SB-14MM.....	Steel Ball.....	14mm.....	1
25.....	PT2748J-025.....	Ram Piston <i>(all models except PT-3348J)</i> .....		1
.....	PT3348J-025.....	Ram Piston <i>(PT-3348J Only)</i> .....		1
26.....	PT2748A-026.....	Oil Plug.....		1
27.....	PT2748A-027.....	Pressure Adjust Screw.....		1
28.....	PT2748J-101A.....	O-Ring *.....	11.6x2.4mm.....	1
29.....	PT2748A-029.....	Release Screw.....		1
30.....	PT2748A-030.....	Spring.....	10x2.3x27mm.....	1
30A.....	PT2748A-30A.....	Valve.....		1
31.....	SB-6MM.....	Steel Ball.....	6mm.....	1
32.....	PT2748A-032.....	E-Ring.....	15mm.....	1
33.....	PT2748L-033.....	Plunger Piston.....		1
34.....	PT2748A-034.....	Spring Cap.....		1
35.....	PT2748A-035A.....	Spring.....	38x5x121mm.....	1
36.....	PT2748A-036.....	Release Plug.....		1
37.....	PT2748A-037.....	Washer.....	20mm.....	1
38.....	PT2748A-038.....	Spring.....	8x1.5x12.8mm.....	1
38A.....	PT2748A-038A.....	Spring.....	4.8x0.7x15mm.....	1
39.....	PT2748A-039.....	Valve Housing.....		1
40.....	SB-6MM.....	Steel Ball.....	6mm.....	2
40A.....	SB-9MM.....	Steel Ball.....	9mm.....	1
41.....	PT2748A-041.....	Spring Pin.....	3x28mm.....	2
42.....	PT2748A-042.....	Spring Pin.....	8x25mm.....	1
43.....	PT2748A-043.....	Snap Ring.....	44mm.....	1
44.....	PT2748A-044.....	Spring Pin.....	8x45mm.....	1
46.....	PT2748A-046.....	Wheel Shaft <i>(all models except PT-1636J)</i> .....		1
.....	PT1636J-046.....	Wheel Shaft <i>(PT-1636J Only)</i> .....		1
47.....	PT2748J-109.....	Pump Housing Assembly <i>(all models except PT-1636J &amp; PT-3348J)</i> .....		1
.....	PT1636J-109.....	Pump Housing Assembly <i>(PT-1636J Only)</i> .....		1
.....	PT3348J-109.....	Pump Housing Assembly <i>(PT-3348J Only)</i> .....		1

Index No.	Part No.	Description	Size	Qty.
48	PT2748A-048	Handle Pin		2
49	PT2748A-049	Bearing Base		1
50	BB-51109	Ball Bearing	51109	1
51	PT2748A-051	Spring	6.3x1.2x25mm	1
52	PT2748A-052	Release Nozzle		1
53	PT2748A-053	Cam		1
54	PT1636J-054	Spring Pin	6x30mm	2
55	PT2748A-055	Table ( <i>all models except PT-1636J &amp; PT-3348J</i> )		1
	PT1636J-055	Table ( <i>PT-1636J Only</i> )		1
	PT3348J-055	Table ( <i>PT-3348J Only</i> )		1
55B	PT2748A-055B	Grease Fitting		1
60	PT2748L-103	Steer Wheel Assembly W/Bearings		2
60A	BB-6205VV	Steer Wheel Ball Bearing	6205VV	2
60B	BB-6304VV	Steer Wheel Ball Bearing	6304VV	2
61	PT2748A-061	Cap		2
62	TS-1550071	Washer	10mm	2
63	TS-0720091	Lock Washer	10mm	2
64	TS-1491021	Bolt	M10x20	2
65	TS-1551031	Lock Washer	5mm	6
66	TS-1481041	Bolt	M5x16	6
67		Fork Frame (N/A)		1
68	TS-1550061	Washer	8mm	2
69	TS-1551061	Lock Washer	8mm	2
70	TS-1504031	Socket Head Cap Screw	M8x14	2
71	PT2748A-071	Crank Shaft ( <i>PT-2736J / PT-2742J / PT-2748J</i> )		1
	PT2048A-071	Crank Shaft ( <i>PT-2036J / PT-2042J / PT-2048J</i> )		1
	PT1636J-071	Crank Shaft ( <i>PT-1636J Only</i> )		1
	PT3348J-071	Crank Shaft ( <i>PT-3348J Only</i> )		1
73	PT2748J-073	Oil Lite Bushing		2
74	PT2748A-074	Table Pin		2
75	PT2748A-075	Oil Lite Bushing		2
76	PT2748J-076	Lifting Yoke ( <i>PT-2736J / PT-2742J / PT-2748J</i> )		1
	PT2048J-076	Lifting Yoke ( <i>PT-2036J / PT-2042J / PT-2048J</i> )		1
	PT1636J-076	Lifting Yoke ( <i>PT-1636J Only</i> )		1
	PT3348J-076	Lifting Yoke ( <i>PT-3348J Only</i> )		1
77	PT2748J-077	Spring Pin ( <i>all models except PT-3348J</i> )	6x35mm	1
	PT3348J-077	Spring Pin ( <i>PT-3348J Only</i> )	6x30mm	1
78	PT2748J-078A	Arm Pin ( <i>all models except PT-3348J</i> )	16x96mm	2
	PT3348J-078	Arm Pin ( <i>PT-3348J Only</i> )		2
79	PT2748J-079	Spring Pin	5x25mm	2
80	PT2748J-080BN	Black Nylon Load Wheel W/Bearings ( <i>all models except PT-3348J</i> )		2
	PT3348J-080ZS	Steel Load Wheel W/Bearings ( <i>PT-3348J Only</i> )		2
80A	BB-6004VV	Load Wheel Bearing ( <i>all models except PT-3348J</i> )	6004	4
	BB-6203LS	Load Wheel Bearing ( <i>PT-3348J Only</i> )	6203	4
81	PT2748J-081	Spring Pin	5x30mm	2
81A	PT2748J-081A	Snap-Ring ( <i>all models except PT-3348J</i> )	20mm	4
	PT3348J-081A	Snap Ring ( <i>PT-3348J Only</i> )	17mm	4
82	PT2748J-082	Load Wheel Axle ( <i>all models except PT-3348J</i> )		2
	PT3348J-082	Load Wheel Axle ( <i>PT-3348J Only</i> )		2
83	PT2748J-083	Arm ( <i>all models except PT-3348J</i> )		2
	PT3348J-083	Arm ( <i>PT-3348J Only</i> )		2

Index No.	Part No.	Description	Size	Qty.
85	PT2748J-085	Oil Lite Bushing ( <i>all models except PT-3348J</i> )		4
	PT3348J-085	Oil Lite Bushing ( <i>PT-3348J Only</i> )		4
86	PT2748J-086A	Rod Pin ( <i>all models except PT-3348J</i> )	16x145mm	2
	PT3348J-086	Rod Pin ( <i>PT-3348J Only</i> )		2
87	PT2748J-087	Oil Lite Bushing ( <i>all models except PT-3348J</i> )		4
	PT3348J-087	Oil Lite Bushing ( <i>PT-3348J Only</i> )		4
88	PT2736J-088	Rod ( <i>PT-1636J / PT-2036J / 2736J</i> )		2
	PT2742J-088	Rod ( <i>PT-2042J / PT-2742J</i> )		2
	PT2748J-088	Rod ( <i>PT-2048J / PT-2748J</i> )		2
	PT3348J-088	Rod ( <i>PT-3348J Only</i> )		2
89	PT2748A-089	E-Ring	37mm	2
90	PT2748A-090	Bushing		2
99	PT2748A-099	Release Rod Assembly		1
	PT2748J-101A	Repair Kit (includes index # 16-23, 28)		1
	PT2748J-109	Pump Assembly ( <i>all models except PT-1636J &amp; PT-3348J</i> )		1
	PT1636J-109	Pump Assembly ( <i>PT-1636J Only</i> )		1
	PT3348J-109	Pump Assembly ( <i>PT-3348J Only</i> )		1
	PT2748J-110	Pump, Handle, Wheel Assy ( <i>all models except PT-1636J..... &amp; PT-3348J</i> )		1
	PT1636J-110	Pump, Handle, Wheel Assembly ( <i>PT-1636J Only</i> )		1
	PT3348J-110	Pump, Handle, Wheel Assembly ( <i>PT-3348J Only</i> )		1
	MP-012	Touch-Up Paint (not shown)		1
	PT1636J-ID	I.D. Label (not shown)		1
	PT2036J-ID	I.D. Label (not shown)		1
	PT2042J-ID	I.D. Label (not shown)		1
	PT2048J-ID	I.D. Label (not shown)		1
	PT2736J-ID	I.D. Label (not shown)		1
	PT2742J-ID	I.D. Label (not shown)		1
	PT2748J-ID	I.D. Label (not shown)		1
	PT3348J-ID	I.D. Label (not shown)		1
	PT2748J-JET	JET Logo Label (not shown)		2
	PT2748J-WL	Warning Label (not shown)		1
	PT2748J-PL	Pump Label (not shown)		1

\* Available only in the repair kit – PT2748J-101A