




# Parts Manual

**RS7000E 420cc**

**Model 0066730 (49 ST) & 0066750 (CSA)**

**NOTICE!**


The information in this manual is known to be accurate as of the date of release shown on the cover. However, engineering changes can occur without notice. To obtain the proper parts, please be sure to use the serial number of the unit being serviced when ordering from this manual. Always refer to any parts notes and changes before ordering. All other parts not shown in this manual can be found on Generac's exploded view drawings online on GENservice at [www.generac.com](http://www.generac.com).

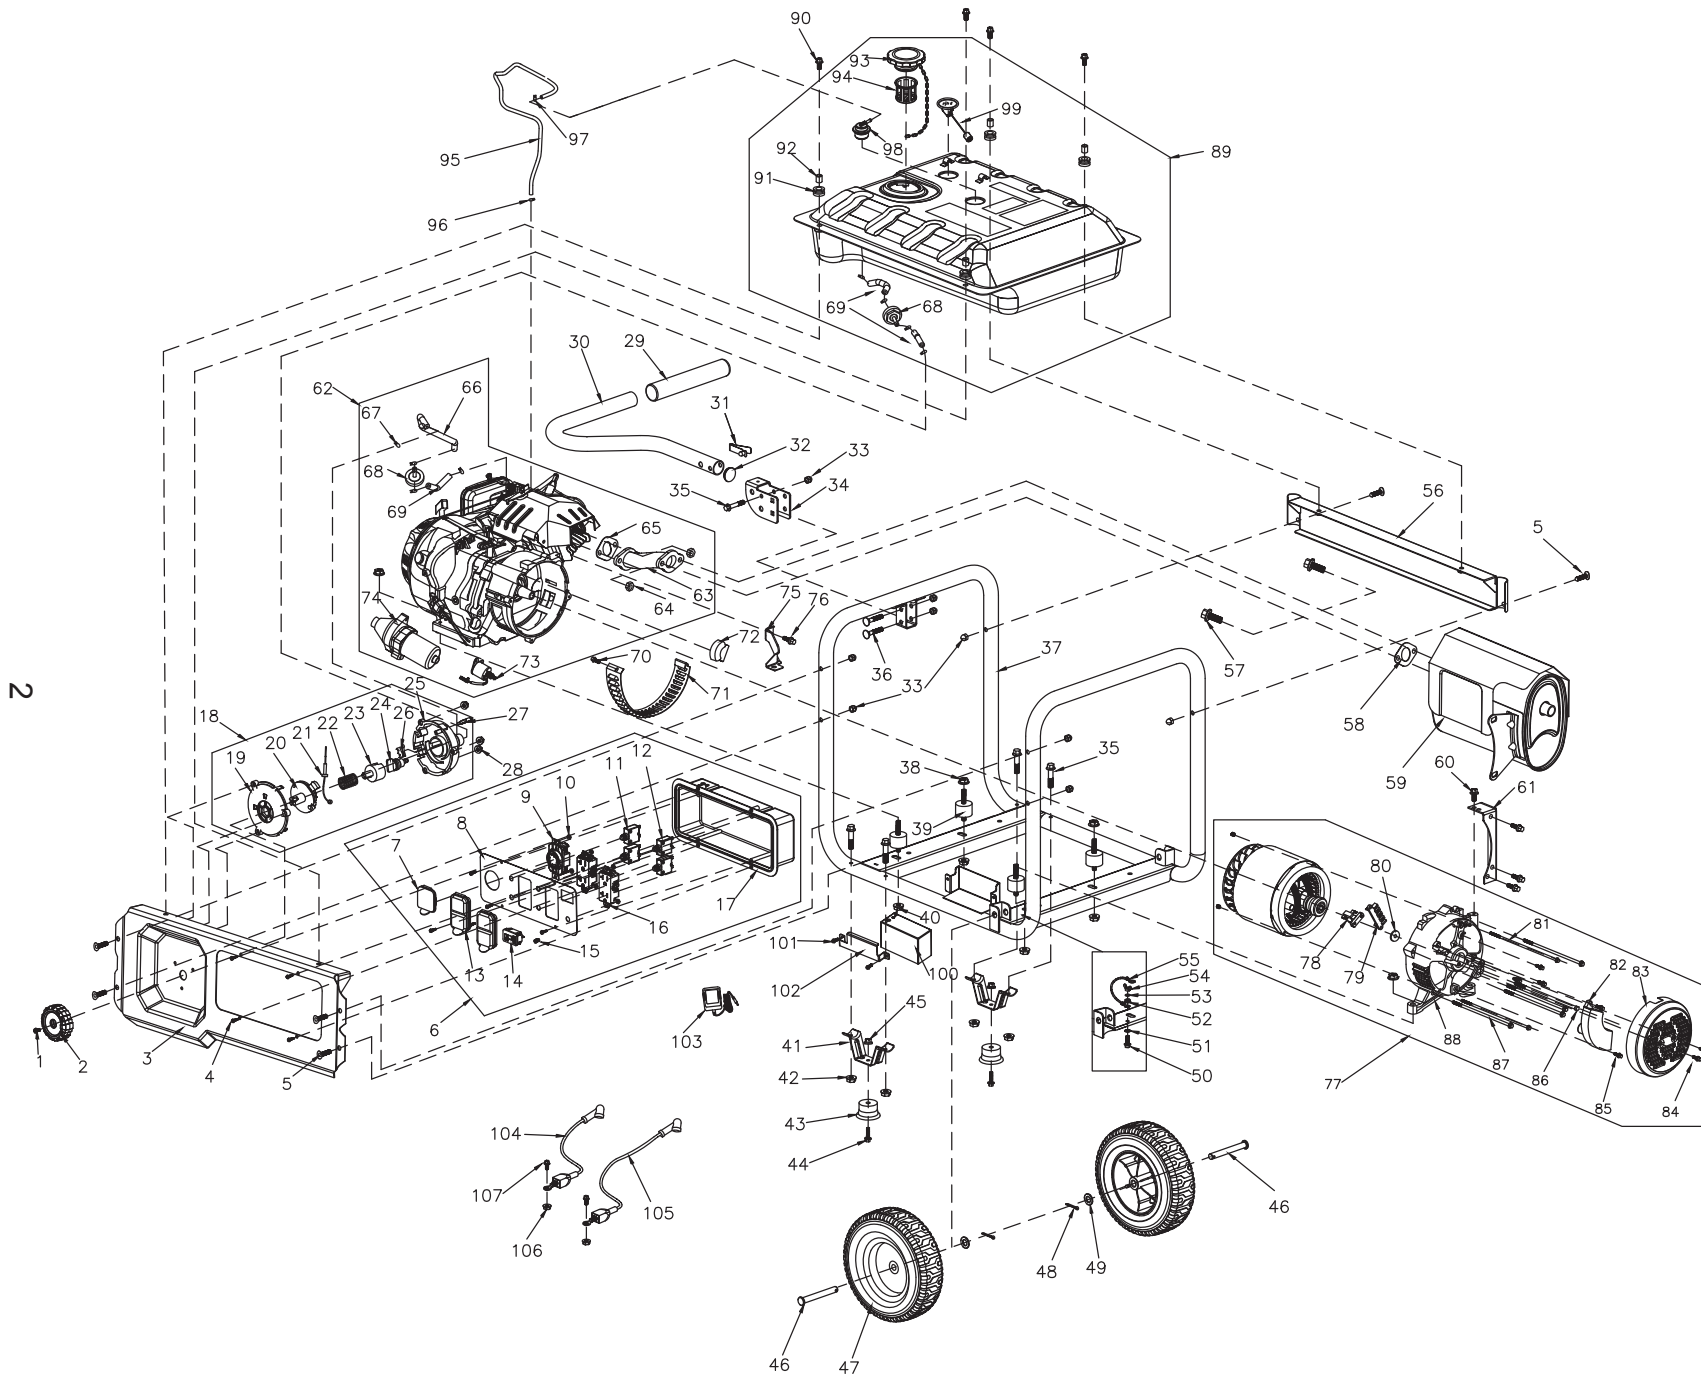

2


RS7000E Model 006673-0 49 ST

# RS7000E Model 006673-0 49 ST



Item	Part #	Qty	Description
1	0K3130	1	SCREW, PLATE M5X10
2	0K6452	1	KNOB, POWER DIAL
3	0K62210ST19	1	RAIL, FRAME, CP SIDE
4	0H91980159	8	SCREW, SELF TAPPING, ST4.0X16
5	0H1780	6	BOLT, CURVED HEAD, M8X40
6	0K65100110	1	PANEL ASSY., CONTROL
7	0G9391	1	COVER, OUTLET
8	0K7071A	1	FACE PLATE, CONTROL PANEL
9	0G8758	1	OUTLET, 30A 120/250V SPCGR
10	0K65110112	6	NUT,M4
11	0H0265E	2	BREAKER, CIRCUIT, 30A
12	0H0265C	2	BREAKER, CIRCUIT, 20A
13	0G9392	2	COVER, OUTLET
14	0G8321	1	METER, HOUR
15	0J4959	1	CHARGER, INPUT
16	0D4968	2	OUTLET, 20A, 120V DUPLEX 6342
17	0G9756A	1	COVER, BACK PANEL
18	0K6451	1	SWITCH, POWER DIAL COMBINATION
19	0K6343	1	COVER, POWER DIAL
20	0K6447	1	SHAFT, POWER DIAL
21	0K6457	1	CHOKE, LASSO
22	0K6463	1	SPRING, COMPRESSION
23	0K6448	1	ADAPTER, POWER DIAL
24	0K7078	1	SWITCH, POWER DIAL FUEL
25	0k6343	1	CASE, POWER DIAL
26	0K65100114	1	SWITCH, MICRO
27	0K65100115	1	SWITCH, MICRO
28	0G84420272	3	NUT, M6
29	0G8442C112	1	HANDLE, GRIP
30	0H97560ES03	1	HANDLE, BLACK
31	0J5347	1	BUTTON, SNAP
32	0H9760	1	PLUG, HANDLE
33	0H1782	9	CAP, NUT LOCKING, M8
34	0K65110114	1	BRACKET, HANDLE, BLACK
35	073144	5	BOLT, M8X45
36	0H1781	2	BOLT, CARRIAGE HEAD M8X46

Item	Part #	Qty	Description
37	0K60120ES03	1	FRAME, BLACK
38	0J4029	4	NUT, M10
39	0K09150110	4	MOUNTS, VIBRATION RUBBER
40	0K22930127	4	NUT, M8
41	0K0097	2	FRAME, BENT FOOT
42	0K0098	4	NUT, M8
43	0J8836	2	FOOT, RUBBER
44	0K0100	2	BOLT, M6X28
45	0K0105	2	NUT, M6
46	0H0204	2	PIN, AXLE
47	0K6011	2	WHEEL
48	0D4999	2	PIN, COTTER
49	022304	2	WASHER,FLAT, 13X2
50	0J35220156	1	BOLT, M6X20
51	0K0093	1	WASHER, LOCK SPECIAL
52	0G84420272	1	NUT, M6
53	0J47870118	1	WASHER, FLAT 6X0.8
54	0K0094	1	NUT, M6
55	0K20670114	1	WIRE ASSY., GROUND
56	0H9749AST19	1	RAIL, BACK
57	0E9507B	2	BOLT, M8X25
58	0J4691	1	GASKET, MUFFLER EXHAUST
59	0K65100111	1	MUFFLER
60	0E9470	4	BOLT, M8X16
61	0J97760112	1	BRACKET, MUFFLER
62	0H9838E	1	ENGINE, 420 CC
63	0J4535A	1	PIPE, EXHAUST MANIFOLD
64	0J35220161	2	NUT, M8
65	0G9028	1	GASKET, EXHAUST CYLINDER
66	0K65110117	1	HOSE, FUEL 12.7X250
67	0H9838C110	8	CLAMP, HOSE #12
68	0K65110118	2	FILTER, FUEL (IN-LINE)
69	0K65110119	3	HOSE, FUEL, 12.7X75
70	0J00620100	1	BOLT, M5X10
71	0H9761	1	COVER, DUST
72	0J86620104	1	BAFFLE
73	0H98380102	1	RELAY, STARTER
74	0H98380101	1	MOTOR, STARTER
75	0G8442C112	1	BRACKET, AIR CLEANER




# RS7000E Model 006673-0 49 ST

Item	Part #	Qty	Description
76	0G84420194	3	BOLT, M6X12
77	0K6918	1	ALTERNATOR ASSY.
78	0H0919	1	BRUSH, ALTERNATOR
79	0J83630111	1	TERMINAL, WIRE CONNECTOR
80	0J86620102	1	WASHER, FLAT M10X4
81	0H91980158	2	BOLT, STATOR M5X220
82	0H2579B	1	AVR
83	0H3049	1	COVER, GENERATOR END
84	0J4967	6	BOLT, M5X12
85	0J4968	3	BOLT, M5X16
86	0H92090104	1	BOLT, ROTOR, M10X275
87	0H12810104	4	BOLT, ROTOR, M6X185
88	0H91980171	1	HOUSING, RR BEARING CARRIER
89	0K63090ST15	1	TANK ASSY., FUEL 8 GAL.
90	0E9507C	4	BOLT, M8X20
91	0H1411B	4	MOUNT, RUBBER FUEL TANK
92	0H1610A	4	INSERT, MOUNT ANTI-CRUSH
93	0H0958A	1	CAP, FUEL TANK


Item	Part #	Qty	Description
94	0H1326	1	FILTER, FUEL (TANK)
95	0K65100112	1	HOSE, PREFORMED FUEL
96	0H9838C110	1	CLAMP, HOSE #12
97	0J35220174	1	CLAMP, FUEL HOSE #10
98	0J7921	1	VALVE, ROLL-OVER
99	0K09150113	1	GAUGE, FUEL
100	0G9449	1	BATTERY
101	0G84420194	3	BOLT, M6X12
102	0J06940ST03	1	COVER, BATTERY COMPARTMENT
103	0G5744	1	CHARGER, BATTERY
104	0J4157B	1	CABLE, BATTERY (POS-RED)
105	0J4157A	1	CABLE, BATTERY (NEG-GRN)
106	0H3535	2	NUT, M5
107	0J4967	2	BOLT, M5X12
NOT SHOWN	0G5743A	1	20FT POWER CORD
NOT SHOWN	0K7087	1	DECAL, OVERLAY CNTL PNL 49ST

**This Page Intentionally Left Blank**

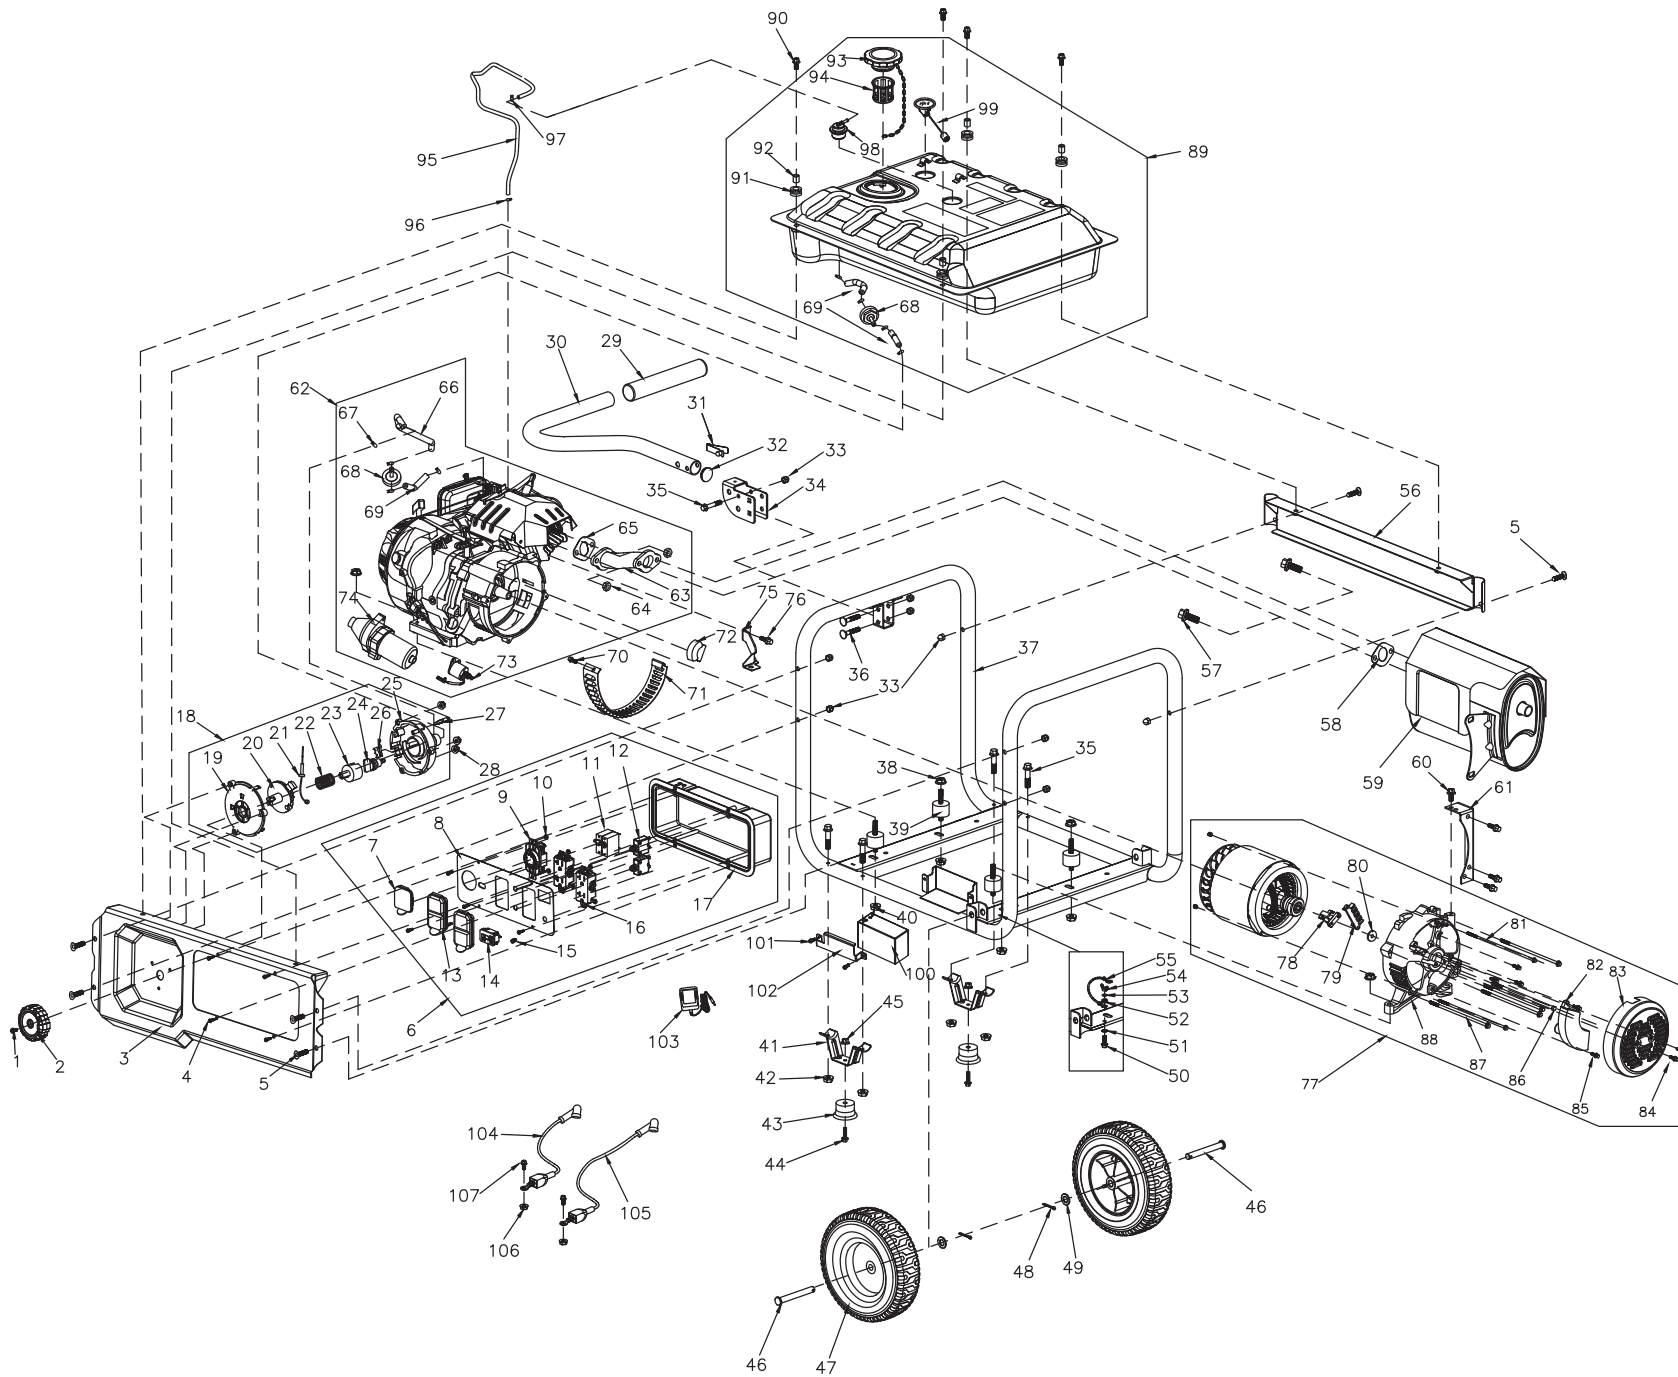

RS7000E Model 006675-0 CSA

# RS7000E Model 006675-0 CSA



Item	Part #	Qty	Description
1	0K3130	1	SCREW, PLATE M5X10
2	0K6452	1	KNOB, POWER DIAL
3	0K62210ST19	1	RAIL, FRAME, CP SIDE
4	0H91980159	8	SCREW, SELF TAPPING, ST4.0X16
5	0H1780	6	BOLT, CURVED HEAD, M8X40
6	0K65100113	1	PANEL ASSY., CONTROL
7	0G9391	1	COVER, OUTLET
8	0K7071	1	FACE PLATE, CONTROL PANEL
9	0G8758	1	OUTLET, 30A 120/250V SPCGR
10	0K65110112	6	NUT, M4
11	0G9023C	2	BREAKER, CIRCUIT, 30A
12	0H0265C	2	BREAKER, CIRCUIT, 20A
13	0G9392	2	COVER, OUTLET
14	0G8321	1	METER, HOUR
15	0J4959	1	CHARGER, INPUT
16	0D4968	2	OUTLET, 20A, 120V DUPLEX 6342
17	0G9756A	1	COVER, BACK PANEL
18	0K6451	1	SWITCH, POWER DIAL COMBINATION
19	0K6343	1	COVER, POWER DIAL
20	0K6447	1	SHAFT, POWER DIAL
21	0K6457	1	CHOKE, LASSO
22	0K6463	1	SPRING, COMPRESSION
23	0K6448	1	ADAPTER, POWER DIAL
24	0K7078	1	SWITCH, POWER DIAL FUEL
25	0K6343	1	CASE, POWER DIAL
26	0K65100114	1	SWITCH, MICRO
27	0K65100115	1	SWITCH, MICRO
28	0G84420272	3	NUT, M6
29	0G8442C113	1	HANDLE, GRIP
30	0H97560ES03	1	HANDLE, BLACK
31	0J5347	1	BUTTON, SNAP
32	0H9760	1	PLUG, HANDLE
33	0H1782	9	CAP, NUT LOCKING, M8
34	0K65110114	1	BRACKET, HANDLE, BLACK
35	073144	5	BOLT, M8X45
36	0H1781	2	BOLT, CARRIAGE HEAD M8X46

Item	Part #	Qty	Description
37	0K60120ES03	1	FRAME, BLACK
38	0J4029	4	NUT, M10
39	0K09150110	4	MOUNTS, VIBRATION RUBBER
40	0K22930127	4	NUT, M8
41	0K0097	2	FRAME, BENT FOOT
42	0K0098	4	NUT, M8
43	0J8836	2	FOOT, RUBBER
44	0K0100	2	BOLT, M6X28
45	0K0105	2	NUT, M6
46	0H0204	2	PIN, AXLE
47	0K6011	2	WHEEL
48	0D4999	2	PIN, COTTER
49	022304	2	WASHER, FLAT, 13X2
50	0J35220156	1	BOLT, M6X20
51	0K0093	1	WASHER, LOCK SPECIAL
52	0G84420272	1	NUT, M6
53	0J47870118	1	WASHER, FLAT 6X0.8
54	0K0094	1	NUT, M6
55	0742600197	1	WIRE ASSY., GROUND
56	0H9749AST19	1	RAIL, BACK
57	0E9507B	2	BOLT, M8X25
58	0J4691	1	GASKET, MUFFLER EXHAUST
59	0K65100111	1	MUFFLER
60	0E9470	4	BOLT, M8X16
61	0J97760112	1	BRACKET, MUFFLER
62	0H9838E	1	ENGINE, 420 CC
63	0J4535A	1	PIPE, EXHAUST MANIFOLD
64	0J35220161	2	NUT, M8
65	0G9028	1	GASKET, EXHAUST CYLINDER
66	0K65110117	1	HOSE, FUEL 12.7X250
67	0H9838C110	8	CLAMP, HOSE #12
68	0K65110118	2	FILTER, FUEL (IN-LINE)
69	0K65110119	3	HOSE, FUEL, 12.7X75
70	0J00620100	1	BOLT, M5X10
71	0H9761	1	COVER, DUST
72	0J86620104	1	BAFFLE
73	0H98380102	1	RELAY, STARTER
74	0H98380101	1	MOTOR, STARTER
75	0G8442C112	1	BRACKET, AIR CLEANER



# RS7000E Model 006675-0 CSA

Item	Part #	Qty	Description
76	0G84420194	3	BOLT, M6X12
77	0K6918	1	ALTERNATOR ASSY.
78	0H0919	1	BRUSH, ALTERNATOR
79	0J83630111	1	TERMINAL, WIRE CONNECTOR
80	0J86620102	1	WASHER, FLAT M10X4
81	0H91980158	2	BOLT, STATOR M5X220
82	0H2579B	1	AVR
83	0H3049	1	COVER, GENERATOR END
84	0J4967	6	BOLT, M5X12
85	0J4968	3	BOLT, M5X16
86	0H92090104	1	BOLT, ROTOR, M10X275
87	0H12810104	4	BOLT, ROTOR, M6X185
88	0H91980171	1	HOUSING, RR BEARING CARRIER
89	0K63090ST15	1	TANK ASSY., FUEL 8 GAL.
90	0E9507C	4	BOLT, M8X20
91	0H1411B	4	MOUNT, RUBBER FUEL TANK
92	0H1610A	4	INSERT, MOUNT ANTI-CRUSH
93	0H0958A	1	CAP, FUEL TANK

Item	Part #	Qty	Description
94	0H1326	1	FILTER, FUEL (TANK)
95	0K65100112	1	HOSE, PREFORMED FUEL
96	0H9838C110	1	CLAMP, HOSE #12
97	0J35220174	1	CLAMP, FUEL HOSE #10
98	0J7921	1	VALVE, ROLL-OVER
99	0K09150113	1	GAUGE, FUEL
100	0G9449	1	BATTERY
101	0G84420194	3	BOLT, M6X12
102	0J06940ST03	1	COVER, BATTERY COMPARTMENT
103	0G5744	1	CHARGER, BATTERY
104	0J4157B	1	CABLE, BATTERY (POS-RED)
105	0J4157A	1	CABLE, BATTERY (NEG-GRN)
106	0H3535	2	NUT, M5
107	0J4967	2	BOLT, M5X12
NOT SHOWN	0G5743A	1	20 FT POWER CORD
NOT SHOWN	0K7013		DECAL, OVERLAY CNTL PNL- CSA

©2014 Generac Power Systems, Inc. All rights reserved.  
 Specifications are subject to change without notice  
 No reproduction allowed in any form without prior written consent from Generac Power Systems, Inc.