


# Parts Breakdown for JSH Series Electric Chain Hoists

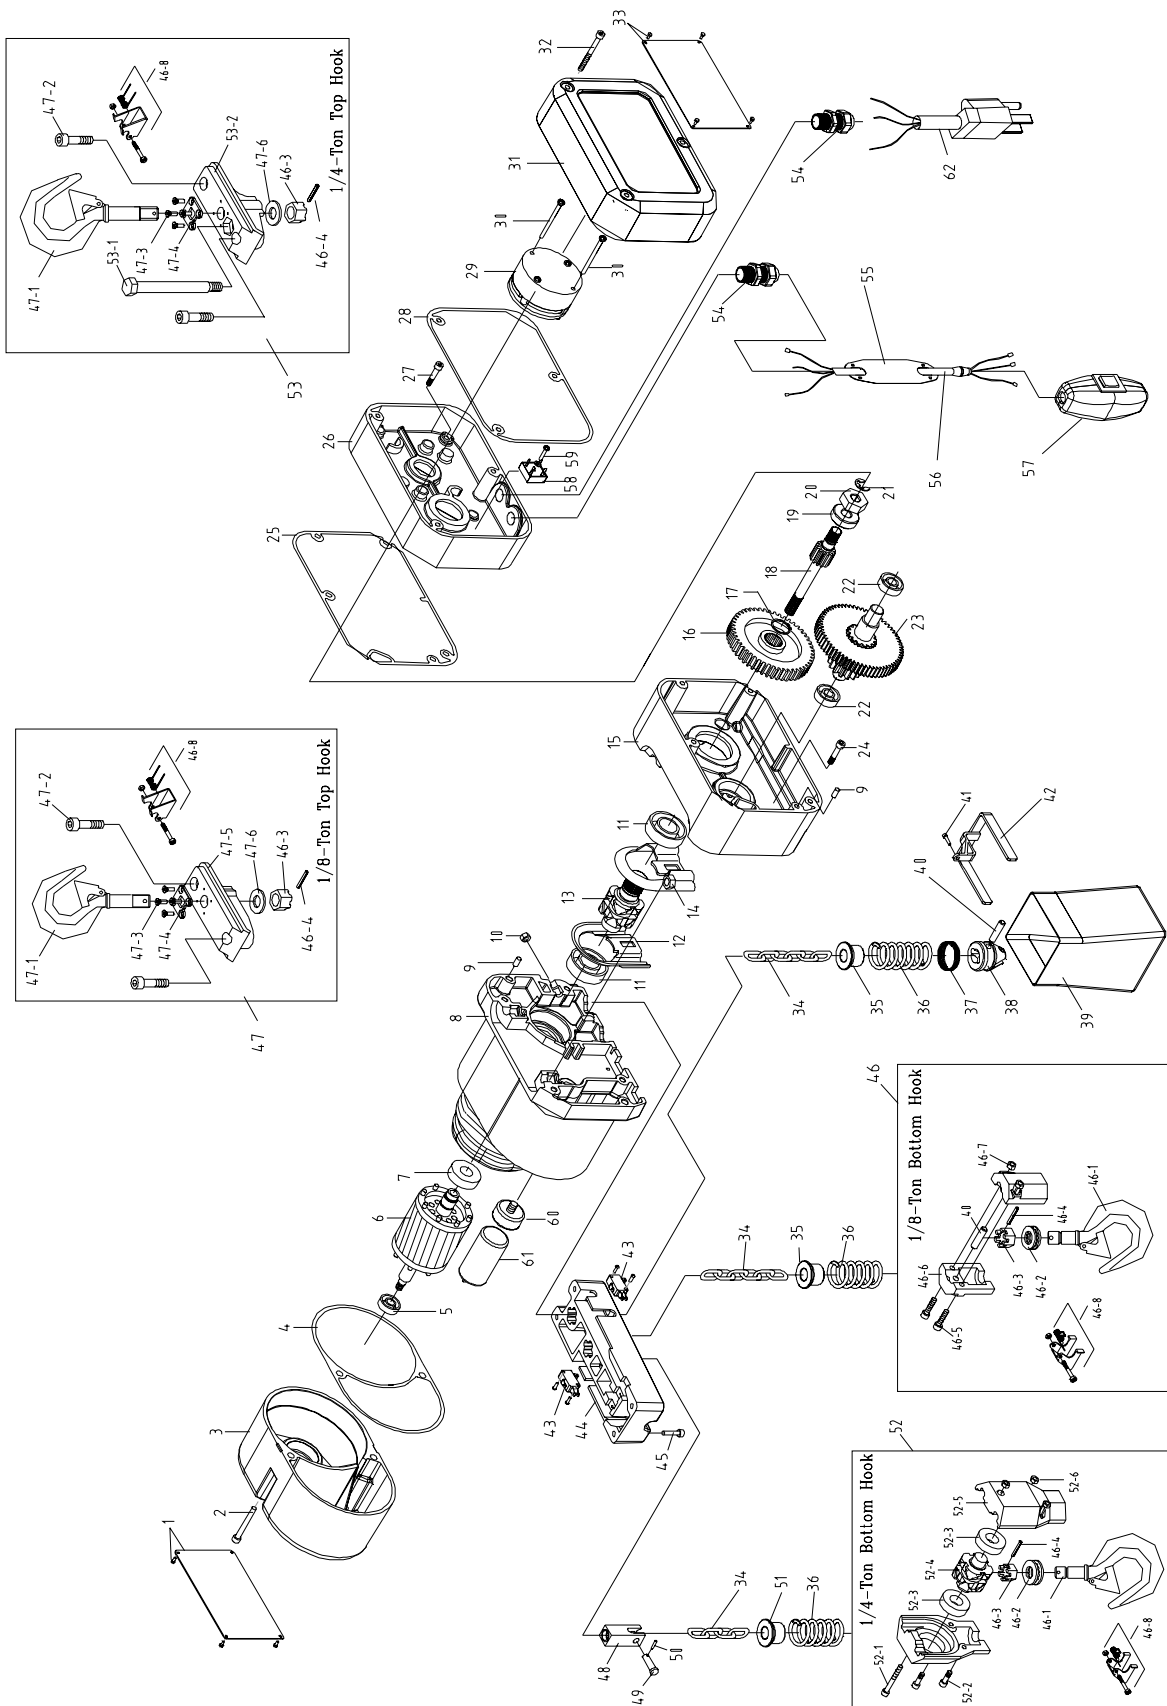

## Parts List for JSH Series Electric Chain Hoists

Index No.	Part No.	Description	Size	Qty
1	JSH275-1	Capacity Label for JSH-275		1
	JSH550-1	Capacity Label for JSH-550		1
	TS-1531012	Phillips Pan Head Machine Screw	M3x6	2
	TS-1550011	Plain Washer	3mm	2
2	JSH275-2	Socket Head Cap Screw	M6x40	2
	TS-2361061	Spring Washer	6mm	2
	TS-1550041	Plain Washer	6mm	2
3	JSH275-3	Motor Side Cover		1
4	JSH275-4	Motor Case Gasket		1
5	JSH275-5	Grooved Ball Bearing	6201	1
6	JSH275-6	Rotor Assembly		1
7	JSH275-7	Grooved Ball Bearing	6202	1
8	JSH275-8	Motor Case Assembly		1
9	JSH275-9	Round Pin		4
10	JSH275-10	Self Locking Hex Nut	M6	1
11	JSH275-11	Grooved Ball Bearing	6004	2
12	JSH275-12	Chain Guard		2
13	JSH275-13	Lift Wheel		1
14	JSH275-14	Self Locking Hex Nut	M8	2
15	JSH275-15	Gear Case		1
16	JSH275-16	Lift Gear		1
17	JSH275-17	Snap Ring	18mm	1
18	JSH275-18	First Gear Shaft		1
19	JSH275-19	Grooved Ball Bearing	6000	1
20	JSH275-20	Brake Nut		1
21	JSH275-21	Snap Ring	10mm	1
22	JSH275-22	Grooved Ball Bearing	6201	2
23	JSH275-23	Second Gear Assembly		1
24	TS-1503061	Socket Head Cap Screw	M6x25	4
	TS-2361061	Spring Washer	6mm	4
	TS-1550041	Plain Washer	6mm	4
25	JSH275-25	Gear Side Gasket		1
26	JSH275-26	Back Frame		1
27	TS-1503061	Socket Head Cap Screw	M6x25	3
	TS-2361061	Spring Washer	6mm	3
	TS-1550041	Plain Washer	6mm	3
28	JSH275-28	Back Frame Gasket		1
29	JSH275-29	Brake		1
30	JSH275-30	Cross Head Pan Screw	M5x65	2
	TS-2361051	Spring Washer	5mm	2
	TS-1550031	Plain Washer	5mm	2
31	JSH275-31	Back Frame Cover		1
32	TS-1502091	Socket Head Cap Screw	M5x40	3
	TS-2361051	Spring Washer	5mm	3
	TS-1550031	Plain Washer	5mm	3
	JSH275-32-3	O-Ring	4x1.8mm	3
33	JSH275-33-10	ID Label for JSH-275-10		1
	JSH275-33-15	ID Label for JSH-275-15		1
	JSH275-33-20	ID Label for JSH-275-20		1
	JSH550-33-10	ID Label for JSH-550-10		1
	JSH550-33-15	ID Label for JSH-550-15		1
	JSH550-33-20	ID Label for JSH-550-20		1
	TS-1531012	Phillips Pan Head Machine Screw	M3x6	4
	TS-1550011	Plain Washer	3mm	4
34	JSH275-34	Load Chain	Ø4x12mm	per ft.
35	JSH275-35	Touch Block A		2

Index No.	Part No.	Description	Size	Qty
36	JSH275-36	Limit Spring		2
37	JSH275-37	Retainer Ring		1
38	JSH275-38	Chain Stop		1
39	JSH275-39	Chain Container		1
40	JSH275-40	Spring Pin		2
41	TS-1503061	Socket Head Cap Screw	M6x25	1
	TS-2361061	Spring Washer	6mm	1
	TS-1550041	Plain Washer	6mm	1
42	JSH275-42	Chain Container Bracket		1
43	JSH275-43	Limit Switch		2
	JSH275-43-1	Phillips Pan Head Machine Screw	M3x16	4
	TS-2361031	Spring Washer	3mm	4
	TS-1550011	Plain Washer	3mm	4
44	JSH275-44	Limit Switch Assembly		1
	JSH275-44-1	Gasket		1
	JSH275-44-2	Cover		1
	JSH275-44-3	Countersunk Cross Head Screw	M3x8	2
	JSH275-44-4	Insulation Sheet		2
	JSH275-43	Limit Switch		2
	JSH275-43-1	Phillips Pan Head Machine Screw	M3x16	4
	TS-2361031	Spring Washer	3mm	4
	TS-1550011	Plain Washer	3mm	4
45	TS-1501081	Socket Head Cap Screw	M4x30	4
	TS-2361041	Spring Washer	4mm	4
	TS-1550021	Plain Washer	4mm	4
46	JSH275-46	Bottom Hook Assembly for JSH-275		1
46-1	JSH275-46-1	Bottom Hook		1
46-2	JSH275-46-2	Thrust Ball Bearing	8100	1
46-3	JSH275-46-3	Slotted Hex Nut	M10	1
46-4	JSH275-46-4	Spring Pin	Ø2.5x8mm	1
46-5	JSH275-45-5	Socket Head Cap Screw	M5x20	2
46-6	JSH275-45-6	Bottom Hook Housing		2
46-7	JSH275-45-7	Self Locking Hex Nut	M5	2
46-8	JSH275-46-8	Safety Latch Assembly		1
		Safety Latch		1
		Double Spring		1
		Phillips Pan Head Machine Screw	M4x20	1
		Self Locking Hex Nut	M4	1
47	JSH275-47	Top Hook Assembly for JSH-275		1
47-1	JSH275-47-1	Top Hook		1
47-2	TS-1504051	Socket Head Cap Screw	M8x25	2
47-3	JSH275-47-3	Countersunk Cross Head Screw	M5x10	4
47-4	JSH275-47-4	Fixing Board		1
47-5	JSH275-47-5	Connection Bar for JSH-275		1
47-6	JSH275-47-6	Washer		1
48	JSH550-48	Suspension Chain Block		1
49	JSH550-49	Clevis Pin		1
50	JSH550-50	Cotter Pin	Ø2x16mm	1
51	JSH550-51	Touch Block B		1
52	JSH550-52	Bottom Hook Assembly for JSH-550		1
52-1	JSH275-32	Socket Head Cap Screw	M5x40	1
52-2	JSH275-45-5	Socket Head Cap Screw	M5x20	2
52-3	JSH275-7	Grooved Ball Bearing	6202	2
52-4	JSH550-52-4	Sheave		1
52-5	JSH550-52-5	Bottom Hook Housing		2
52-6	JSH275-45-7	Self Locking Hex Nut	M5	3
53	JSH550-53	Top Hook Assembly for JSH-550		1

<b>Index No.</b>	<b>Part No.</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
53-1	JSH550-53-1	Suspension Bolt		1
53-2	JSH550-53-2	Connection Bar for JSH-550		1
54	JSH275-54	Cable Gland		2
55	JSH275-55	Warning Card		1
56	JSH275-56	Pushbutton Cord	16AWGx3C	per ft.
57	JSH275-57	Pushbutton		1
58	JSH275-58	Rectifier	50A	1
59	TS-2284202	Phillips Pan Head Machine Screw	M4x20	1
	TS-1550021	Plain Washer	4mm	1
60	JSH275-60	Housing for Capacitor		1
61	JSH275-61	Capacitor		1
62	JSH275-62	Power Cable Assembly	16AWGx3C	1

# Electrical Connections – JSH Series Hoists

115V 60Hz 1~

