


# LR 12

(HC12R38A) 954000762

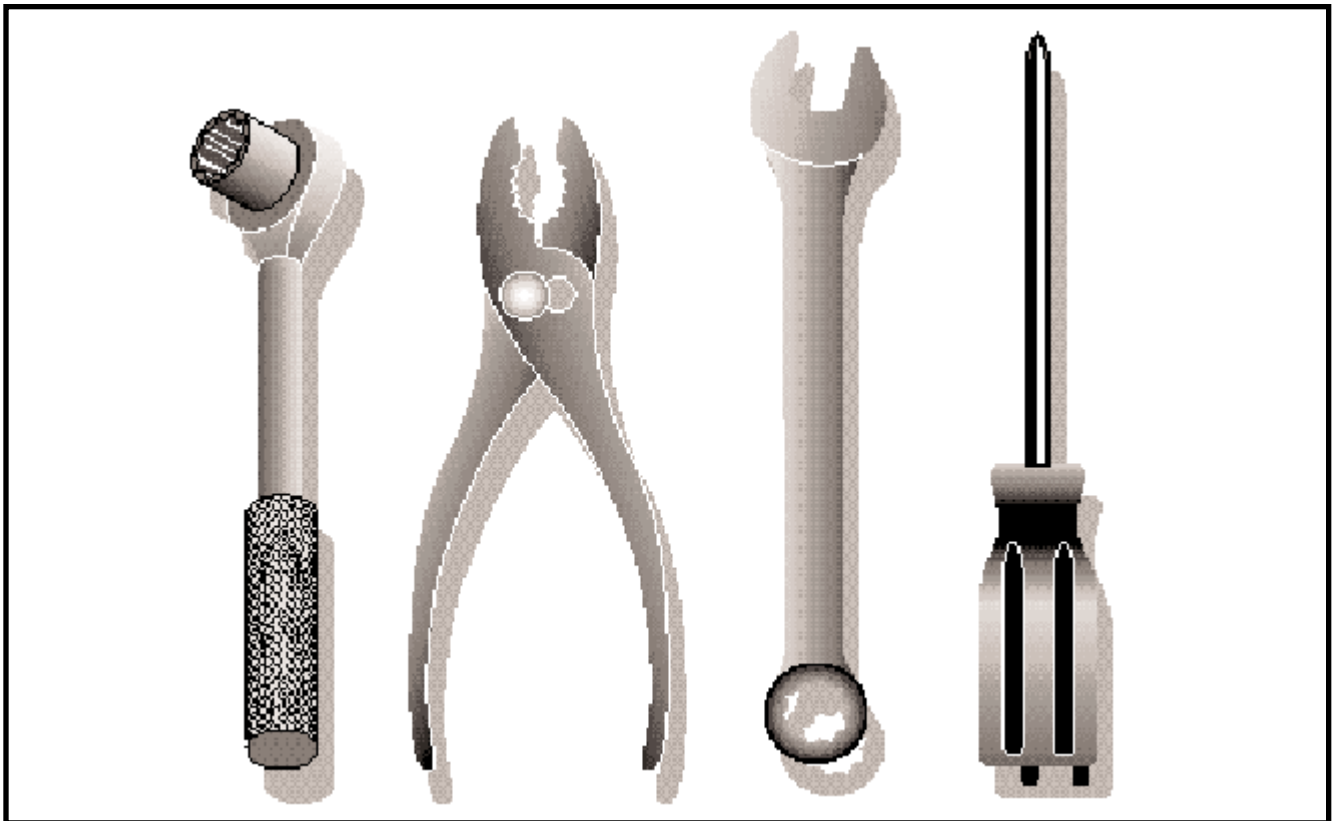


Repair Parts Manual

Ride Mower

# REPAIR PARTS

12 HP 38" LAWN TRACTOR-MODEL NO. LR12 (HC12R38A),  
PRODUCT NO. 954 00 07-62

## ELECTRICAL

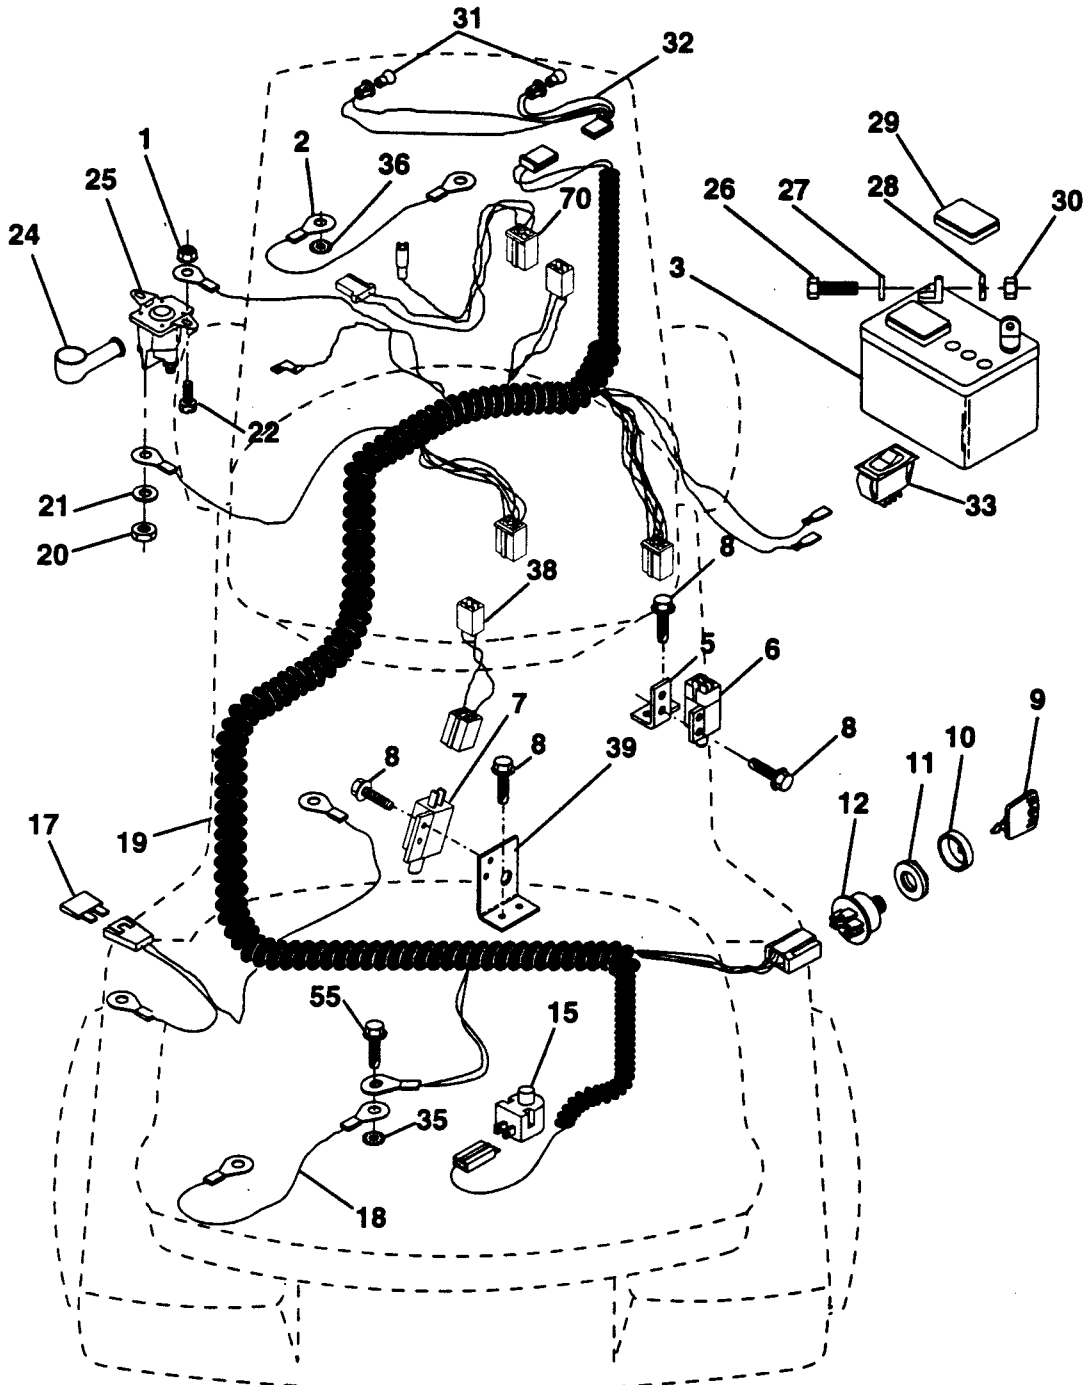

# REPAIR PARTS

## 12 HP 38" LAWN TRACTOR-MODEL NO. LR12 (HC12R38A), PRODUCT NO. 954 00 07-62

### ELECTRICAL

KEY NO.	PART NO.	DESCRIPTION
1	873510400	Nut, Hex, Keps 1/4-20
2	532108423	Assembly, Cable
3	532133909	Battery
5	532108236	Bracket, Switch
6	532104445	Switch, Interlock, 2 Terminal
7	532109553	Switch, Interlock, 4 Terminal
8	817021008	Screw, Hex Head, Self-Tapping #10-24 x 1/2
9	532140401	Key, Molded
10	532140399	Cover, Ignition Key
11	532140400	Nut, Ignition
12	532140399	Switch, Ignition
15	532121305	Switch, Plunger
17	532108824	Fuse
18	532128353	Assembly, Cable
19	532143132	Harness, Ignition
20	873350400	Nut, Hex, Jam 1/4-20
21	810090400	Washer, Lock 1/4
22	874780408	Bolt, Hex, Fin. 1/4-20 UNC x 1/2 Grade 5
24	532131563	Cover, Terminal
25	532138406	Solenoid
26	874760412	Bolt, Hex Head 1/4-20 UNC x 3/4
27	819091016	Washer 9/32 x 5/8 x 16 Gauge
28	810040400	Washer, Lock 1/4
29	532121264	Cap, Battery
30	873220400	Nut, Hex, Fin. 1/4-20 UNC
31	532004152	Bulb, Light
32	532131078	Harness, Headlight
33	532110712	Switch, Light
35	811050500	Washer, Lock, External Tooth 5/16
36	811150400	Washer, Lock, Internal Tooth 1/4
38	532140660	Harness Adapter
39	532141735	Bracket, Switch Clutch
55	817490508	Screw, Thdrol 5/16-28 x 1/2
70	532140413	Harness Engine


**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

12 HP 38" LAWN TRACTOR-MODEL NO. LR12(HC12R38A),  
PRODUCT NO. 954 00 07-62

## HOOD

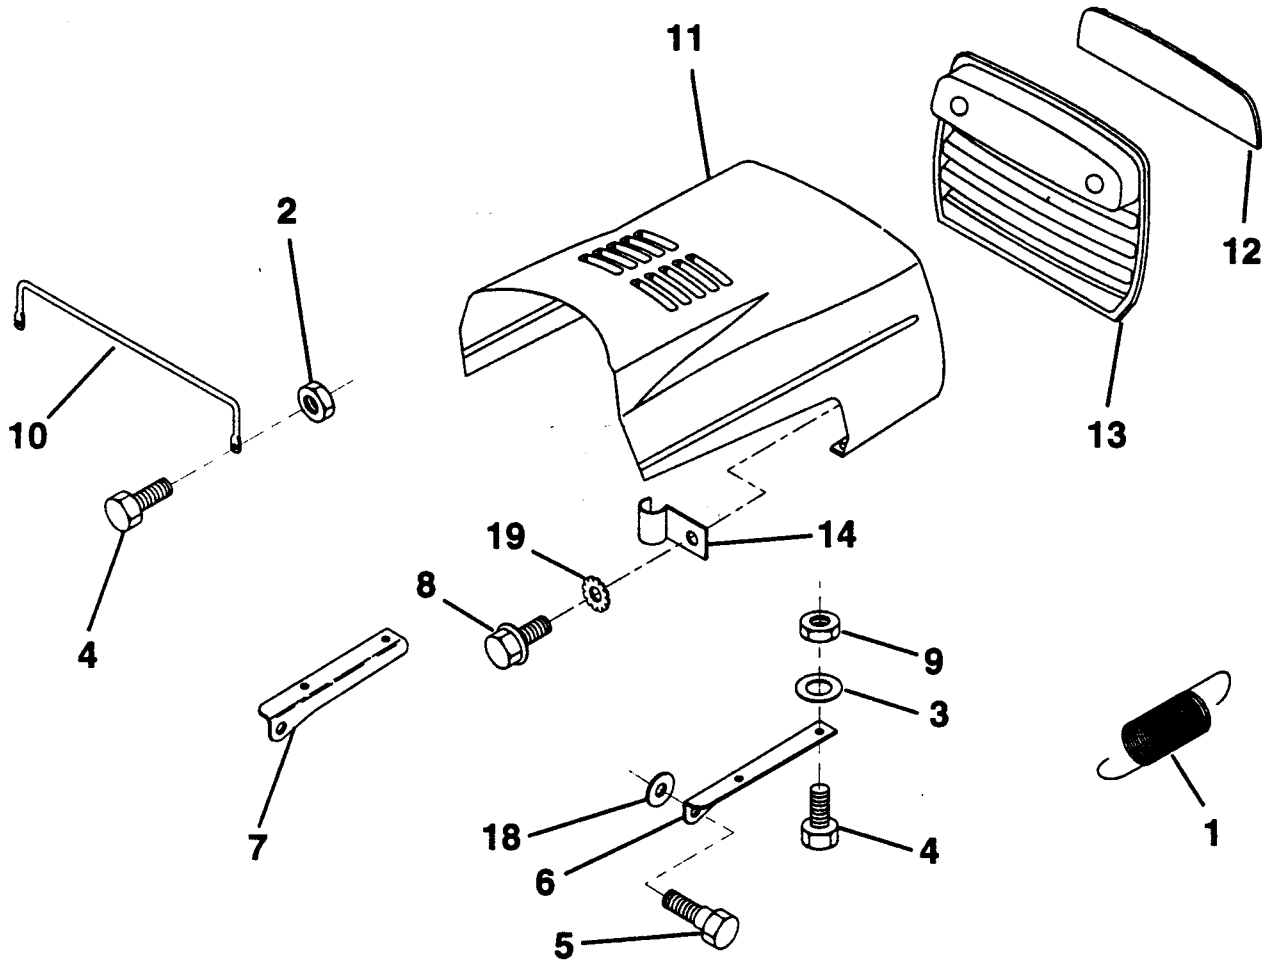

KEY NO.	PART NO.	DESCRIPTION
1	532124657	Spring, Ext
2	873510400	Nut, Keps
3	819091416	Washer 9/32 x 7/8 x 16 Ga
4	874780412	Bolt, Fin Hex 1/4-20 x .75
5	532126675	Bolt, Shoulder 5/16-18 Thd Fmr
6	532122549	Bracket Hood RH
7	532122548	Bracket Hood LH
8	817521312	Screw, Sltd Hex Hd w/PI Washer
9	873800400	Nut, Lock w/Insert 1/4-20

KEY NO.	PART NO.	DESCRIPTION
10	532123693	Brace, Hood
11	532140463	Hood
12	532122035	Lens, Headlight Bar
13	532127029	Grille
14	532124996	Clip, Line Fuel
18	819111116	Washer 11/32 x 11/16 x 16 Ga
19	811030400	Washer Lock 1/4 Ext/Int Tooth


**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

# REPAIR PARTS

12 HP 38" LAWN TRACTOR-MODEL NO. LR12 (HC12R38A),  
PRODUCT NO. 954 00 07-62

## FENDER/CHASSIS

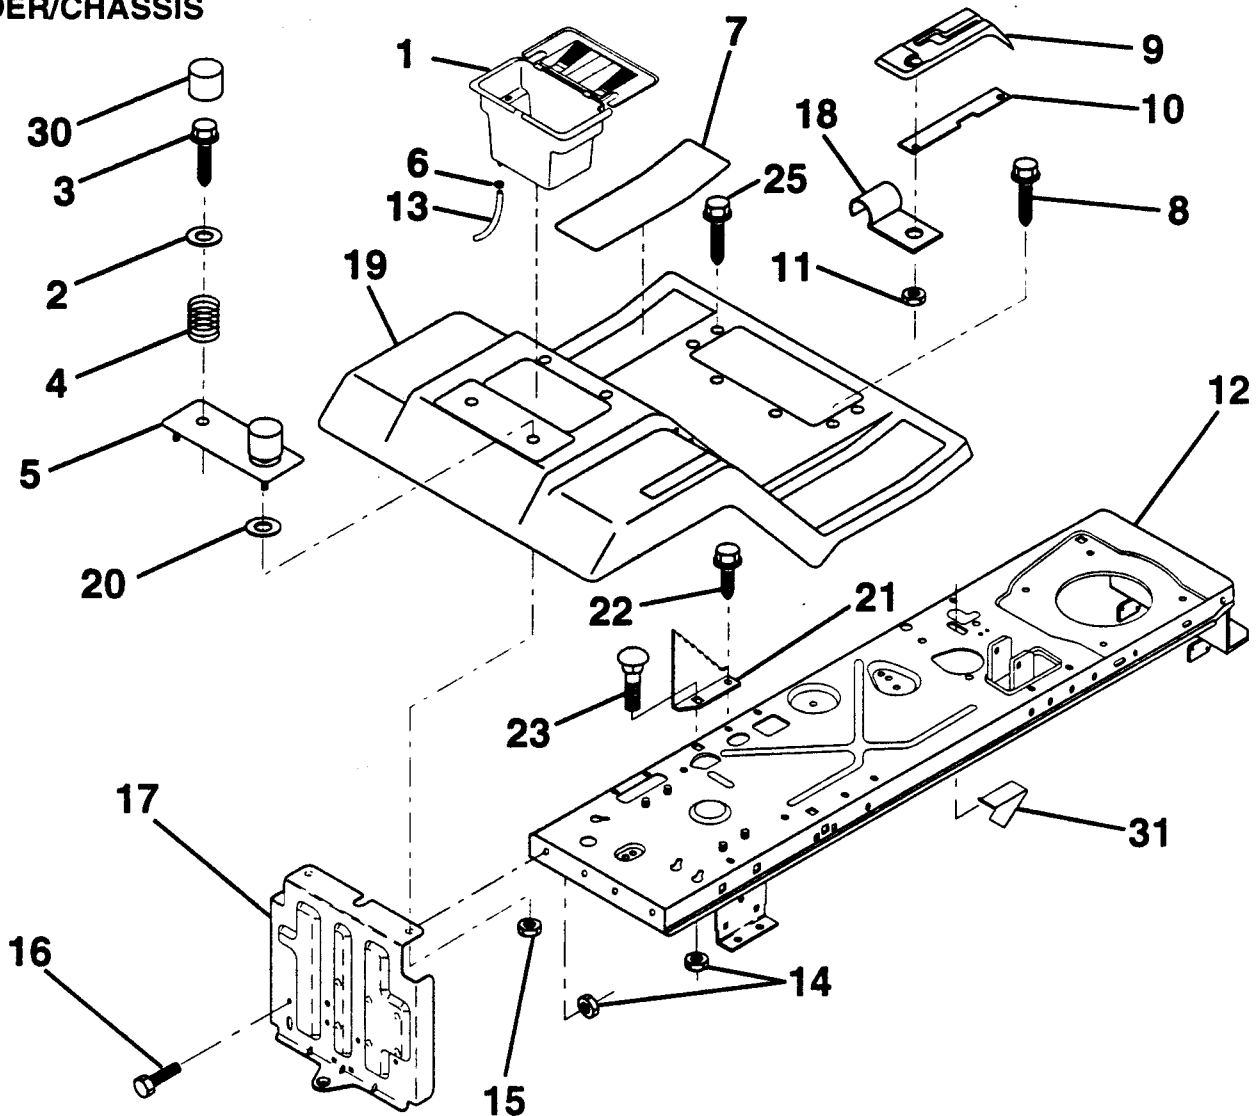

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532129965	Case Asm. Battery	15	873510400	Nut Keps Hex 1/4-20
2	819132012	Washer 13/32 x 1-1/4 x 12 Ga.	16	874760512	Bolt Hex Hd. 5/16-18 x 3/4
3	817490612	Screw Thdrol. 3/8-16 x 3/4	17	532127880	Drawbar Asm.
4	532124181	Spring seat	18	532126470	Clip Insulated
5	532125142	Plate Asm. Pnt Battery Fender	19	532141366	Fend/Foot Asm. Pnt Shf. Fnd.
6	532109596	Clamp Hose Olive	20	819091413	Washer 9/32 x 7/8 x 13 Ga.
7	532126700	Pad Footrest Rubber Deluxe	21	532140297	Bracket Stop Depth
8	817490512	Screw Thdrol. 5/16-18 x 3/4	22	817490508	Screw Thdrol 5/16-18 x 1/2
9	532126995	Console Shf. 6sp W/lgn.	23	872110506	Bolt Rdhdsqnk. 5/16-18 x 3/4
10	532139783	Plate Lock Shift	25	817490516	Scr-Hex Wsh Rol 5/16-18 x 1
11	532124346	Nut Self Thd. Wsh-Hd 1/4	30	532124238	Cap Spring Seat
12	532140784	Chassis Asm. Weldment	31	532141736	Switch Actuator
13	532109238	Tube Plastic			
14	873800500	Nut Crownlock 5/16-18			

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm


HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

# REPAIR PARTS

12 HP 38" LAWN TRACTOR-MODEL NO. LR12 (HC12R38A),

PRODUCT NO. 954 00 07-62

## SEAT

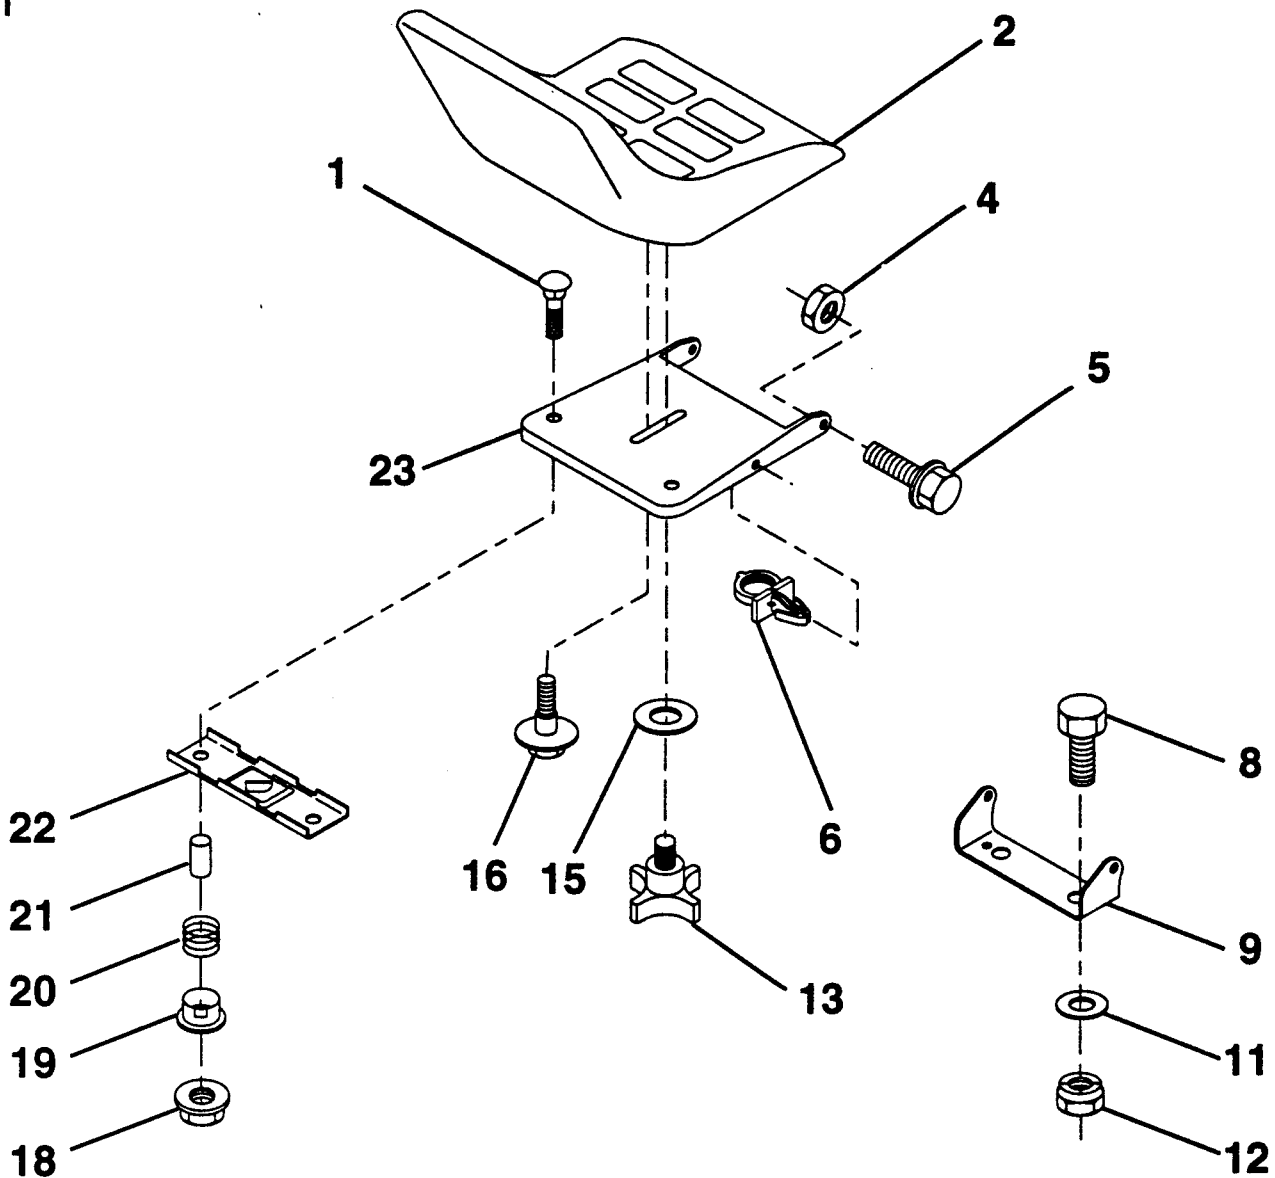

KEY NO.	PART NO.	DESCRIPTION
1	872050411	Bolt, Carriage 1/4-20 x 1-3/8
2	532134647	Seat
4	873800500	Nut, Hex, Crownlock 5/16-18
5	532139888	Bolt, Shoulder 5/16-18 UNC
6	532140407	Clip, Insulated
8	874760612	Bolt, Hex, Fin. 3/8-16 UNC x 3/4
9	532140551	Bracket, Pivot, Seat
11	819133210	Washer 12/32 x 2 x 10 Gauge
12	873800600	Nut, Hex, Crownlock 3/8-16 UNC
13	532120068	Knob, Seat

KEY NO.	PART NO.	DESCRIPTION
15	819171912	Washer 17/32 x 1-3/16 x 12 Gauge
16	532127018	Bolt, Shoulder
18	532123976	Nut, Hex, Large, Flange Lock
19	532121248	Bushing, Snap
20	532121250	Spring, Compression
21	532134300	Spacer, Split, Large .28 Id. x .96
22	532121246	Bracket, Switch Mounting
23	532140552	Pan, Seat


**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

# REPAIR PARTS

12 HP 38" LAWN TRACTOR-MODEL NO. LR12 (HC12R38A),  
PRODUCT NO. 954 00 07-62

DASH

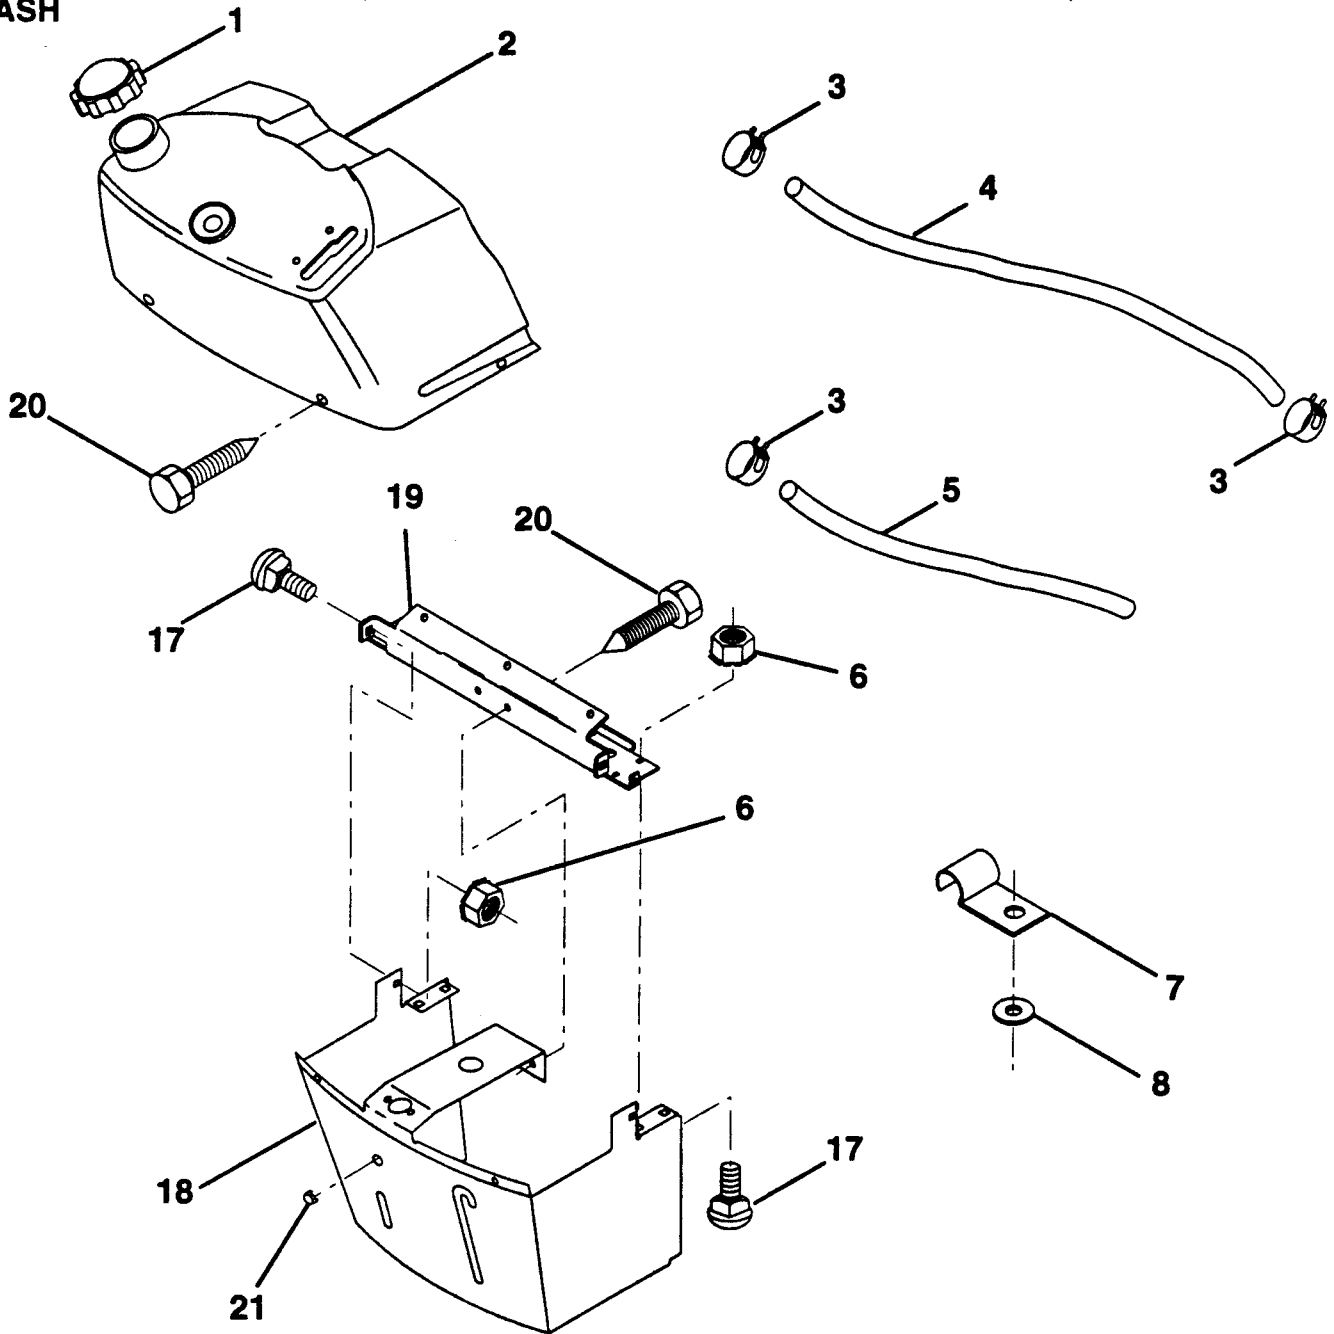

KEY NO.	PART NO.	DESCRIPTION
1	532132735	Cap, Fuel Tank
2	532138392	Assembly, Dash & Fuel Tank
3	532123487	Clamp, Hose
4	532008544	Line, Fuel
5	532008548	Line, Fuel
6	873510400	Nut, Hex, Keps 1/4-20
7	532124996	Clip, Fuel Line
8	819091216	Washer 9/32 x 3/4 x 16 Gauge

KEY NO.	PART NO.	DESCRIPTION
17	872110404	Bolt, Carriage 1/4-20 x 1/2 Grade 5
18	532131886	Support Assembly, Dash
19	532134744	Brace, Cross
20	817060408	Screw, Self-Tapping 1/4-20 x 1/2
21	532134014	Plug, Dome, Black

NOTE: All component dimensions given in U.S. inches  
1 inch = 25.4 mm


HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

# REPAIR PARTS

12 HP 38" LAWN TRACTOR-MODEL NO. LR12 (HC12R38A),

PRODUCT NO. 954 00 07-62

## STEERING WHEEL

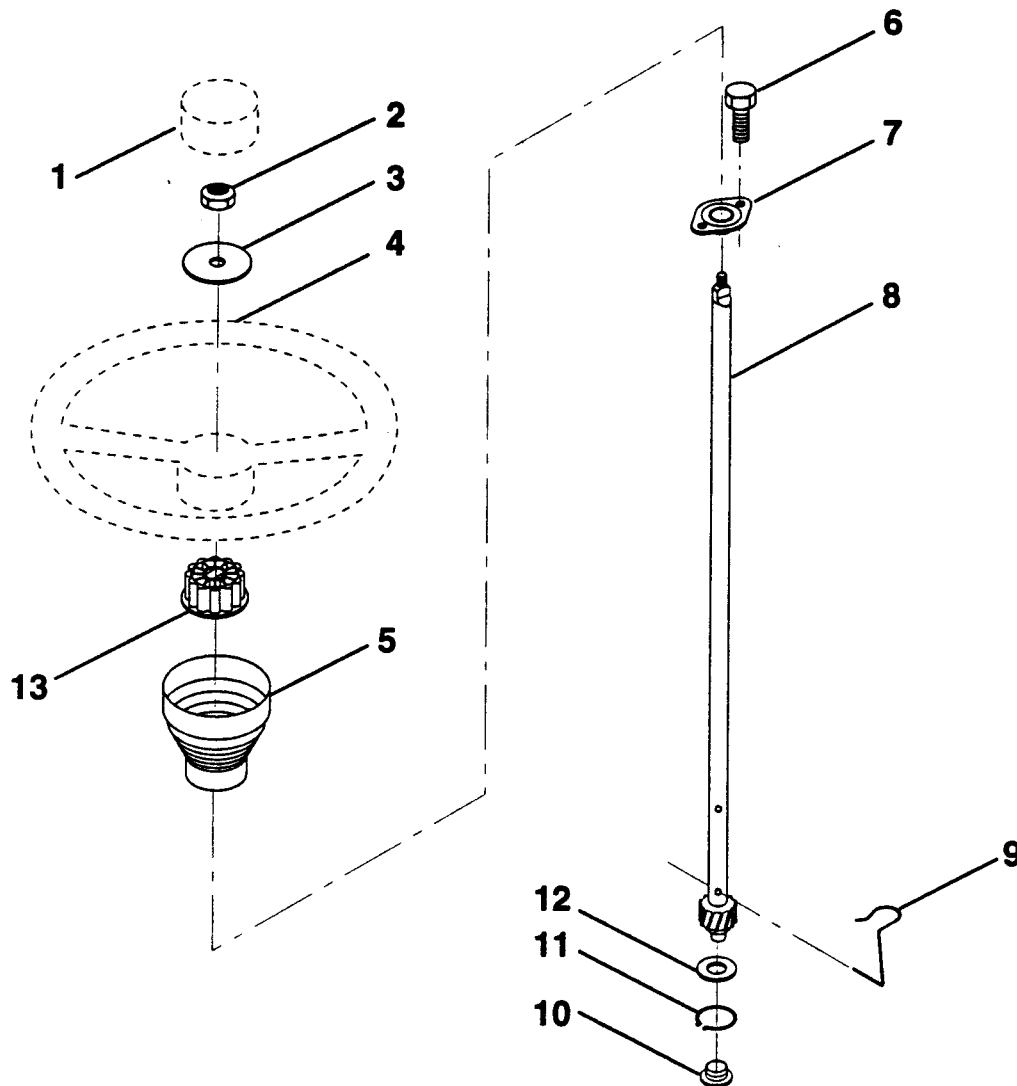

KEY NO.	PART NO.	DESCRIPTION
1	532124416	Insert, Steering Wheel
2	532124701	Locknut 3/8-24 UNF
3	819133808	Washer 12/32 x 2-3/8 x 8 Gauge
4	532121472	Steering Wheel
5	532121897	Sleeve, Steering
6	817431008	Screw, Hex Head #10-16 x 1/2
7	532102803	Bushing, Steering
8	532123651	Shaft, Steering

KEY NO.	PART NO.	DESCRIPTION
9	532124210	Clip, Steering
10	532123438	Bushing, Lower, Steering
11	812000045	Ring, Retaining
12	819211616	Washer 21/32 x 1 x 16 Gauge
13	532104820	Adaptor, Steering Wheel

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm


**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**



# REPAIR PARTS

12 HP 38" LAWN TRACTOR-MODEL NO. LR12 (HC12R38A),  
PRODUCT NO. 954 00 07-62

## SECTOR GEAR / AXLE SUPPORT

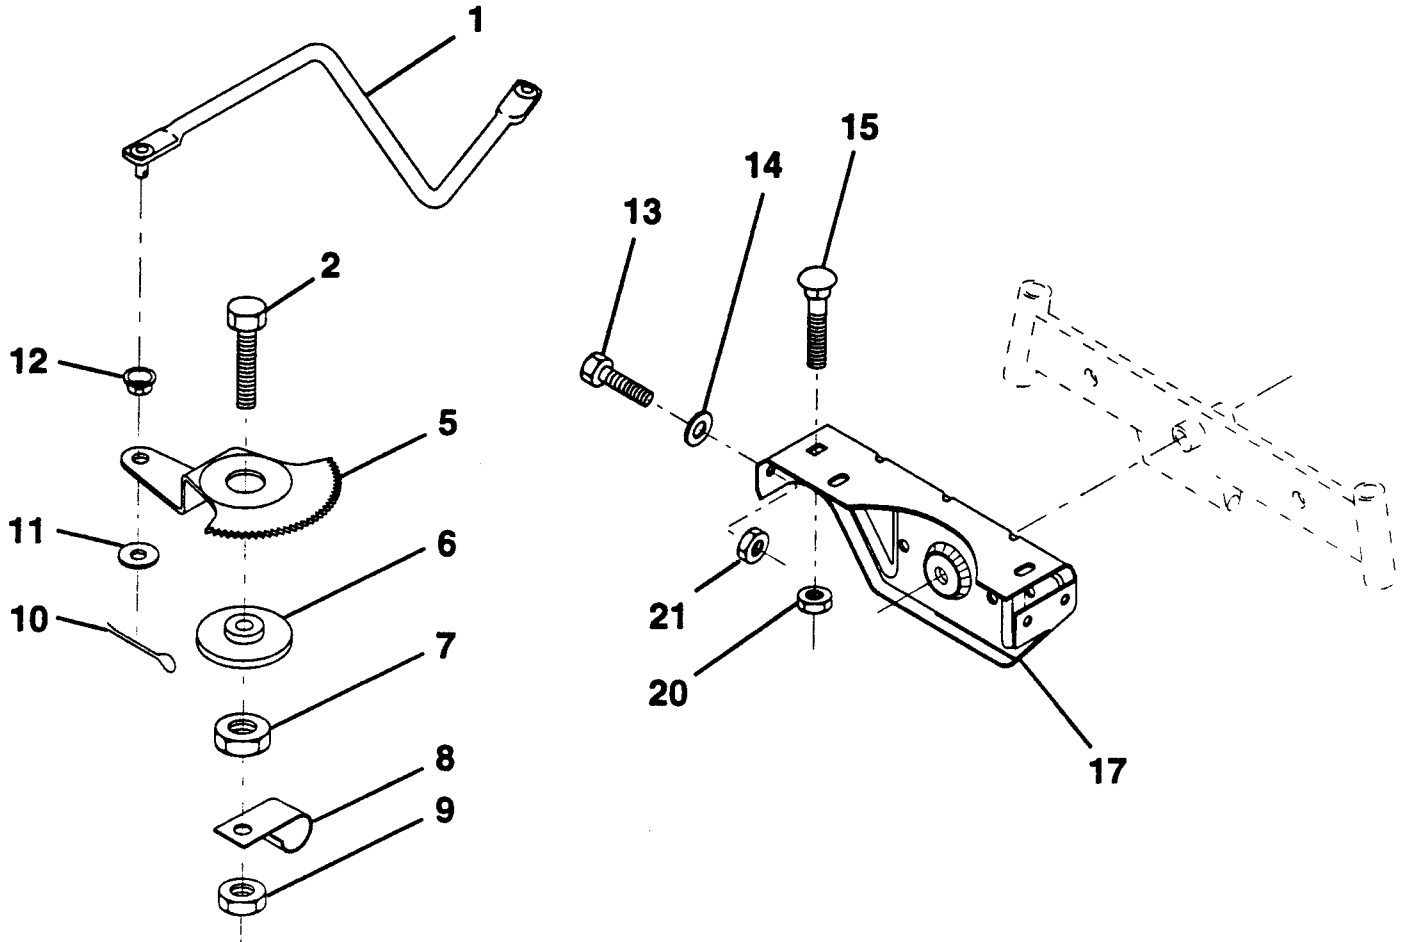

KEY NO.	PART NO.	DESCRIPTION
1	532132566	Link, Drag
2	874780828	Bolt, Hex, Fin. 1/2-13 x 1-3/4
5	532121926	Gear, Sector
6	532121927	Bushing
7	873030800	Nut, Heavy Hex, Top Lock 1/2-13 UNC
8	532126472	Clip, Insulated
9	873680800	Nut, Crownlock 3/8-16
10	876020412	Pin, Cotter 1/8 x 3/4
11	819131316	Washer 13/32 x 13/16 x 16 Gauge

KEY NO.	PART NO.	DESCRIPTION
12	532126847	Bushing
13	874760512	Bolt, Hex Head 5/16-18 UNC x 1
14	819111416	Washer 11/32 x 7/8 x 16 Gauge
15	872110606	Bolt, Carriage 3/8-16 UNC x 3/4
17	532137096	Support, Front Axle
20	873800600	Nut, Hex, Crownlock 3/8-16 UNC
21	873800500	Nut, Hex, Crownlock 5/16-18


**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

# REPAIR PARTS

12 HP 38" LAWN TRACTOR-MODEL NO. LR12 (HC12R38A),  
PRODUCT NO. 954 00 07-62

## FRONT AXLE

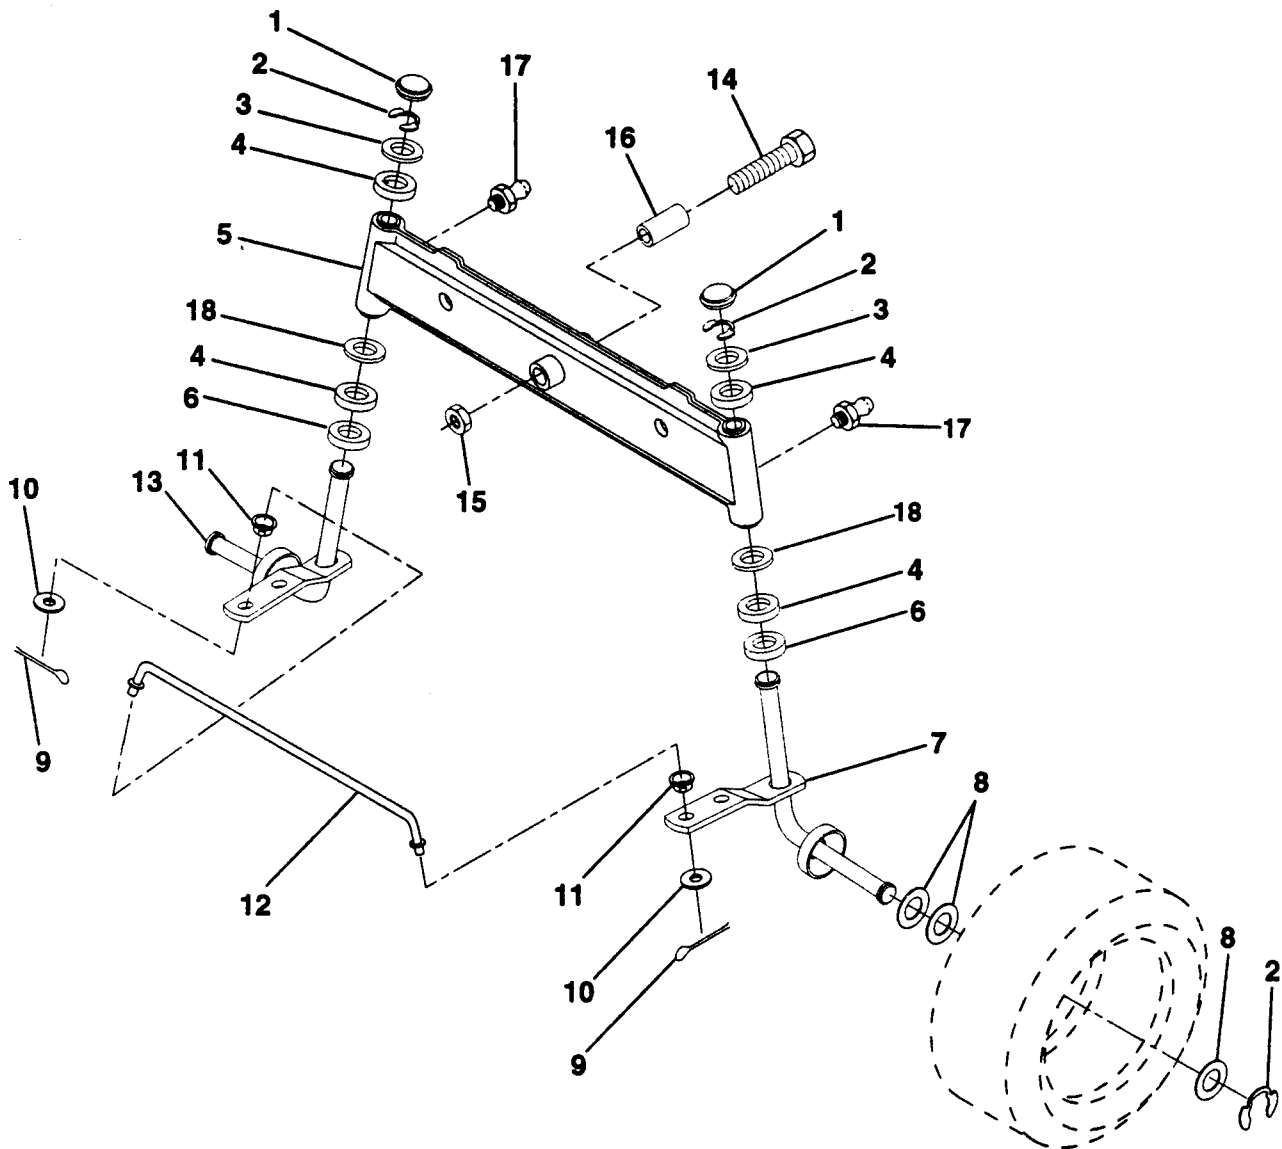

KEY NO.	PART NO.	DESCRIPTION
1	532121232	Cap, Spindle
2	812000029	Ring, Clip
3	532121748	Washer 25/32 x 1-5/8 x 16 Gauge
4	532124937	Bearing
5	532142033	Axle, Front
6	532124931	Bearing, Thrust
7	532137062	Spindle Assembly, R.H.
8	532121749	Washer 25/32 x 1-1/4 x 16 Gauge
9	876020412	Pin, Cotter 1/8 x 3/4
10	819131316	Washer 13/32 x 13/16 x 16 Gauge

KEY NO.	PART NO.	DESCRIPTION
11	532126847	Bushing
12	532130465	Tie Rod
13	532137061	Spindle Assembly, L.H.
14	874011056	Bolt Hex 5/8-11 Unc x 3-1/2
15	873901000	Nut Lock Flange 5/8-11 Unc
16	532110438	Spacer Bearing
17	532124836	Fitting Grease
18	819272016	Washer 27/32 x 1-1/4 x 16 Ga.


**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

12 HP 38" LAWN TRACTOR-MODEL NO. LR12 (HC12R38A),  
PRODUCT NO. 954 00 07-62

## BRAKE / REAR MOWER LIFT ASSEMBLY

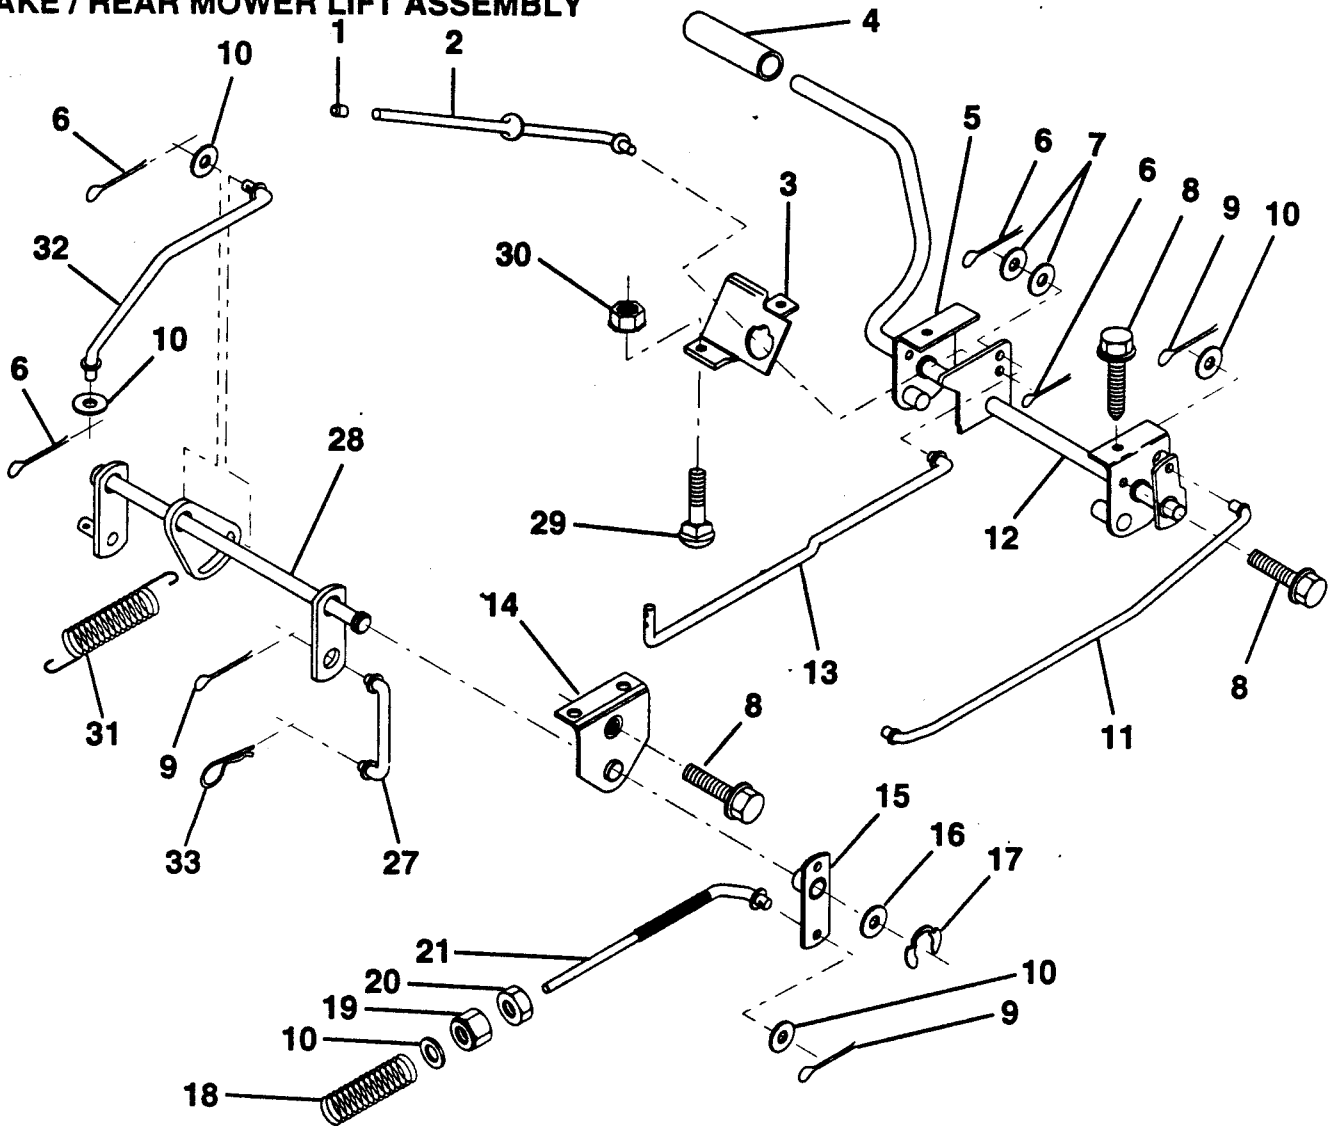

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532071673	Cap, Plunger	15	532123641	Assembly, Brake, Pivot, Arm
2	532123436	Rod, Parking Brake	16	819251816	Washer 25/32 x 1-1/8 x 16 Gauge
3	532123437	Bracket, Parking Brake	17	812000034	Ring, Klip
4	532124827	Cover, Pedal	18	532106888	Spring, Brake Rod
5	532132205	Bracket, Clutch/Brake Pedal, L.H.	19	873350600	Nut, Hex, Jam 3/8-16 UNC
6	876020312	Pin, Cotter 3/32 x 3/4	20	873800600	Locknut, Hex, w/Wsh Ins 3/8-16 UNC
7	819131016	Washer 13/32 x 5/8 x 16 Gauge	21	532131460	Rod, Brake, Rear
8	817490508	Screw, Hex Head, Thd., Roll. 5/16-18 x 1/2	27	532136780	Link, Lift, Rear
9	876020412	Pin, Cotter 1/8 x 3/4	28	532140777	Assembly, Rear Mower Lift
10	819131316	Washer 13/32 x 13/16 x 16 Gauge	29	872110506	Bolt, Carriage 5/16-18 UNC x 3/4
11	532123543	Rod, Brake, Front	30	873510500	Nut, Hex, Keps 5/16-16 UNC
12	532139934	Assembly, Clutch/Brake Pedal	31	532133095	Spring, Counterbalance
13	532123394	Rod, Clutch	32	532133721	Link, Lift Lever
14	532121978	Bracket, Lift Shaft	33	532124670	Retainer Spring


**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

12 HP 38" LAWN TRACTOR-MODEL NO. LR12 (HC12R38A),  
PRODUCT NO. 954 00 07-62

## GROUND DRIVE

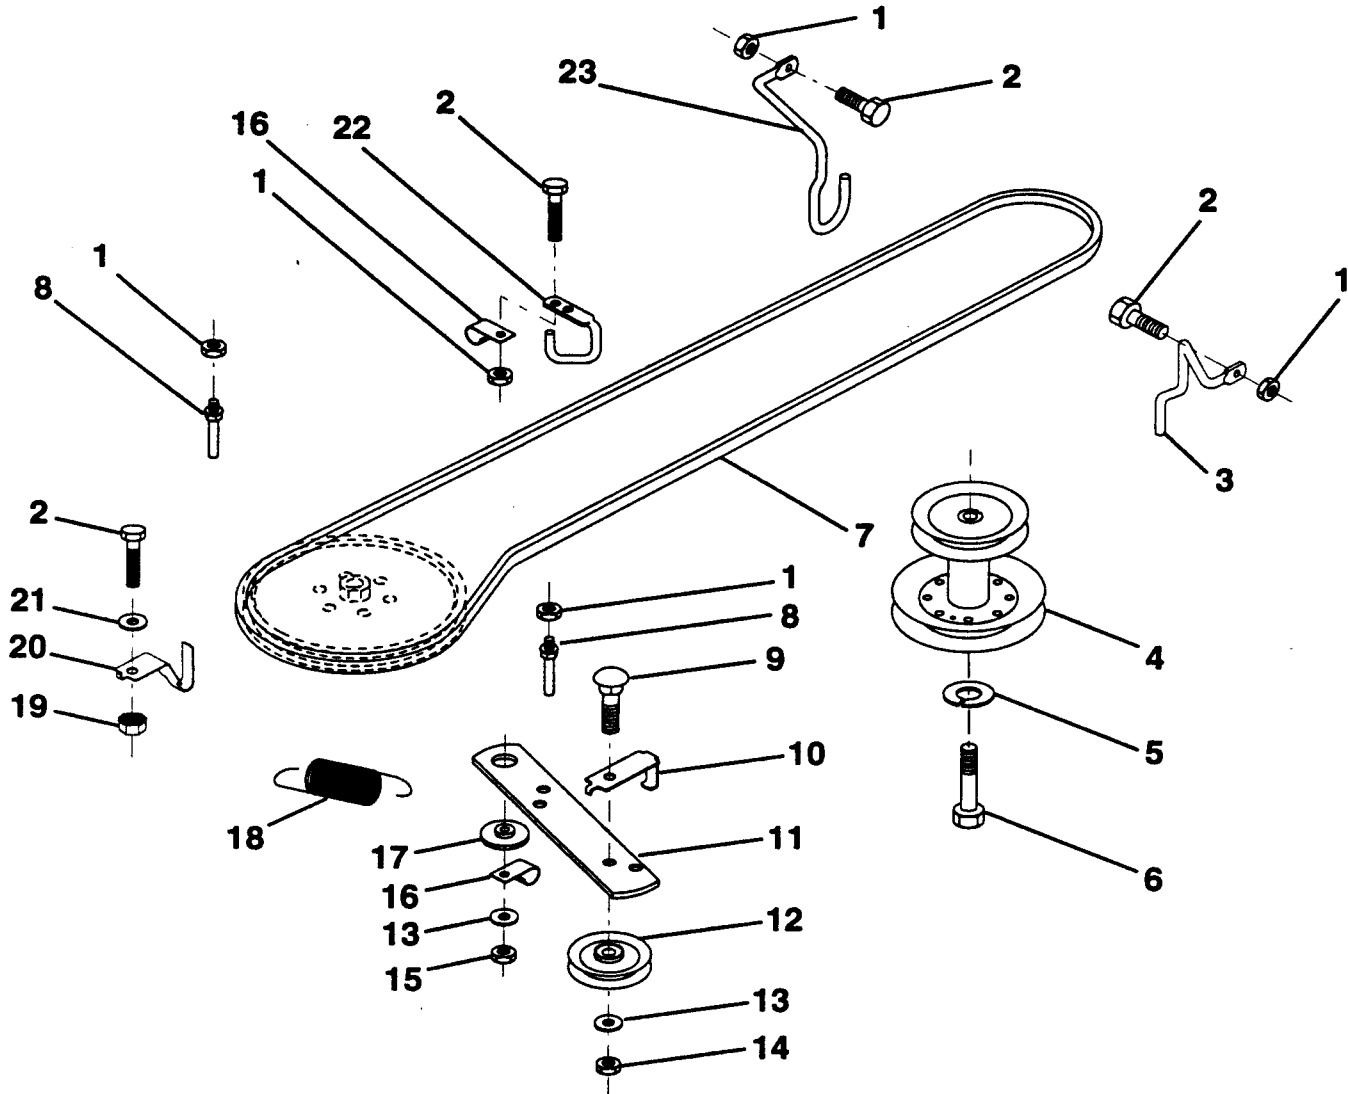

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	873800500	Nut, Crownlock 5/16-18	14	873930600	Nut, Hex, Centerlock 3/8-16 UNC
2	874760512	Bolt, Hex Head 5/16-18 UNC x 3/4	15	873800600	Nut, Hex, Crownlock 3/8-16 UNC
3	532141341	Keeper, Mower Drive, R.H.	16	532126472	Clip Insulated
4	532138029	Pulley, Engine	17	532122052	Spacer, Retainer
5	810040700	Washer, Lock 7/16	18	532131459	Spring, Extension
6	871170744	Bolt, Hex Hd. 7/16-20 UNF Grade 5	19	873510500	Nut, Hex, Keps 5/16-18 UNC
7	532124525	Traction, V-Belt Drive	20	532139919	Keeper, T/A, Ground Drive Belt
8	532123405	Keeper, T/A, Ground Drive Belt	21	819111016	Washer 11/32 x 5/8 x 16 Gauge
9	872140612	Bolt, Carriage 3/8-16 UNC x 1-1/2	22	532123404	Keeper, Frame Ground Drive Belt
10	532123396	Keeper, Ground Drive Belt Idler	23	532142240	Keeper, Belt LH
11	532123395	Arm, Ground Drive Clutch			
12	532123674	Idler, Flat			
13	819131316	Washer 13/32 x 13/16 x 16 Gauge			


**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

12 HP 38" LAWN TRACTOR-MODEL NO. LR12 (HC12R38A),  
PRODUCT NO. 954 00 07-62

## MOWER LIFT LEVER

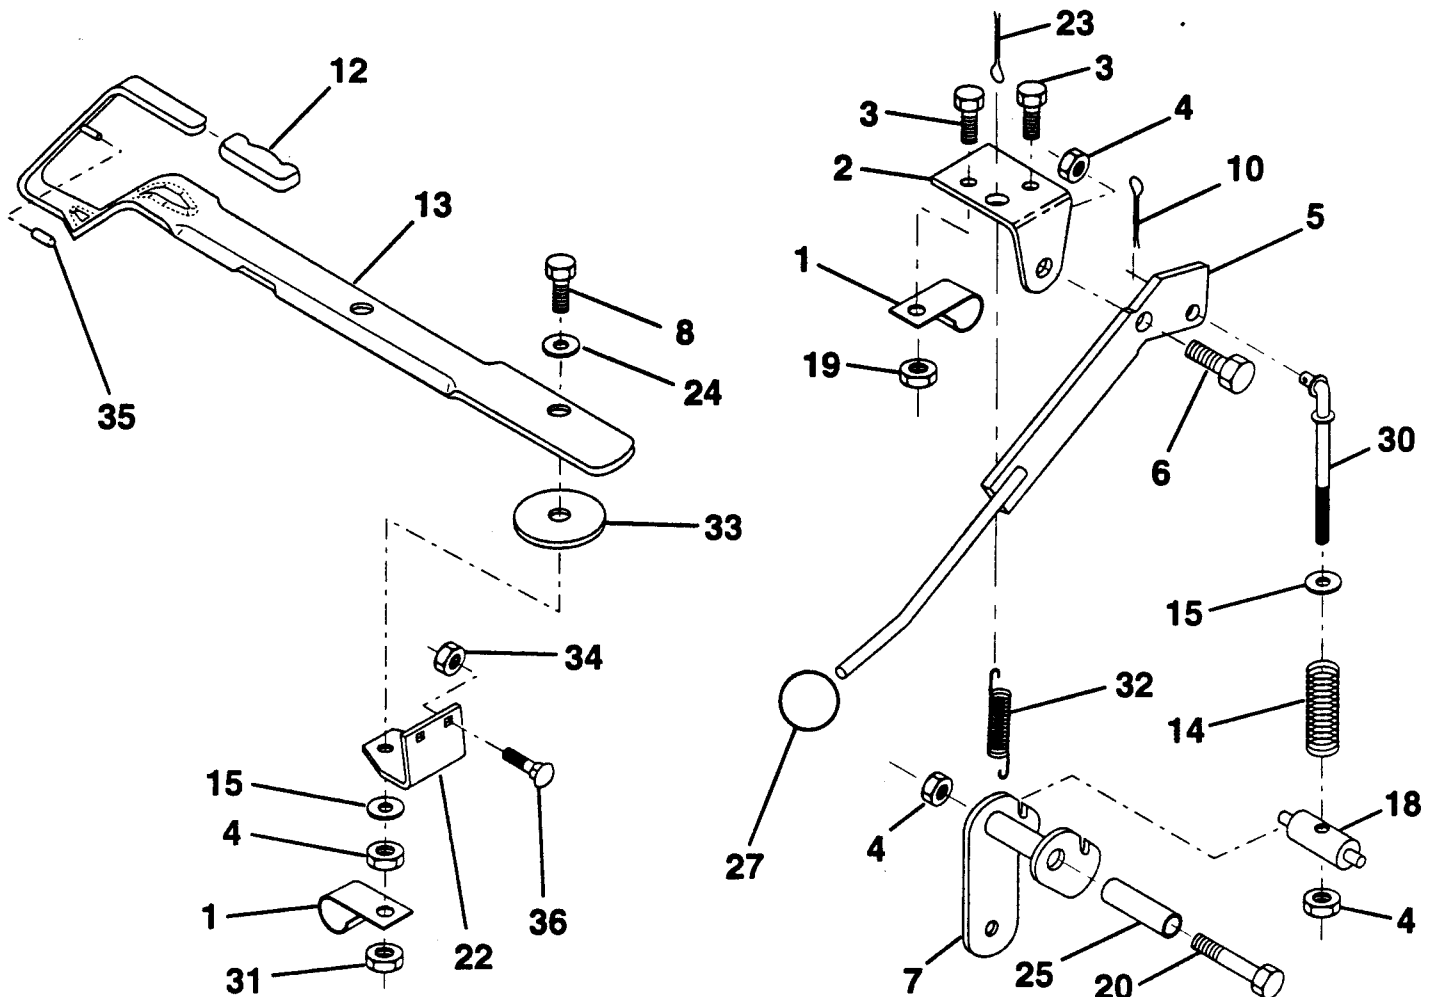

KEY NO.	PART NO.	DESCRIPTION
---------	----------	-------------

1	532126470	Clip, Insulated
2	532122018	Bracket, Mower Clutch
3	874780408	Bolt, Hex Head, Fin. 1/4-20 UNC x 1/2 Grade 5
4	873800600	Nut, Crownlock 3/8-16 UNC
5	532132552	Assembly, Clutch Lever
6	532106451	Bolt, Shoulder
7	532141435	Assembly, Mower Clutch Arm
8	874930624	Bolt, Hex Head 3/8-16 UNC x 1-1/2
10	876020412	Pin, Cotter 1/8 x 3/4
12	532122027	Handle, Lift Lever
13	532136658	Assembly, Lift Handle
14	532133939	Spring, Compression
15	819131616	Washer 13/32 x 1 x 11 Gauge
18	532135107	Trunnion, Threaded 3/8-16
19	873680400	Nut, Crownlock 1/4-20

KEY NO.	PART NO.	DESCRIPTION
---------	----------	-------------

20	874760644	Bolt, Hex Head, Fin. 3/8-16 UNC x 2-3/4
22	532132561	Bracket, Lift Lever
23	876020312	Pin, Cotter 3/32 x 3/4
24	532007672	Washer 25/64 x 1-1/4 x 12 Gauge
25	532121933	Tube, Spacer
27	532121466	Knob
30	532135039	Rod, Tension, Clutch
31	873930600	Nut, Centerlock
32	532133435	Spring, Extension, Return
33	532062333	Washer .390 x 1.437 x .074
34	873800500	Nut, Crownlock 5/16-18
35	532133603	Cap, Vinyl, Red
36	872140506	Bolt, Carriage 5/16-18 x 3/4


**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

12 HP 38" LAWN TRACTOR-MODEL NO. LR12 (HC12R38A),  
PRODUCT NO. 954 00 07-62

## TRANSAXLE

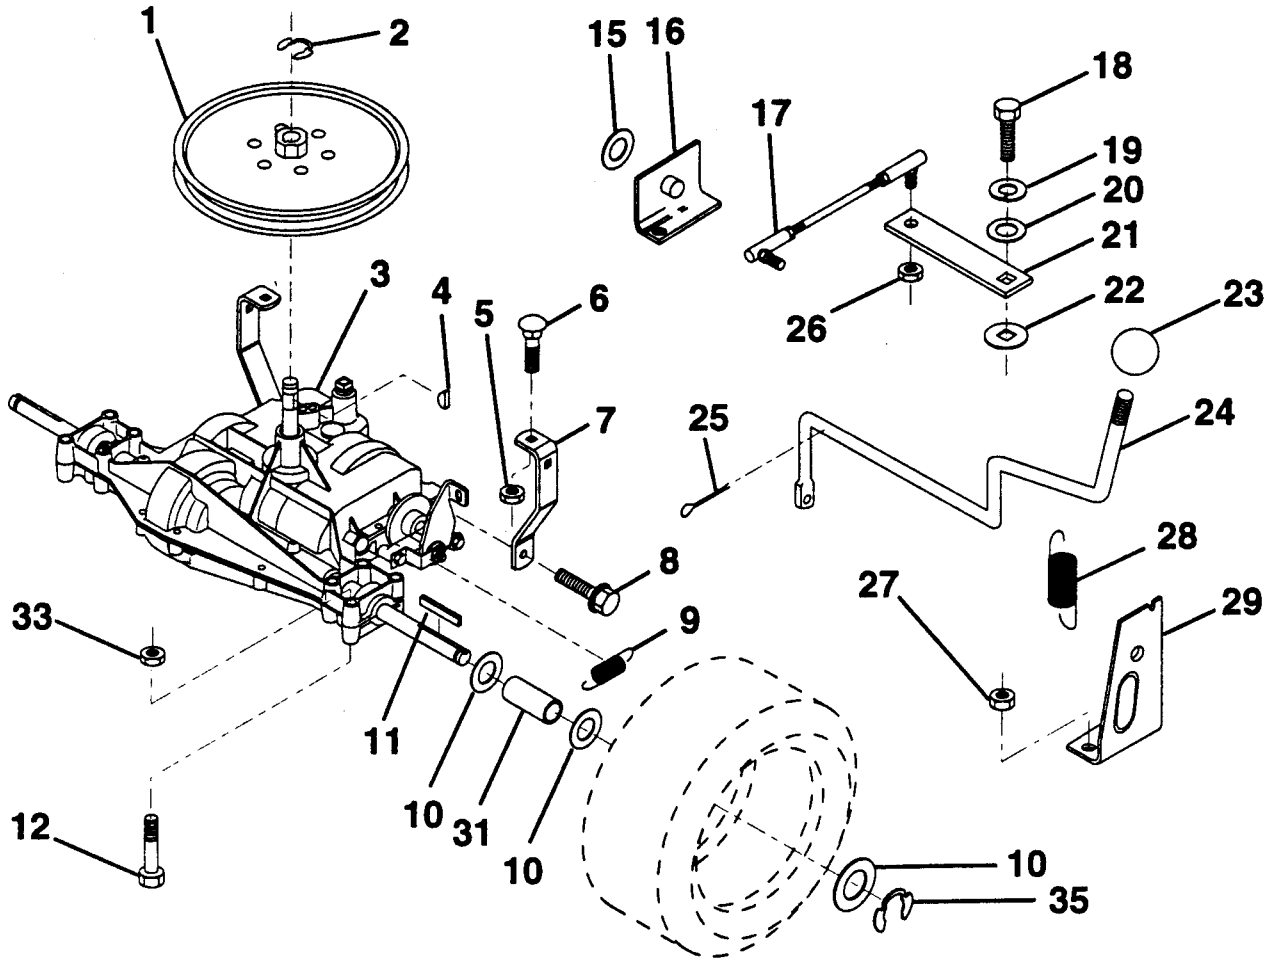

KEY NO.	PART NO.	DESCRIPTION
1	532123385	Pulley
2	812000028	Ring, Retainer
3	532142603	Transaxle, Dana Model No. 4360-79
4	532125096	Key, Woodruff #9
5	873800500	Nut, Crownlock 5/16-18
6	872140506	Bolt, Carriage 5/16-18 UNC x 3/4
7	532123378	Strap, Torque
8	817490512	Screw 5/16-18 x 3/4
9	532110422	Spring, Brake
10	532121749	Washer 25/32 x 1-1/4 x 16 Gauge
11	532123583	Key, Square
12	874760644	Bolt, Hex, Fin. 3/8-16 Unc x 2-3/4
15	819171616	Washer 17/32 x 1 x 16 Gauge
16	532124600	Support Handle Shift, LH
17	532123632	Link, Shift
18	871040412	Bolt, Hex, Fin. 1/4-28 UNF x 3/4 Grade 8

KEY NO.	PART NO.	DESCRIPTION
19	810040400	Washer, Lock 1/4
20	819091210	Washer 9/32 x 3/4 x 10 Gauge
21	532123539	Arm, Shift
22	532105701	Washer, Shift Plate
23	532121247	Knob, Duckhead
24	532128215	Rod Assembly, Shift
25	876020416	Pin, Cotter 1/8 x 1
26	873810500	Locknut 5/16-24 UNF
27	873510500	Nut, Hex, Keps 5/16-18
28	532128085	Extension, Spring
29	532128084	Support Handle Shift, RH
31	532109502	Spacer Split
33	873800600	Nut Crownlock 3/8-16 Unc
34	811050500	Washer, External Tooth 5/16
35	812000001	E-Ring

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm


HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

# REPAIR PARTS

12 HP 38" LAWN TRACTOR-MODEL NO. LR12 (HC12R38A),

PRODUCT NO. 954 00 07-62

## DECALS

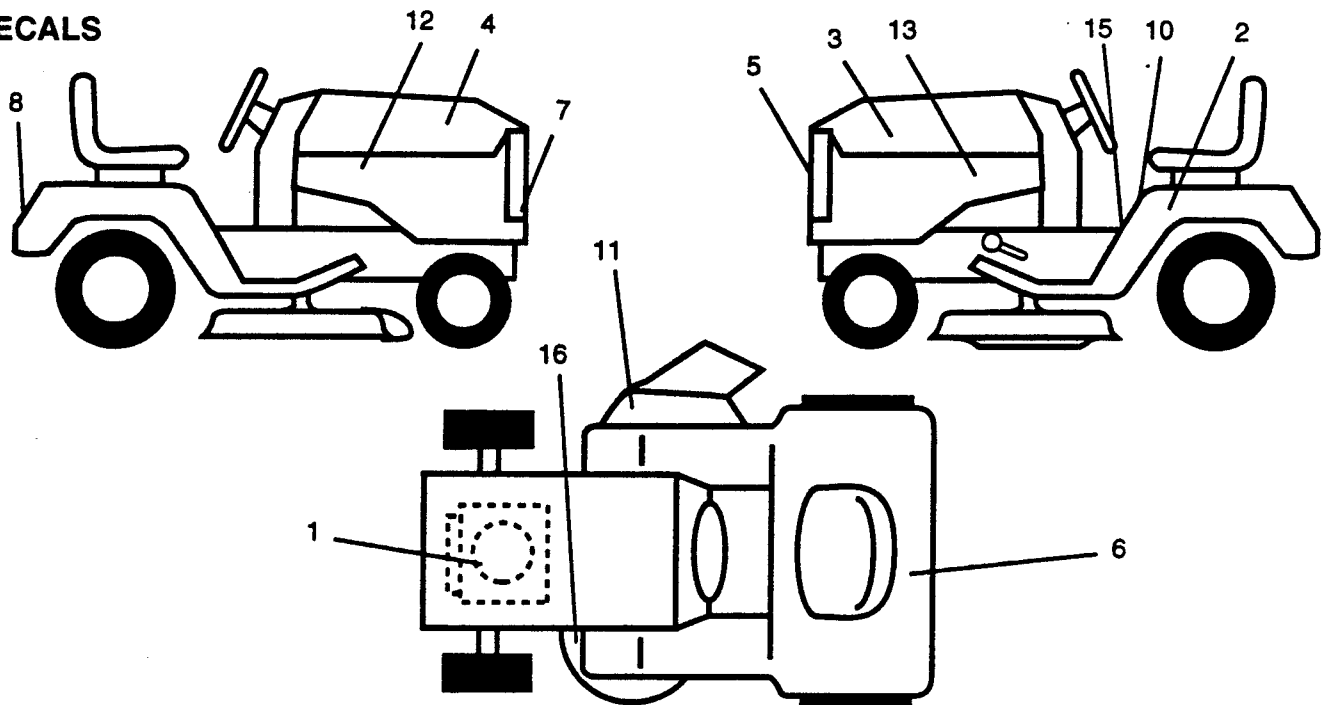


KEY NO.	PART NO.	DESCRIPTION
1	532120601	Decal, Engine, HP
2	532135073	Decal, Indicator
3	532140379	Decal, Hood, L.H.
4	532140378	Decal, Hood, R.H.
5	532140386	Decal, Logo, Grill
6	532121549	Decal, Caution Battery
7	532126860	Decal, Lightbox
8	532131582	Decal, Logo, Fender
10	532133795	Decal, Fender, Caution

KEY NO.	PART NO.	DESCRIPTION
11	532137259	Decal, Warning, Multi-Language
12	532140382	Decal, Hood, Insert, R.H.
13	532140383	Decal, Hood, Insert, L.H.
15	532138269	Decal, Instruction, Operating
16	532136830	Decal, V-Belt Schematic
--	532141409	Manual, Owner's(English)
--	532142319	Manual, Owner's(French)

Available accessories not included with tractor:  
 -- CER 38 Grass Catcher

## WHEELS & TIRES

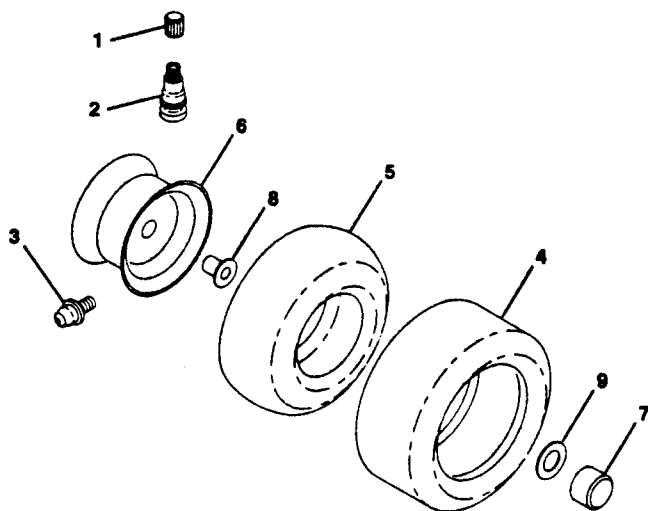


KEY NO.	PART NO.	DESCRIPTION
1	532059192	Cap, Valve Stem
2	532065139	Stem, Valve
3	532124957	Fitting, Grease (Front Wheels Only)
4	532137422	Tire, Front
5	532132703	Tire, Rear
5	532059904	Tube, Front Tire
	532008134	(Optional - Service Item Only) Tube, Rear Tire
6	532140298	Rim, Front
	532140453	Rim, Rear
7	532104757	Cap, Hub Axle
8	532124959	Bearing Flange
9	532121748	Washer 25/32 x 1-5/8 x 16 Gauge

NOTE: All component dimensions given in U.S. inches  
 1 inch = 25.4 mm

# REPAIR PARTS

12 HP 38" LAWN TRACTOR-MODEL NO. LR12 (HC12R38A),  
PRODUCT NO. 954 00 07-62

## ENGINE

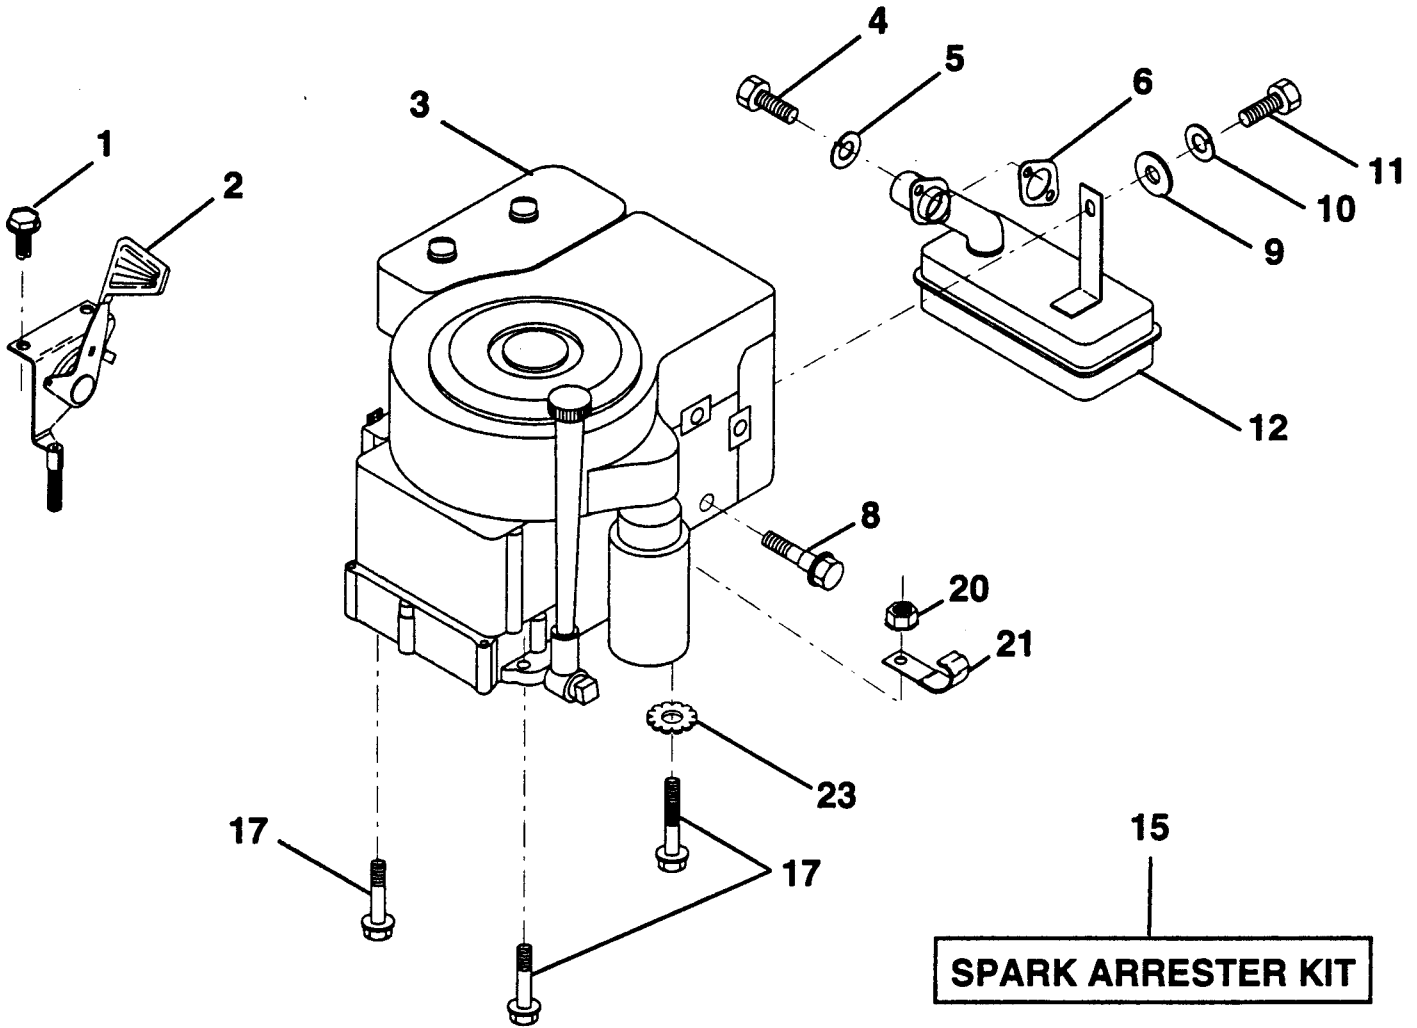



# REPAIR PARTS

## 12 HP 38" LAWN TRACTOR-MODEL NO. LR12 (HC12R38A), PRODUCT NO. 954 00 07-62

### ENGINE

KEY NO.	PART NO.	DESCRIPTION
1	817060408	Screw, Hex Head, Thread Cutting 1/4-20 x 1/2
2	532132752	Control, Throttle
3	---	Engine, Briggs & Stratton, 12 HP, Model #283707
4	871070512	Screw, Hex Cap Hd. 5/16-18 x 3/4
5	810040500	Washer, Lock, Heavy Helical Spring 5/16
6	532125593	Gasket, Exhaust
8	532121094	Bolt, Shoulder 5/16
9	819101216	Washer 5/16 x 3/4 x 16 Gauge
10	810040400	Washer, Lock, Heavy Helical Spring 1/4
11	-----	Bolt, Hex, Fin. (Order from Engine Manufacturer)
12	532137437	Muffler
15	532137180	Arrester, Spark (Optional Equipment)
17	817490624	Screw, Hex Washer Head, Thd., Roll. 3/8-16 x 1-1/2
20	873510600	Nut, Hex, Keps 3/8-16
21	532124996	Clip, Fuel Line
23	811050600	Washer, Lock Ext. Tooth 3/8


**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

12 HP 38" LAWN TRACTOR-MODEL NO. LR12 (HC12R38A),  
PRODUCT NO. 954 00 07-62

## MOWER DECK

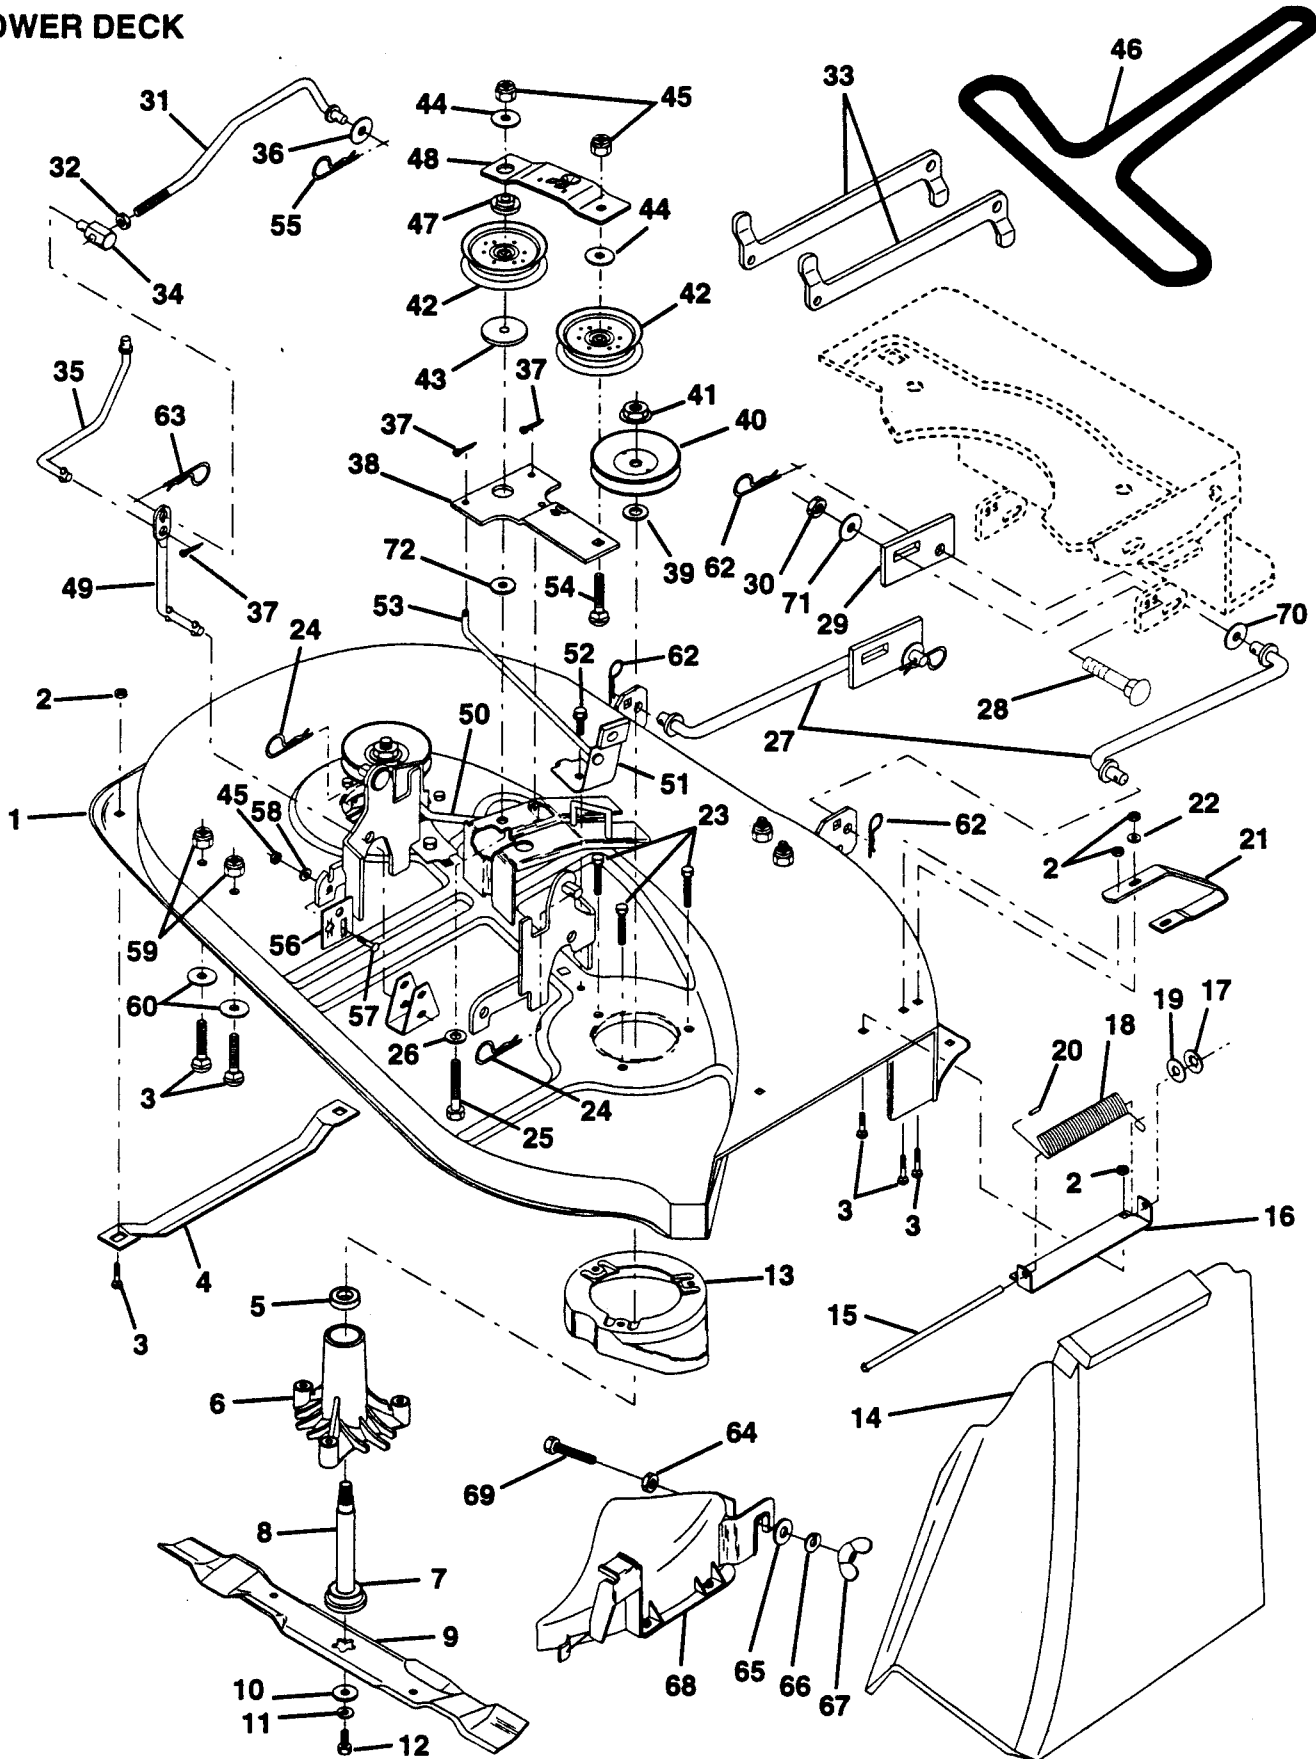

# REPAIR PARTS

## 12 HP 38" LAWN TRACTOR-MODEL NO. LR12 (HC12R38A), PRODUCT NO. 954 00 07-62

### MOWER DECK

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532142830	Mower Deck Assembly	40	532129206	Pulley, Mandrel
2	873800500	Nut, Lock Hx w/Ins 5/16-18	41	532137266	Nut, Flangelock 9/16
3	872140506	Bolt, Carriage 5/16-18 x 3/4	42	532121316	Pulley, Flat Idler
4	532125074	Runner, L.H.	43	532122052	Spacer, Retainer
5	532110485	Bearing	44	819131612	Washer 13/32 x 1 x 12 Gauge
6	532128774	Housing, Mandrel	45	873800600	Nut, Lock Hex w/Wsh 3/8-16
7	532129895	Bearing	46	532126520	Belt
8	532137645	Shaft and Bearing Assembly, Mandrel (Includes Key Number 7)	47	532133502	Spacer, Idler Arm
9	532134148	Blade	48	532133503	Stiffener, Idler Arm
10	532140296	Washer, Hardened	49	532133551	Rod, Pivot
11	810030600	Washer, Lock 3/8	50	532131289	Rod, Brake, L.H.
12	532850857	Bolt, Hex 3/8-24 x 1-1/4 Grade 8	51	532130840	Brake Assembly
13	532140329	Stripper, Mower, Vented	52	817490512	Screw, Hex Washer Head, Thd., Roll. 5/16-18 x 3/4
14	532106736	Shield, Deflector	53	532131288	Rod, Brake, R.H.
15	532106735	Rod, Hinge	54	872110614	Bolt, Carriage 3/8-16 x 1-3/4 Grade 5
16	532137607	Bracket Assembly, Deflector	55	532124961	Spring, Retainer
17	532110452	Pushnut	56	532136782	Adjustment Plate, Rear Link, L.H.
18	532123713	Spring, Deflector	57	872140608	Bolt, Carriage 3/8-16 x 1
19	819111016	Washer 11/32 x 5/8 x 16 Gauge	58	819131212	Washer 13/32 x 3/4 x 12 Gauge
20	532105304	Cap, Sleeve	59	873800500	Locknut, Hex, with Washer Insert 5/16-18
21	532128772	Runner, R.H.	60	819111112	Washer 11/32 x 11/16 x 12 Gauge
22	819111216	Washer 11/32 x 3/4 x 16 Gauge	62	532124660	Retainer Spring
23	817580520	Bolt 5/16-18 x 1.25	63	532124788	Retainer Spring
24	532124670	Retainer, Spring	64	873930600	Nut, Centerlock 3/8 - 16
25	874600636	Bolt, Hex 3/8-16 x 2-1/4	65	819132016	Washer 13/32 x 1-1/4 x 16 Ga.
26	819131612	Washer 13/32 x 1 x 12 Gauge	66	810040600	Washer Lock 3/8
27	532139756	Link Assembly, Front	67	532135651	Nut Wing
28	872140608	Bolt RDHD SQNK 3/8 - 16 x 1	68	532132803	Cover Asm Mulching
29	532139757	Plate Slide Link	69	874930620	Bolt 3/8 - 16 x 1-1/4
30	873800600	Nut, Lock Hex w/washer 3/8 - 16	70	819162016	Washer 1/2 x 1-1/4 x 16 Ga.
31	532140915	Clutch Rod, Primary	71	819131610	Washer Flat 13/32 x 1 x 10 Ga.
32	873350600	Nut, Hex, Jam 3/8-16	72	532133943	Washer Hardened
33	532132559	Arm, Suspension, Rear	--	532130794	Mandrel Assembly (Includes Key Numbers 5-8, 10-12, 39 and 41)
34	532133604	Trunnion 3/8-16	--	532142836	Mower Deck, Complete (Std. Deck Order Mulcher Plate Components Separately Key Nos. 64-69)
35	532132554	Clutch Rod, Secondary			
36	819131316	Washer 13/32 x 13/16 x 16 Gauge			
37	876020312	Pin, Cotter 3/32 x 3/4			
38	532133840	Idler Arm			
39	532129963	Washer .150 Thick			

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm


**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

12 HP 38" LAWN TRACTOR-MODEL NO. LR12 (HC12R38A),

PRODUCT NO. 954 00 07-62

TRANSAXLE DANA, MODEL NO. 4360-79

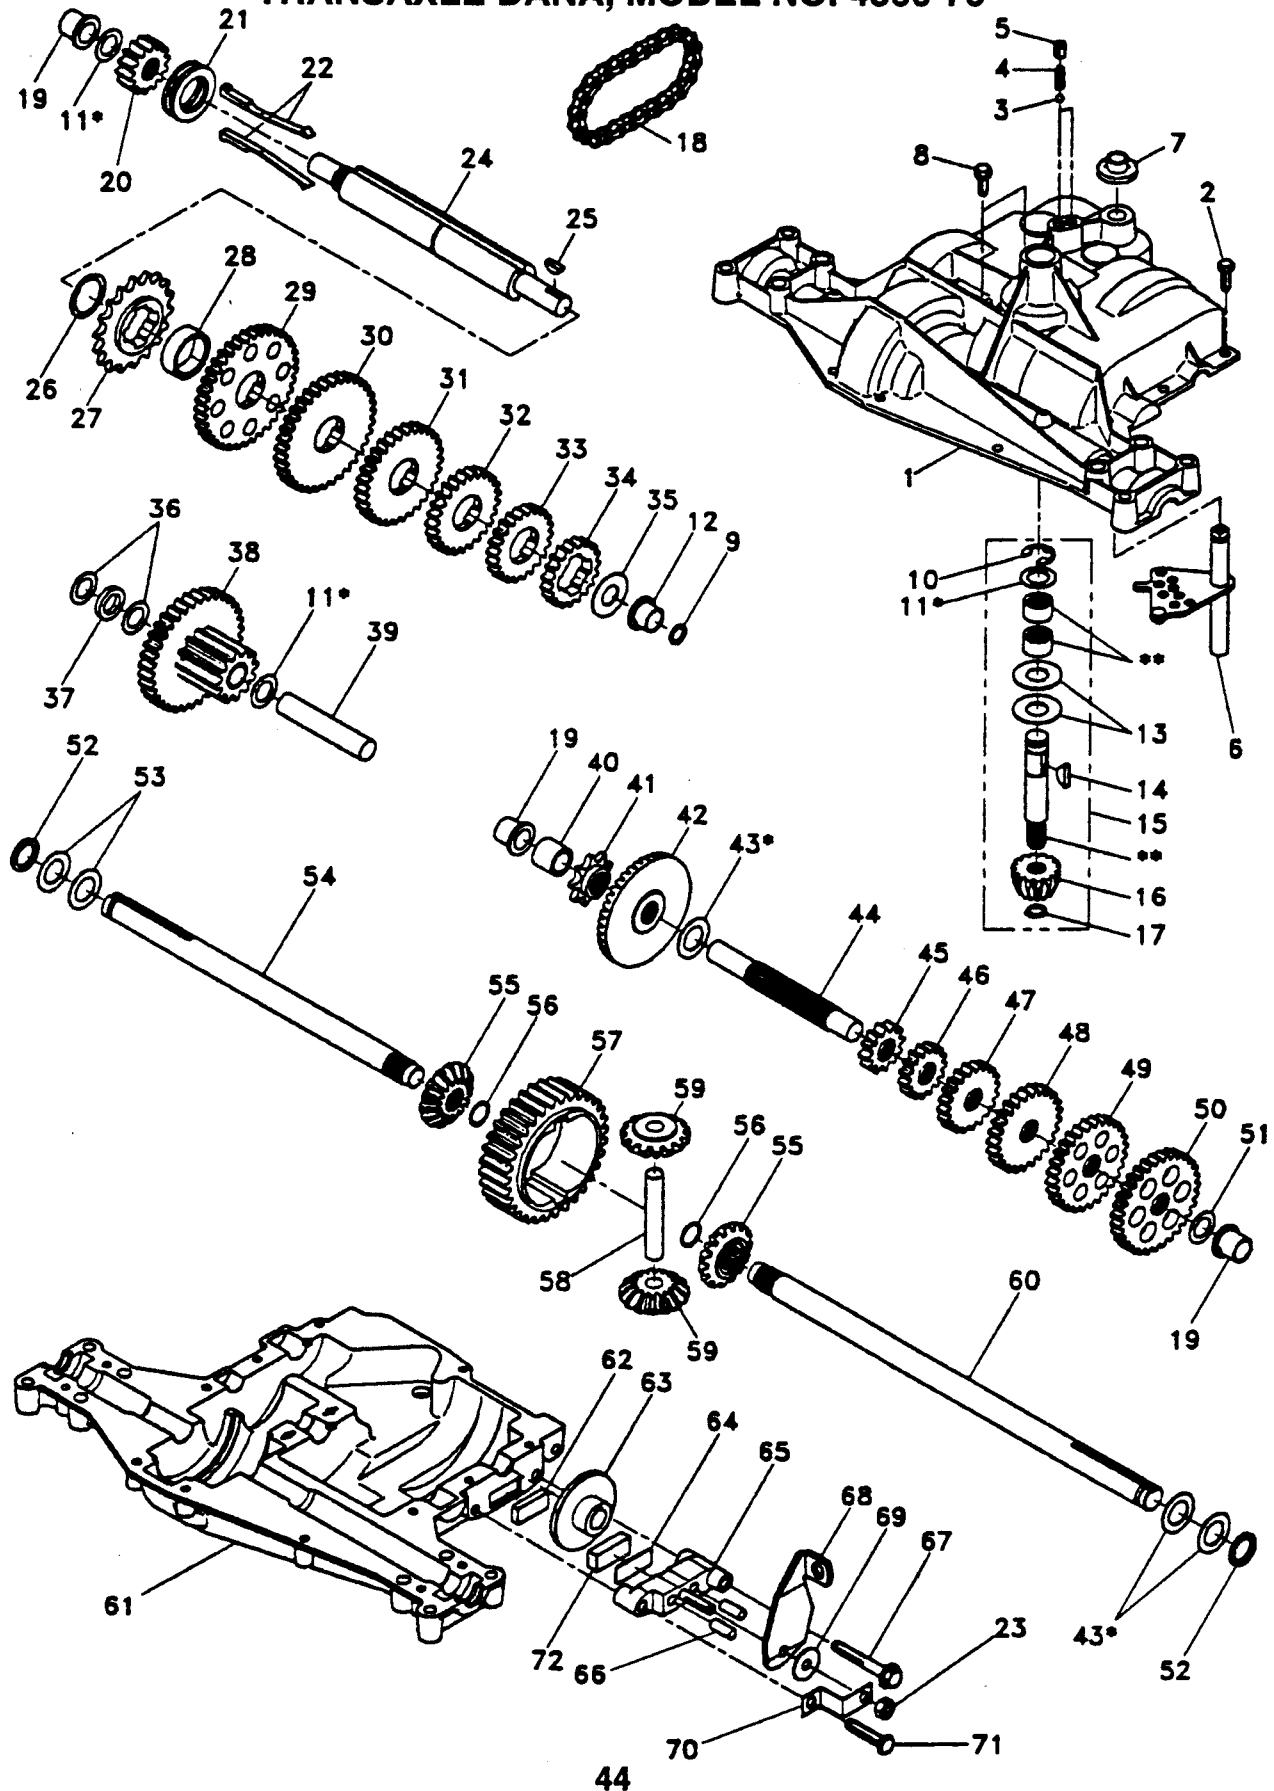

# REPAIR PARTS

12 HP 38" LAWN TRACTOR-MODEL NO. LR12 (HC12R38A),

PRODUCT NO. 954 00 07-62

TRANSAXLE DANA, MODEL NO. 4360-79

KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1 532142671	Housing, Upper	41 532105928	Sprocket, 9 Teeth
2 532002274	Screw, Self-Tapping, Large 1/4-20 x .734	42 532110084	Gear, Bevel, 42 Teeth
3 532134400	Ball, Detent	43 532134394	* Assembly, Kit, Shim .750 Shaft
4 532105904	Spring, Detent	44 532120473	Shaft, Drive
5 532105905	Screw, Set	45 532142678	Gear, Spur, 12 Teeth
6 532138235	Kit, Shifter Assembly	46 532142679	Gear, Spur, 15 Teeth
7 532134399	Boot, Shifter	47 532120407	Gear, Spur, 20 Teeth
8 532134791	Screw, Self-Tapping, with Sealer	48 532106589	Gear, Spur, 25 Teeth
9 532138241	Square Ring	49 532120408	Gear, Spur, 28 Teeth
10 532142672	Ring, Retaining	50 532105937	Gear, Spur, 31 Teeth
11 532134793	* Assembly, Kit, Shim .625 Shaft	51 532002226	Washer, Plain .632 x 1.00 x .060
12 532142673	Bearing, Flange	52 532134401	Washer, Neoprene
13 532120415	Washer, Plain .632 x 1.38 x .046	53 532002264	Washer, Plain .758 x 1.25 x .031
14 532142674	Key, Woodruff, #9	54 532120474	Axle, L.H.
15 532138234	Assembly, Kit, Input Shaft	55 532110081	Gear, Miter, 15 Teeth
16 532110078	Pinion, Bevel, 14 Teeth	56 532105941	Ring, Retaining
17 532105909	Ring, Retaining	57 532110071	Gear, Spur, 32 Teeth
18 532105910	Chain, 24 Pitches	58 532120952	Shaft, Cross
19 532105911	Bearing, Flange	59 532110082	Gear, Miter, 15 Teeth
20 532142675	Gear, Spur, 14 Teeth	60 532123908	Axle, R.H.
21 532138246	Collar, Clutch	61 532142680	Housing, Lower
22 532138236	Assembly, Kit, Clutch Keys	62 532120961	Puck, Friction
23 873810500	Locknut 5/16-24	63 532007294	Disc, Brake
24 532142676	Shaft, Intermediate	64 532108989	Spacer
25 532002244	Key, Woodruff, #61	65 532120953	Jaw, Brake
26 532105916	Ring, Retaining	66 532120954	Pin, Dowel
27 532120470	Sprocket, 18 Teeth	67 532134799	Screw, Self-Tapping, Large 5/16-18 x 2.25
28 532110070	Spacer	68 532138244	Lever, Actuating
29 532142677	Gear, Spur, 37 Teeth	69 532108996	Washer, Plain .321 x 1.00 x .055
30 532142681	Gear, Spur, 35 Teeth	70 532120956	Bracket, Anti-Rotation
31 532120405	Gear, Spur, 30 Teeth	71 532106596	Screw, Self-Tapping, Large 5/16-18 x 1.44
32 532108980	Gear, Spur, 25 Teeth	72 532120951	Puck, Friction
33 532120406	Gear, Spur, 22 Teeth	73 532120416	Grease
34 532134796	Gear, Spur, 19 Teeth		
35 532105925	Washer, Plain .640 x 1.37 x .061		
36 532002232	Washer, Plain .632 x 1.00 x .026		
37 532108978	Spacer .630 x 1.00 x .169		
38 532110079	Assembly, Gear, Combination of 12 Teeth and 35 Teeth		
39 532124639	Shaft, Idler		
40 532120472	Spacer .635 x .875 x .755		

\* Use in combinations to maintain proper clearances

\*\* Order Key No. 15

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm